

[Manuals.plus](#) /

> [iScooter](#) /

> iScooter iK1 Kids Electric Scooter Instruction Manual

iScooter iK1

iScooter iK1 Kids Electric Scooter Instruction Manual

Model: iK1 / iK1S-6/9MPH

INTRODUCTION

Thank you for choosing the iScooter iK1 Kids Electric Scooter. This manual provides essential information for the safe assembly, operation, and maintenance of your scooter. Please read it thoroughly before first use and retain it for future reference. Ensure all users understand the instructions and safety warnings.



3.0-4.3 Miles
Range



33 Minutes
Of Continuous Fun



100W
More Powerful Motor



Image: Two children enjoying their iScooter iK1 scooters, illustrating the product's range, battery life, and motor power.

SAFETY INFORMATION

Your safety is paramount. Always follow these guidelines:

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Supervise children during use. This scooter is designed for children aged 6-10 years, weighing up to 110 lbs.
- Do not ride in traffic, on wet surfaces, or near stairs.
- Ensure the scooter is fully charged before each ride.
- The scooter features a non-zero-start mechanism for safer pushing-off.
- An automatic standby mode activates after 5 minutes of inactivity to conserve energy.
- A red indicator light flashes to alert you when the battery is low.



Image: Children riding the iScooter iK1, illustrating recommended rider height, maximum load, and age range for safe use.

SETUP AND ASSEMBLY

The iScooter iK1 requires minimal assembly. Only the handlebar and stem need to be attached.

1. Carefully remove all components from the packaging.
2. Insert the handlebar stem into the main body of the scooter.
3. Align the handlebar with the front wheel and secure it using the provided tool kit. Ensure all screws are tightened firmly.
4. Check all connections and moving parts before the first ride.



Image: A detailed view of the magnetic energy-replenishment charging port on the iScooter iK1.

OPERATING INSTRUCTIONS

Power On/Off and Speed Control

- **Power On/Off:** Long press the power button to turn the scooter on or off.
- **Speed Modes:** With the scooter powered on, press the power button once to switch between the two speed settings: 6 MPH and 9 MPH.



Image: Instructions for using the power button to turn the scooter on/off, switch speeds, and identify low battery warnings.

2 Speed Modes

Enjoy Different Riding Fun



Image: Illustration of the two available speed modes, 6 MPH and 9 MPH, for varied riding experiences.

Adjustable Height

The iK1 scooter features 3-level height adjustment to accommodate growing children:

- Adjustable heights: 32 inches, 34.5 inches, and 37 inches.
- To adjust, locate the quick-release clamp on the stem, open it, adjust the handlebar to the desired height, and securely close the clamp. Ensure the handlebar is locked in place before riding.

3 Adjustable Heights

Accompanying Children's Growth



Image: Demonstrates the three adjustable handlebar heights of the iScooter iK1, accommodating different child sizes.

Lights

The scooter is equipped with:

- 7-color rim lights on the front wheel.
- Side-board ambient lighting on the deck.

These lights enhance visibility and add to the riding experience, especially at night.

Colored Ambient Light

Make every ride fun and safe



Image: The iScooter iK1 illuminated with its colorful rim lights and side-board ambient lighting, enhancing safety and fun.

Braking

The iK1 scooter utilizes a rear braking system. To slow down or stop, apply pressure to the rear fender brake with your foot.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your iScooter iK1.

- **Cleaning:** Wipe the scooter with a damp cloth after use. Avoid using harsh chemicals or excessive water.
- **Battery Care:** Charge the scooter fully after each use. Do not store the scooter with a completely depleted battery for extended periods.
- **Tire Inspection:** Regularly check the rubber wheels for wear and tear.
- **Fasteners:** Periodically check all screws and bolts to ensure they are tight. Tighten any loose fasteners.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your iScooter iK1, refer to the following common solutions:

- **Scooter not turning on:** Ensure the battery is charged. Long press the power button firmly.
- **Low battery indicator:** A red flashing light indicates low battery. Charge the scooter immediately.
- **Scooter not moving:** Ensure the scooter is powered on and you are using the non-zero-start method (pushing off with your foot first).
- **Lights not working:** Check if the scooter is powered on. If issues persist, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	iScooter
Model Name	IK1
Age Range (Recommended)	Kids (6-10 years)
Weight Limit	110 Pounds
Number of Wheels	2
Wheel Material	Rubber
Wheel Size	5.5 Inches
Wheel Type	Solid
Brake Style	Rear Braking
Adjustable Handlebar Height	32"/34.5"/37"
Speed Settings	6 MPH / 9 MPH
Motor Power	100W
Range	3.0-4.3 Miles
Continuous Fun Time	33 Minutes
Special Features	Magnetic Energy-Replenishment, Smart Safety Management, Colorful Flashing Wheels & Deck Lights

WARRANTY INFORMATION

The iScooter iK1 comes with a warranty covering different parts:

- A 360-day warranty on certain parts.
- A 180-day warranty on other specific parts.

Please refer to the warranty card included in your package for detailed terms and conditions, or visit the

official iScooter website for more information.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact iScooter customer support:

- Visit the official iScooter website: [iScooter Store on Amazon](#)
- Refer to the contact information provided on the brand card included with your product.