

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Super Mario Kids Interactive Smartwatch with Camera - Instruction Manual

Accutime GSM4172AZ

Accutime Super Mario Kids Interactive Smartwatch (Model GSM4172AZ) - Instruction Manual

Your guide to setting up, operating, and maintaining your Super Mario Smartwatch.

[Setup](#)

[Operation](#)

[Features](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

INTRODUCTION

This manual provides essential information for the safe and effective use of your Accutime Super Mario Kids Interactive Smartwatch. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Front view of the Super Mario Kids Interactive Smartwatch.

The Super Mario Kids Interactive Smartwatch is designed to be a fun and practical accessory for children. It features a vibrant Super Mario theme across its design and digital interface, offering various interactive tools and customizable options.

SETUP

1. Initial Charge

Before first use, fully charge the smartwatch. Connect the provided charging cable to the watch and a compatible USB power source. The charging indicator will show when the device is charging and when it is fully charged.

2. Power On/Off

- To power on: Press and hold the power button (usually located on the side of the watch) until the screen illuminates.
- To power off: Press and hold the power button until a power-off option appears on the screen, then confirm.

3. Setting Time and Date

Access the settings menu on the smartwatch. Navigate to the "Time" or "Date & Time" section. Adjust the hour, minute, day, month, and year as needed using the on-screen controls or designated buttons.



Figure 2: Side view of the smartwatch, highlighting button locations.

OPERATION

Navigating the Menu

The smartwatch features an icon-based menu system for easy navigation. Swipe left or right on the touchscreen to browse through different applications and settings. Tap an icon to select an option.

Customizing Watch Faces and Wallpapers

The watch includes 10 digital clock/watch faces and 3 built-in wallpapers inspired by Super Mario characters. To change: Go to the "Display" or "Themes" section in the settings menu and select your preferred design.



Figure 3: Examples of customizable Super Mario watch faces.

Using Built-in Tools

- **Camera:** Tap the camera icon to open. Tap again to take photos or switch to video mode.
- **Video Mode:** Select the video icon within the camera app to record short videos.
- **Voice Recorder:** Open the voice recorder app to record audio. Tap to start/stop recording.
- **Calculator:** Access the calculator for basic arithmetic functions.
- **Alarm:** Set multiple alarms with customizable times and sounds.
- **Timer & Stopwatch:** Use these tools for timing activities or events.
- **Calendar:** View the current date and navigate through months.
- **Flashlight:** Activate the flashlight feature for illumination.

MAINTENANCE

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid harsh chemicals or abrasive materials, as these can damage the screen or casing.

Storage

When not in use for extended periods, store the smartwatch in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully charged before long-term storage.

Battery Care

To prolong battery life, avoid completely draining the battery frequently. Charge the watch when the battery level is low. Use only the manufacturer-recommended charging accessories.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Low battery.	Charge the watch for at least 30 minutes.
Screen is unresponsive.	Software glitch or temporary freeze.	Perform a soft reset by holding the power button for 10-15 seconds until the watch restarts.
Time/Date is incorrect.	Settings need adjustment.	Go to the "Time" or "Date & Time" settings and manually adjust.
Cannot record video/take photos.	Insufficient storage space.	Delete old photos/videos to free up space.

SPECIFICATIONS

- **Model Number:** GSM4172AZ
- **Brand:** Accutime
- **Display:** Digital
- **Watch Movement Type:** Quartz
- **Case Material:** Plastic
- **Band Material:** Silicone
- **Band Color:** Red
- **Case Diameter:** 42.5 Millimeters
- **Band Width:** 0.5 Inches
- **Case Thickness:** 0.25 Inches
- **Power Source:** Battery Powered
- **Additional Features:** Alarm, Calculator, Calendar, Camera, Stop Watch, Timer, Video Recording, Voice Recorder
- **Adjustable Band Fit:** 5.5" to 8" wrists
- **UPC:** 030506659617



Figure 4: The smartwatch designed for comfortable daily wear on a child's wrist.

WARRANTY & SUPPORT

Limited Warranty

This Accutime Super Mario Kids Interactive Smartwatch comes with a limited warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in the product packaging or contact Accutime customer support directly.

Customer Support

For any questions, technical assistance, or support needs not covered in this manual, please contact Accutime customer service. Contact information can typically be found on the product packaging or the official Accutime website.

