

[Manuals.plus](#) /

› [Meskos](#) /

› Meskos H7 Cordless Vacuum Cleaner Instruction Manual

Meskos H7

Meskos H7 Cordless Vacuum Cleaner Instruction Manual

Model: H7

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual thoroughly before operating the Meskos H7 Cordless Vacuum Cleaner. Keep this manual for future reference.

- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up liquids, hot ashes, burning or smoking objects (e.g., cigarettes, matches, hot coals), or sharp objects (e.g., glass, nails).
- Ensure the power adapter is compatible with your local power supply. Use only the original power adapter provided.
- Do not handle the plug or vacuum cleaner with wet hands.
- Turn off the vacuum cleaner and disconnect the power adapter before performing any maintenance or cleaning.
- Regularly check the brush roll for any tangled hair or debris to prevent damage and maintain performance.
- Store the vacuum cleaner in a dry, indoor area.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Main Motor Unit
- Extension Wand
- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Dock
- Power Adapter
- User Manual (this document)

3. SETUP AND CHARGING

3.1 Assembly

1. Insert the extension wand into the main motor unit until it clicks securely into place.
2. Attach the motorized floor brush to the other end of the extension wand, ensuring it locks.
3. For handheld use, attach desired accessories (crevice tool or 2-in-1 brush) directly to the main motor unit.

3.2 Charging the Battery

The vacuum cleaner is equipped with a detachable battery pack. Fully charge the battery before first use.

- Mount the wall mount dock in a convenient location.
- Connect the power adapter to the wall mount dock and plug it into a power outlet.
- Place the vacuum cleaner onto the wall mount dock. The LED display will indicate charging status.
- A full charge provides up to 65 minutes of runtime in Eco mode.

One Charge, Full House Cleaning

65
Mins



Image: The LED display indicates battery life and runtime, showing up to 65 minutes in Eco mode.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the power button on the main motor unit to turn the vacuum cleaner on or off.

4.2 Adjusting Suction Modes

The HD color LED display allows you to select from three suction modes:

- **Eco Mode:** For light cleaning and extended runtime (up to 65 minutes).
- **Mid Mode:** For everyday cleaning (up to 45 minutes).
- **Max Mode:** For stubborn dirt and deep cleaning (up to 25 minutes), providing 45,000Pa suction power.

Tap the touch sensors on the LED display to cycle through the modes.

Intuitive HD Color Display

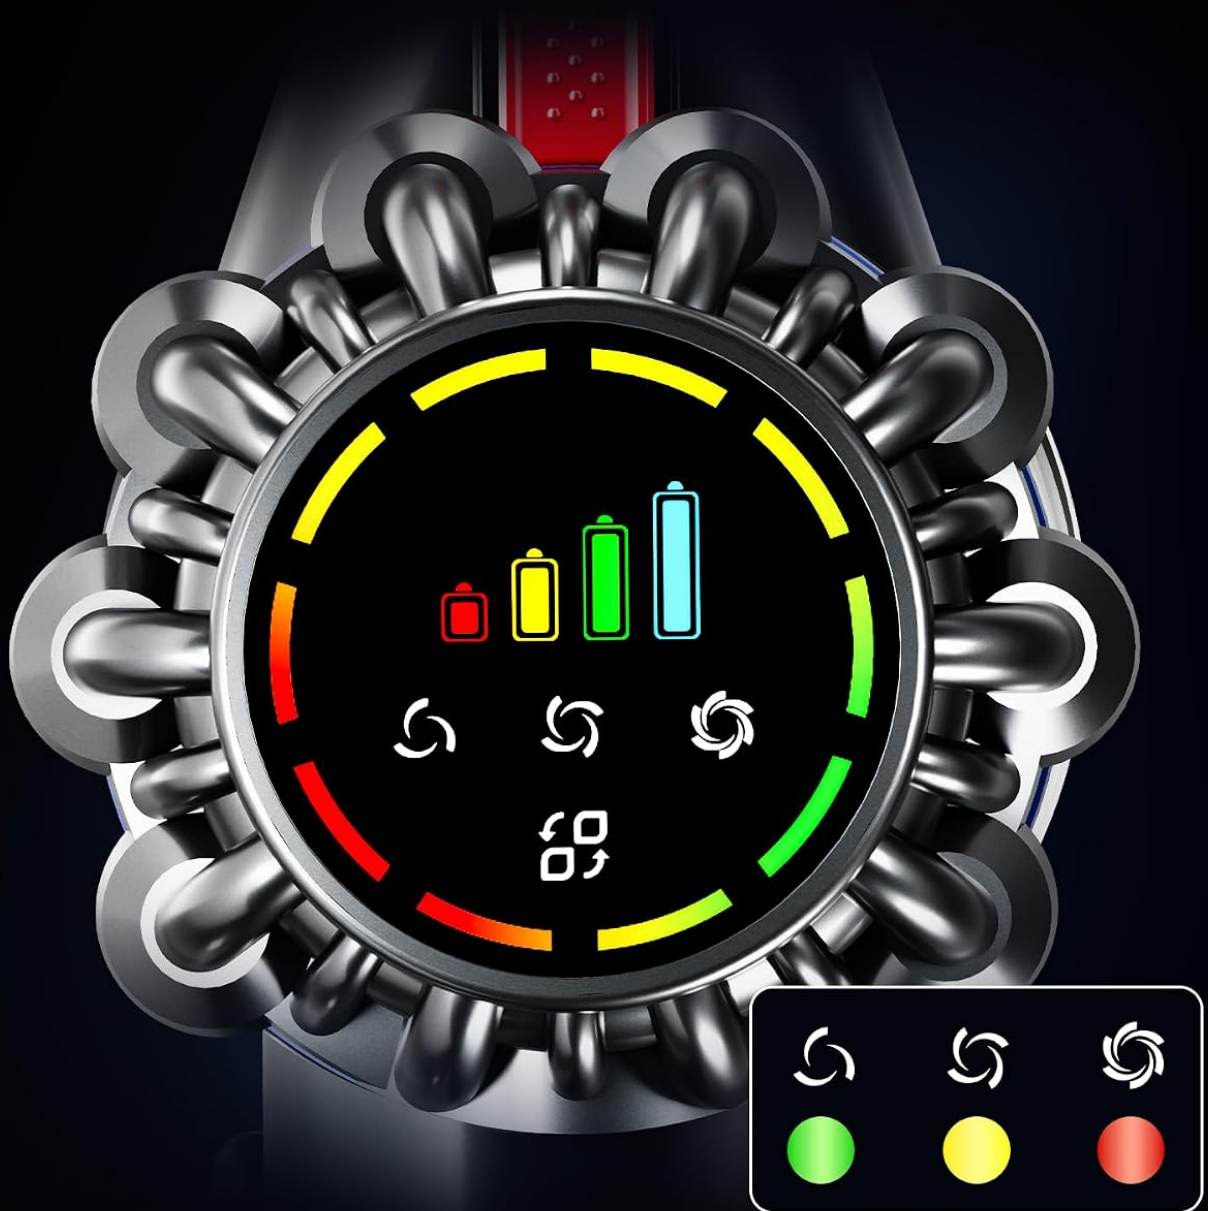


Image: The intuitive HD color LED display shows real-time information including suction level and battery status.



Image: The vacuum cleaner demonstrates its 45,000Pa suction power, effectively capturing debris.

4.3 Using Attachments

- **Motorized Floor Brush:** Ideal for carpets, hardwood floors, and tiles. Features a V-shaped anti-tangle roller brush and LED headlights to illuminate dark areas.
- **Crevice Tool:** Use for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Suitable for upholstery, curtains, car interiors, and delicate surfaces.

Anti-tangle V-Roller Brush

Soft And Stiffbristles Integrated Brush



Image: The V-shaped anti-tangle brush is designed to prevent hair from wrapping around the roller, reducing maintenance.



Multi-functional Vacuum Cleaner



Image: The multi-functional vacuum cleaner can be adapted with various accessories for diverse cleaning needs, from floors to upholstery.

4.4 Self-Standing Feature

The vacuum cleaner features a self-standing design, allowing it to stand upright independently. This is useful for temporary pauses during cleaning or for convenient storage.

Self-standing Design

Store it anywhere and use it anytime



Image: The self-standing design allows for easy storage and convenient pauses during cleaning.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Cup

The 1.6-liter dust cup should be emptied regularly, especially when the 'dustbin full' alert appears on the LED display.

1. Ensure the vacuum cleaner is turned off.
2. Position the dust cup over a trash bin.
3. Press the one-touch release button to open the dust cup bottom and empty its contents.

4. Close the dust cup lid securely.



Image: The 1.6-liter dust cup features a one-touch emptying system for hygienic disposal of debris.

5.2 Cleaning the Filters

The 8-stage HEPA filtration system requires periodic cleaning to maintain suction power and air quality.

1. Turn off the vacuum cleaner and remove the dust cup.
2. Twist and pull out the filter components from the dust cup.
3. Tap the filters gently to remove loose dust. If washable, rinse under cold running water until the water runs clear.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.

5. Reassemble the dry filters and reattach the dust cup to the main unit.

8-Stage Efficiency Filtration System

 $\geq 99.99\%$ Filtration

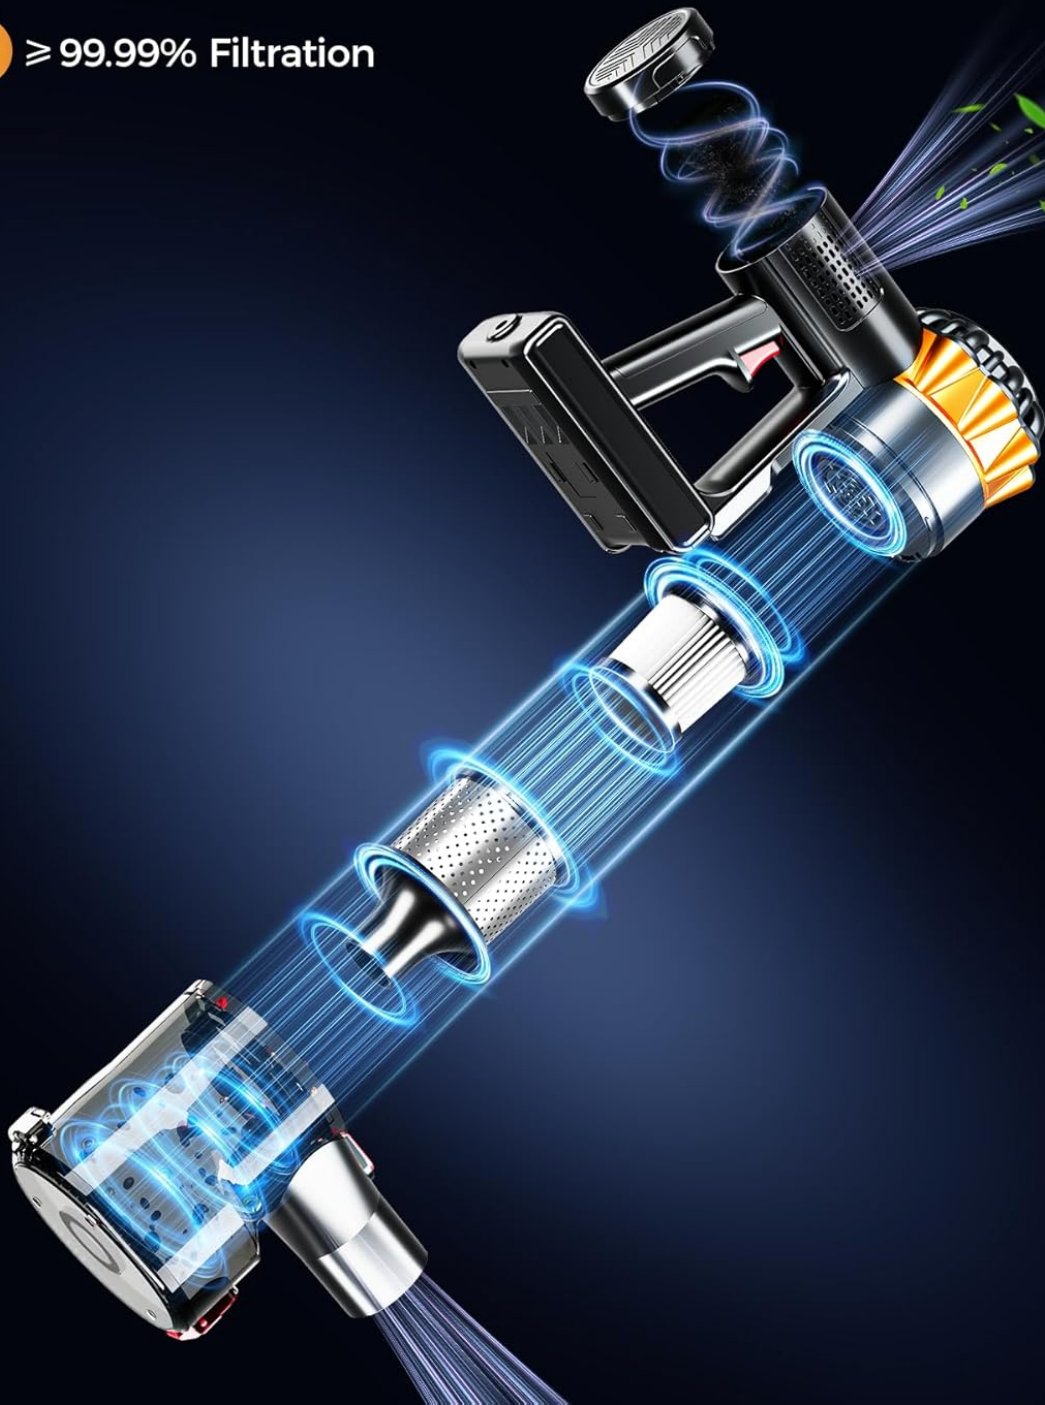


Image: An exploded view of the 8-stage efficiency filtration system, designed to capture fine particles.

5.3 Cleaning the Brush Roll

The anti-tangle brush roll should be inspected and cleaned regularly to remove tangled hair and debris.

1. Ensure the vacuum cleaner is turned off and disconnected from the power source.
2. Detach the motorized floor brush from the extension wand.
3. Locate the brush roll release mechanism (usually a latch or screw) and remove the brush roll.
4. Use scissors or a cleaning tool to carefully cut and remove any tangled hair or fibers from the brush roll.
5. Reinsert the clean brush roll and secure it in place.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or improperly installed.	Charge the battery fully. Ensure the battery pack is securely inserted into the main unit.
Low suction power	Dust cup is full, filters are clogged, or there is a blockage.	Empty the dust cup. Clean or replace the filters. Check the extension wand, floor brush, and main unit for blockages.
Brush roll not spinning	Hair or debris tangled in the brush roll, or an obstruction.	Turn off the vacuum. Remove the brush roll and clear any tangles or obstructions.
Unusual noise	Blockage in the air path or foreign object in the brush roll.	Turn off and inspect for blockages in the hose, brush roll, or dust cup area. Remove any foreign objects.

7. SPECIFICATIONS

Feature	Detail
Brand	Meskos
Model Name	H7
Special Feature	Cordless
Power Source	Battery Powered
Motor Power	550W
Suction Power	45,000Pa
Battery Life	Up to 65 minutes
Dust Cup Capacity	1.6 Liters
Filter Type	HEPA Filter (8-Stage Filtration)
Surface Recommendation	All floors (Carpet, Hard Floor)
Noise Level	62 Decibels
Number of Speeds	3 (Eco, Mid, Max)
Item Weight	8 ounces
Item Dimensions L x W x H	2"L x 3"W x 1"H
Voltage	25.2V

8. WARRANTY AND SUPPORT

Meskos provides a **3-year warranty** for the H7 Cordless Vacuum Cleaner, covering manufacturing defects and malfunctions under normal use.

For technical assistance, maintenance tips, or any inquiries, please contact our professional customer service team, available **24/7**.

Refer to the contact information provided on the product packaging or the official Meskos website for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GGGG139R>

More documents and user manuals: <https://manuals.plus/>