

[Manuals.plus](#) /

› [FMART](#) /

› FMART FM-009 Cordless Electric Floor Sweeper Instruction Manual

FMART FM-009

FMART FM-009 Cordless Electric Floor Sweeper User Manual

Model: FM-009

INTRODUCTION

Thank you for choosing the FMART FM-009 Cordless Electric Floor Sweeper. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of injury, electric shock, fire, or property damage, always follow basic safety precautions when using electrical appliances.

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle the charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Exercise extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliances.

PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking.

- FMART FM-009 Sweeper Unit
- Multi-segment Handle Rods
- Charging Adapter
- User Manual

SETUP

1. Handle Assembly

Connect the three segments of the handle rods using the provided connectors. Ensure each segment is pressed firmly into place. The grip section connects directly to the final rod segment.


Your browser does not support the video tag.

Video: How to Use the 009. This video demonstrates the assembly of the handle and basic operation of the FMART FM-009 sweeper.

2. Initial Charging

Before first use, fully charge the sweeper. Connect the charging adapter to the sweeper's charging port and plug it into a power outlet. The indicator light will show charging status. A full charge provides up to 50 minutes of continuous cleaning.

> 60MIN 1 WEEK

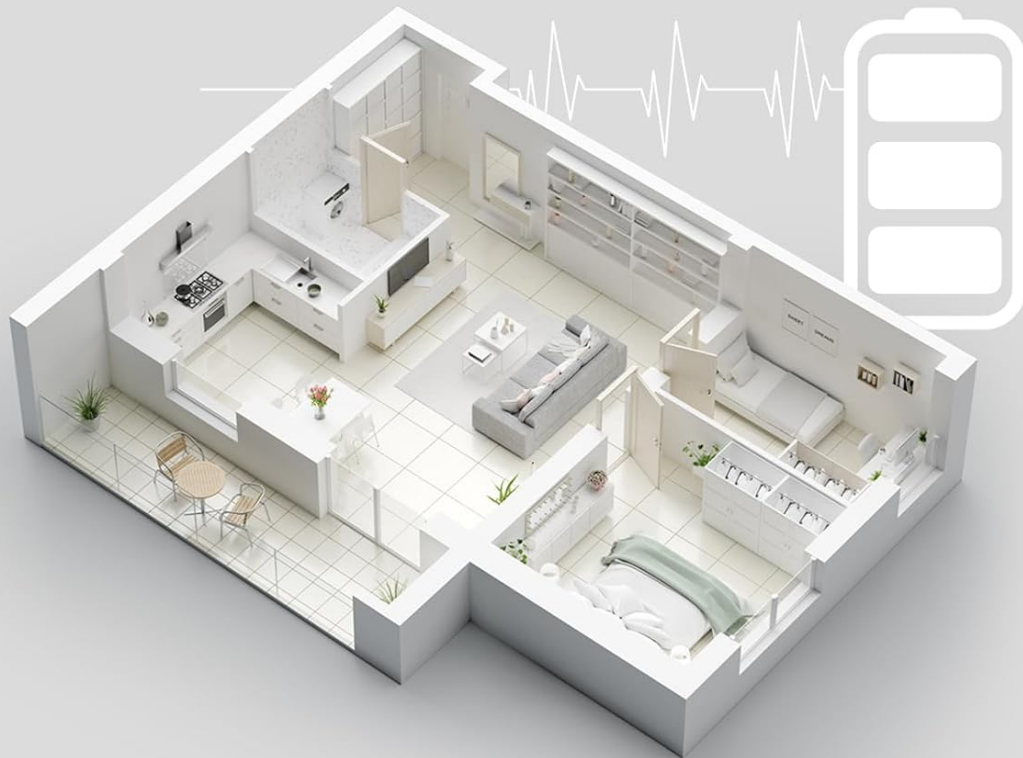

Cleans the Whole Home, Worry-Free Runtime

Image: Long-Lasting Battery. This image illustrates the extended battery life, capable of cleaning a whole home for over 60 minutes or a week on a single charge.

OPERATING INSTRUCTIONS

1. Starting the Sweeper

The FM-009 features a Smart Tilt Start mechanism. Simply tilt the handle to begin operation. No power button is required for activation.



Smart Tilt Start. Cordless Liberty.

No Bending | Effortless | Ergonomic Handle

Image: Smart Tilt Start. This image shows a user operating the sweeper with one hand, highlighting its cordless and ergonomic design.

2. Cleaning Different Surfaces

The sweeper is designed for effective cleaning on hard floors, corners, and low-pile carpets. Its high-speed roller and silicone scraper efficiently capture debris, hair, and dust.



PowerClean Pro High-Speed Roller + Silicone Scraper

Instantly captures dust, pet hair, and debris on hard floors and low-pile carpets.

Image: PowerClean Pro. This image illustrates the sweeper's ability to clean various debris on multiple floor types using its high-speed roller and silicone scraper.

3. Maneuvering and Edge Cleaning

The rotating base and nimble mini wheels allow for smooth turns and easy navigation around furniture. The 3.35-inch slim profile enables cleaning under low furniture. Bristles along the roller brush edge reach floor edges and gaps for thorough cleaning.



Master Every Corner

180° Flat-Lay & 360° Agile Swivel & Mini-Gliding Wheels
Extended Edge-Bristle

Image: Master Every Corner. This image demonstrates the sweeper's flat-lay capability for cleaning under furniture and its edge-bristle design for corner cleaning.

4. Quiet Operation

The FM-009 operates quietly, minimizing disturbance to household members or pets during use.



Quiet Operation

Image: Quiet Operation. This image illustrates the sweeper's low noise level, allowing for peaceful cleaning.

MAINTENANCE

1. Emptying the Dustbin

The dustbin is designed for quick removal and easy emptying. Simply detach it from the main unit and dispose of collected debris.



Quick to Empty, Easy to Wash

Dustbin Dimensions: 8.07 in (L) × 3.74 in (W) × 1.57 in (H)

Image: Quick to Empty, Easy to Wash. This image demonstrates the ease of removing and cleaning the dustbin and roller brush.

2. Cleaning the Roller Brush

The roller brush can be detached for cleaning without the need for tools.

1. Remove the dustbin.
2. Pull out the roller brush in the same manner as removing the dustbin.
3. Clean any tangled hair or debris from the roller brush.
4. Reinstall the roller brush: Align one end with the drive shaft and press it into place with the latch facing up.
5. Reinsert the dustbin.

Your browser does not support the video tag.

Video: Installing the Dustbin & Roller Brush (009). This video provides a visual guide on how to properly install and remove the dustbin and roller brush for the FMART FM-009.

3. Battery Care and Storage

To prolong battery life, avoid completely draining the battery before recharging. Store the sweeper in a cool, dry place when not in use. Do not store with a completely depleted battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Sweeper does not turn on.	Battery is depleted. Handle not tilted.	Charge the battery. Ensure the handle is tilted to activate the sweeper.
Sweeping performance is poor.	Dustbin is full. Roller brush is tangled or dirty.	Empty the dustbin. Clean the roller brush of hair and debris.
Sweeper stops unexpectedly.	Battery is low. Obstruction in roller brush.	Recharge the battery. Check and clear any obstructions from the roller brush.
Charging indicator not working.	Charger not properly connected. Faulty outlet.	Ensure charger is securely connected. Try a different power outlet.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** FM-009
- **Brand:** FMART
- **Special Features:** Cordless, Edge-to-Edge Cleaning, Folds Flat for Easy Reach, Auto-Start (Tilt), Pivoting, Slim Profile, Long Battery Life, Non-Vacuum High-Speed Kinetic Contact Cleaning
- **Dustbin Size:** 8.07 in (L) × 3.74 in (W) × 1.57 in (H)
- **Minimum Clearance Required:** 3.35 in (for slim profile cleaning)
- **Battery Life:** Up to 50 minutes continuous cleaning
- **Weight:** Approximately 2.4 lbs

WARRANTY & SUPPORT

The FMART FM-009 Cordless Electric Floor Sweeper includes a**365-day warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For any questions, technical assistance, or warranty claims, please refer to this user manual or contact us via email at the address provided on your product packaging or purchase documentation. Please have your model number (FM-009) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GGGMNK4K>

More documents and user manuals: <https://manuals.plus/>