

[Manuals.plus](#) /

> [G Keni](#) /

> G Keni Portable CD Player with FM Radio, Remote, LED Lights, MP3/USB/AUX - Model B0GGGQ7W3B

G Keni B0GGGQ7W3B

G Keni Portable CD Player with FM Radio, Remote, LED Lights, MP3/USB/AUX - Model B0GGGQ7W3B

Brand: G Keni | Model: B0GGGQ7W3B

INTRODUCTION

Thank you for purchasing the G Keni Portable CD Player. This device offers versatile audio playback options including CD, FM radio, USB, and AUX input, along with integrated LED lights and remote control functionality. This manual provides essential information for safe and efficient use of your new CD player.

SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block any ventilation openings. Ensure proper airflow around the unit.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
- Do not open the CD compartment while a disc is spinning.
- Keep batteries out of reach of children.

PACKAGE CONTENTS

Verify that all items are included in your package:

- G Keni Portable CD Player Unit x1
- AC Power Cord x1
- Remote Control x1
- Instruction Manual x1



24/7

アフターサービス



12ヶ月保証

製品交換・返品対応



無期限

技術サポート

取扱説明書 ×1

AC電源コード ×1

リモコン ×1

CDプレーヤー本体 ×1

同梱品リスト & サポート内容

CD BOONBOX
YS44

USER MANUAL







11.7cm

24cm

21cm

Image: The G Keni Portable CD Player, remote control, AC power cord, and instruction manual are shown as included items.

PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your CD player.

多機能CDプレーヤー



CD 再生



ディスコライト



FM ラジオ



USB 再生



AUX 入力



2WAYスピーカー



プログラム再生



イヤホンジャック



Image: Front view of the G Keni Portable CD Player, highlighting its features such as CD playback, disco light, FM radio, USB playback, AUX input, 2-way speaker, program playback, and earphone jack.

Front Panel Controls and Ports:

- **Display Screen:** Shows current mode, track number, frequency.
- **Volume Control (VOL+/-):** Adjusts the audio output level.
- **MIC Jack:** For microphone input (if applicable).
- **USB Port:** For playing MP3 files from a USB flash drive.
- **Headphone Jack (3.5mm):** For private listening.
- **Mode Button:** Switches between CD, FM, USB, AUX modes.
- **LED Button:** Controls the LED light modes.
- **Play/Pause Button:** Starts or pauses playback.
- **Stop Button:** Stops playback.
- **Skip/Search Buttons (Previous/Next):** Navigates tracks or radio stations.

Rear Panel / Side Features:

- **AC Power Input:** Connects to the included AC power cord.
- **Battery Compartment:** Holds 4 x C-size (UM-2) batteries for portable use.
- **FM Antenna:** Extendable antenna for improved FM radio reception.
- **AUX Input:** Connect external audio devices via a 3.5mm audio cable.



Image: The CD player can be powered by the included AC cord or by 4 C-size batteries (sold separately).

SETUP

Powering the Unit:

Your G Keni CD player can be powered by AC electricity or batteries.

1. AC Power:

- Connect the AC power cord to the AC input jack on the back of the unit.

- Plug the other end of the AC power cord into a standard wall outlet.

2. Battery Power:

- Open the battery compartment cover on the bottom of the unit.
- Insert 4 x C-size (UM-2) batteries (not included), ensuring correct polarity (+/-).
- Close the battery compartment cover securely.

Remote Control Battery Installation:

Insert 2 x AAA batteries (not included) into the remote control, observing the correct polarity.

OPERATING INSTRUCTIONS

General Operation:

- **Power On/Off:** The unit powers on automatically when connected to AC or when a function is selected with batteries. There is no dedicated power switch. To turn off, disconnect AC or remove batteries.
- **Volume Adjustment:** Use the **VOL+** and **VOL-** buttons on the unit or remote control to adjust the volume.
- **Mode Selection:** Press the **MODE** button on the unit or remote to switch between CD, FM, USB, and AUX modes.

CD Playback:

This unit supports CD, CD-R, CD-RW, and MP3 CD formats.

1. Open the CD compartment cover.
2. Place a CD with the label side facing up onto the spindle.
3. Close the CD compartment cover.
4. Press the **MODE** button to select CD mode. "CD" will appear on the display.
5. The CD will begin playing automatically. If not, press the **Play/Pause** button.
6. Use the **Previous/Next** buttons to skip tracks.
7. Press the **Stop** button to stop playback.

上置き式CDプレーヤー (リモコン付き)

対応ディスク：CD、CD-R、CD-RW、MP3



Image: Inserting a CD into the player and using the remote control for operation.

FM Radio Operation:

The unit supports FM radio (76-108MHz). AM radio is not supported.

1. Extend the FM antenna for optimal reception.
2. Press the **MODE** button to select FM radio mode. The frequency will appear on the display.
3. Press and hold the **Previous/Next** buttons to automatically scan for the next available station.
4. Press the **Previous/Next** buttons briefly to fine-tune the frequency manually.

高感度FMラジオ

お気に入りの局がクイックチューニングで鮮明に受信可能



Image: Listening to FM radio with the antenna extended for clear reception.

USB Playback:

Play MP3 audio files from a USB flash drive.

1. Insert a USB flash drive into the USB port on the front panel.
2. Press the **MODE** button to select USB mode. "USB" will appear on the display.
3. The unit will automatically detect and play MP3 files.
4. Use the **Previous/Next** buttons to navigate tracks.

ポータブルCDプレイヤー

ヘッドフォン端子（3.5mm）とUSBメモリで、
あなただけの音楽時間を



Image: The USB port and headphone jack allow for versatile audio playback and private listening.

AUX Input:

Connect external audio devices (e.g., smartphone, tablet) via a 3.5mm audio cable (not included).

1. Connect one end of a 3.5mm audio cable to the AUX input jack on the unit.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Press the **MODE** button to select AUX mode. "AUX" will appear on the display.
4. Control playback and volume from your external device.

LED Light Function:

The integrated LED lights can sync with music or display various patterns.

- Press the **LED** button on the unit or remote control to cycle through different light modes (e.g., flash, strobe, fade) or turn the lights off.
- The lights will respond to the rhythm of the music when active.



Image: The LED lights offer 7 colors and 3 modes (Flash, Strobe, Fade) to enhance the listening experience.

Equalizer (EQ) Modes:

Adjust the sound profile using the EQ modes via the remote control.

- Press the **EQ** button on the remote control to cycle through 5 preset sound modes:
 - **FLAT:** Natural sound.
 - **CLASSIC:** Optimized for classical music.
 - **ROCK:** Enhanced for rock music.
 - **JAZZ:** Tailored for jazz music.
 - **POP:** Suited for pop music.

内蔵EQモード搭載

付属リモコンで、5種類の音質から好みの効果をワンタッチ切り替え。

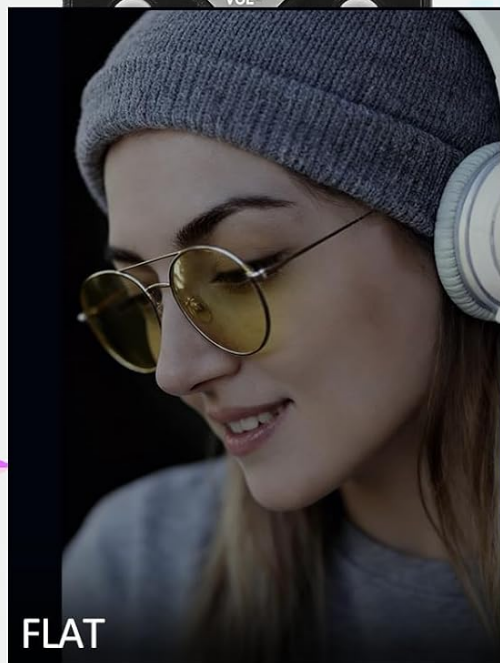


Image: The remote control's EQ button allows selection of 5 sound modes: Flat, Classic, Rock, Jazz, and Pop.

MAINTENANCE

- **Cleaning the Unit:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Lens Cleaning:** If CD playback issues occur, use a commercially available CD lens cleaner disc to clean the laser lens.
- **Battery Care:** If the unit will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries depleted or incorrectly inserted.	Ensure AC cord is securely plugged in. Replace batteries or check polarity.
CD not playing / "NO DISC" error	CD inserted incorrectly; CD is dirty or scratched; CD lens is dirty; Unsupported disc format.	Insert CD with label side up. Clean or replace CD. Use a CD lens cleaner. Ensure disc is CD, CD-R, CD-RW, or MP3 CD.
Poor FM reception	Antenna not extended; Weak signal.	Fully extend the FM antenna. Reposition the unit for better reception.
USB not playing	USB drive not inserted correctly; Unsupported file format; USB drive not formatted correctly.	Ensure USB drive is fully inserted. Only MP3 files are supported. Format USB drive to FAT32 (NTFS is not supported).
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and unit.	Replace remote batteries, check polarity. Remove any obstructions. Ensure remote is pointed at the unit.

SPECIFICATIONS

Brand	G Keni
Model	B0GGGQ7W3B
Color	White
Connectivity Technology	AUX
Speaker Type	Stereo (2 Speakers)
Power Source	AC Power Cord, 4 x C-size (UM-2) Batteries (not included)
Supported Audio Formats	CD, CD-R, CD-RW, MP3 (from CD/USB)
FM Frequency Range	76-108MHz (AM not supported)
Product Weight	1.2 kg
Dimensions (Approx.)	Width 11.7cm × Height 21.1cm × Depth 23.9cm
Country of Origin	China

WARRANTY AND SUPPORT

This product comes with a **1-year warranty** from the date of purchase. For warranty claims, product exchange, returns, or technical support, please contact your retailer or the manufacturer directly. Please refer to the contact information provided with your purchase documentation.

- **Warranty Period:** 1 Year
- **Support:** For product exchange, returns, and technical assistance, please contact the seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question