

ZACHVO TA1428-US

ZACHVO TA1428-US 2-Slice Toaster Instruction Manual

Model: TA1428-US

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your local power supply. Do not immerse the toaster, cord, or plug in water or other liquids.
- **Heat Warning:** The exterior surfaces of the toaster, especially the top, can become extremely hot during and after operation. Use oven mitts or allow the appliance to cool before handling. Do not touch hot surfaces.
- **Fire Hazard:** Never leave the toaster unattended while in use. Do not toast items with runny fillings or glazes, as these can drip and cause a fire. Do not place bread or other items on top of the toaster.
- **Proper Placement:** Operate the toaster on a stable, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.
- **Foreign Objects:** Never insert metal objects (knives, forks, etc.) into the toaster slots. This can cause electric shock or damage the appliance.
- **Crumb Tray:** Regularly empty the crumb tray to prevent crumb buildup, which can lead to fire. Ensure the crumb tray is properly inserted before use.
- **Children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Damage:** Do not operate the toaster if the cord or plug is damaged, or if the appliance malfunctions or has been dropped. Contact customer support for assistance.

2. PRODUCT OVERVIEW

The ZACHVO TA1428-US 2-Slice Toaster features a smart touchscreen and digital countdown timer for precise toasting. Its slim stainless steel design complements modern kitchens, and its 1.5-inch wide slots accommodate various bread types.



Image: ZACHVO 2-Slice Toaster, showcasing its sleek stainless steel finish and touchscreen interface.

Key Features:

- **Smart Touchscreen with Digital Countdown Timer:** Intuitive control for settings and real-time toast tracking.
- **One-Touch Memory:** Automatically recalls your last preferred setting.
- **1.5-inch Wide Slots:** Accommodates bagels, thick bread, waffles, and more.
- **5 Bread Modes:** Dedicated settings for Bread, Bagel, Waffle, Pastry, and English Muffin.
- **6 Shade Settings:** Adjustable browning levels from light to dark.
- **Defrost Function:** For toasting frozen items.
- **Reheat Function:** Warms previously toasted items without further browning.
- **Easy Cleaning:** Removable crumb tray.
- **Space-Saving Design:** Built-in cord storage.

3. SETUP

Follow these steps to set up your ZACHVO 2-Slice Toaster for first use:

1. **Unpack:** Carefully remove the toaster and all packaging materials. Retain packaging for future transport if needed.
2. **Placement:** Place the toaster on a flat, stable, heat-resistant surface, ensuring it is away from walls, cabinets, and flammable materials.
3. **Power Connection:** Unwind the power cord from the built-in storage at the bottom of the toaster and plug it into a standard 120V AC electrical outlet.
4. **First Use (Burn-off):** Before toasting food, operate the toaster empty on the highest shade setting (Level 6) for a few minutes. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.
5. **Crumb Tray:** Ensure the removable crumb tray is securely in place at the bottom of the toaster.

Your browser does not support the video tag.

Video: This video demonstrates the initial setup and installation instructions for the ZACHVO 2-Slice Toaster.

4. OPERATING INSTRUCTIONS

Your ZACHVO toaster offers various settings for customized toasting. The smart touchscreen provides an intuitive interface for all functions.

Basic Toasting Steps:

PERFECT TOAST IN 4 STEPS

Simple from start to finish



Step 1

Insert Bread



Step 2

Choose Browning Level & Toasting Mode



Step 3

Press Down to Start



Step 4

Countdown Ends. Enjoy!

Image: A visual guide showing the four simple steps to operate the toaster: inserting bread, selecting settings on the touchscreen, pressing the lever, and enjoying the finished toast.

1. **Insert Bread:** Place up to two slices of bread, bagels, or other items into the toaster slots. Ensure items fit without forcing them.
2. **Select Settings:** Use the touchscreen to choose your desired browning level (1-6) and bread mode (Bread, Bagel, Waffle, Pastry, English Muffin).
3. **Start Toasting:** Press the lever down until it locks into place. The digital countdown timer will begin.
4. **Enjoy:** Once the countdown finishes, the toast will automatically pop up.

Smart Touchscreen Control:

The touchscreen allows for easy selection of browning levels and specialized functions.

SMART TOUCHSCREEN CONTROL

Countdown Timer & 4 Essential Functions



Image: Close-up of the ZACHVO toaster's smart touchscreen, displaying the countdown timer, browning level icons, and function buttons for bread type, defrost, reheat, and memory.

- **Browning Levels (1-6):** Tap the desired toast shade icon on the screen. Level 1 is the lightest, Level 6 is the darkest.
- **Bread Modes:** Select the appropriate icon for your item (Bread, Bagel, Waffle, Pastry, English Muffin). This optimizes toasting for different textures.
- **Digital Countdown Timer:** Displays the remaining toasting time.
- **Cancel Button:** Tap 'CANCEL' at any time to stop the toasting cycle and eject the items.

Your browser does not support the video tag.

Video: This video provides a general overview of the ZACHVO 2-Slice Toaster with Smart Touchscreen, highlighting its features and ease of use.

Special Functions:

- **One-Touch Memory:** After selecting your preferred browning level and bread mode, the toaster will remember this setting for your next use. To activate, simply press the lever down.
- **Defrost Function:** Ideal for frozen bread or bagels. Insert the frozen item, select your desired browning level, then tap the snowflake icon (Defrost). The toaster will automatically adjust the toasting time for optimal thawing and browning.
- **Reheat Function:** To warm up already toasted items without further browning, insert the item, then tap the wavy lines icon (Reheat). This cycle is shorter and uses lower heat.
- **Single-Side Toasting (Bagel Mode):** When selecting 'Bagel' mode, the toaster will toast only the cut side of the bagel, leaving the outer side soft.

Your browser does not support the video tag.

Video: This video demonstrates the Defrost, Reheat, and Single-Side Toast functions of the ZACHVO 2-Slice Toaster.

5. MAINTENANCE

Regular cleaning and care will ensure the longevity and optimal performance of your toaster.

Cleaning the Crumb Tray:



EASY TO // CLEAN & STORE



Thoughtful
details. Effortless use.

43" Power Cord



Removable Crumb Tray



Built-In Cord Storage

Image: A hand demonstrating the removal of the crumb tray from the toaster for easy cleaning.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Tray:** Pull out the removable crumb tray located at the bottom of the toaster.
3. **Empty Crumb:** Discard accumulated crumbs.
4. **Wash:** Wash the crumb tray in warm, soapy water. Rinse thoroughly and dry completely before reinserting. Do not use abrasive cleaners or scourers.
5. **Reinsert:** Slide the dry crumb tray back into its position until it clicks securely.

Cleaning the Exterior:

- **Unplug and Cool:** Ensure the toaster is unplugged and cool.

- **Wipe Down:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, a mild detergent can be used, followed by wiping with a clean, damp cloth.
- **Dry:** Dry all surfaces thoroughly with a soft, dry cloth.
- **Avoid:** Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the stainless steel finish and touchscreen.

Storage:

- **Cool and Clean:** Ensure the toaster is completely cool and clean before storing.
- **Cord Storage:** Utilize the built-in cord storage on the bottom of the unit to keep the countertop tidy.
- **Location:** Store the toaster in a dry, safe place.

6. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Toast is too light or too dark.	Incorrect browning level selected.	Adjust the browning level on the touchscreen. Higher numbers for darker toast, lower for lighter.
Toast does not pop up.	Lever not fully pressed down; item jammed.	Ensure the lever is locked into place. If an item is jammed, unplug the toaster and carefully remove it once cool.
Smoke or burning smell.	Crumbs in the tray; food stuck in slots; first use burn-off.	Immediately press 'CANCEL' and unplug. Empty the crumb tray. If food is stuck, remove it carefully when cool. First use smoke is normal.
Touchscreen unresponsive.	Temporary software glitch; power issue.	Unplug the toaster for 30 seconds, then plug it back in. If the issue persists, contact customer support.

If the problem persists after trying these solutions, please contact ZACHVO customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	ZACHVO
Model Number	TA1428-US
Color	Stainless Steel
Material	Stainless Steel
Product Dimensions (D x W x H)	11" x 6.1" x 7.5"

Feature	Detail
Wattage	900 watts
Voltage	120 Volts
Slot Count	2
Special Features	Automatic Shut-Off, Digital Countdown Timer, One-Touch Memory, Smart Touchscreen, Single-Side and Double-Side Toasting
Number of Programs	6 (Shade Settings)
Item Weight	3 Pounds

8. WARRANTY AND SUPPORT

ZACHVO is committed to providing quality products and excellent customer service.

Warranty Information:

Your ZACHVO toaster comes with a 12-month quality protection warranty. Please retain your proof of purchase for warranty claims.

Returns and Exchanges:

ZACHVO offers a 30-day free return or exchange policy. For details, please refer to the retailer's return policy or contact ZACHVO customer support.

Customer Support:

For any questions, assistance, or troubleshooting not covered in this manual, please contact ZACHVO customer support:

- **Email:** service@zachvo.com
- **Phone:** +1 626-589-2505
- **Online:** Visit the ZACHVO Store on Amazon or their official website for 24/7 service.



Image: ZACHVO customer support details, including contact information and warranty coverage.