

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Alpina](#) /
- › [Alpina Double XXL Air Fryer 11L Instruction Manual](#)

## Alpina 8711252430102

# Alpina Double XXL Air Fryer 11L Instruction Manual

Model: 8711252430102

[Introduction](#)   [Safety Instructions](#)   [Components](#)   [Setup](#)   [Operating](#)   [Maintenance](#)   [Troubleshooting](#)  
[Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Alpina Double XXL Air Fryer 11L. This appliance is designed to provide a healthier way to cook your favorite meals with little to no oil. Its dual basket design allows for simultaneous preparation of two different dishes, making it ideal for families and entertaining. Please read this manual thoroughly before first use to ensure safe and optimal operation of your new air fryer. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use the appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.
- Do not block any ventilation openings.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Alpina Double XXL Air Fryer 11L.



**Image 1: Alpina Double XXL Air Fryer 11L.** This image displays the overall design of the Alpina Double XXL Air Fryer, highlighting its dual basket configuration and the central digital control panel. The appliance features a sleek black finish and a compact, stacked design.

- **Main Unit:** The primary housing containing the heating elements and fan.
- **Dual Cooking Baskets (2 x 5.5L):** Two separate, removable baskets for cooking different foods simultaneously.
- **Foldable Cooking Plates:** Removable plates located inside each basket, designed to ensure even air circulation and easy cleaning.
- **Digital LED Control Panel:** Located on the front, this panel allows for temperature and timer adjustments, and selection of pre-programmed cooking modes.
- **Power Cord:** For connecting the appliance to an electrical outlet.

### 4. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials from the air fryer. Ensure all components are present and undamaged.
2. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 15 cm (6 inches) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
3. **Initial Cleaning:** Before first use, wash the cooking baskets and foldable cooking plates with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
4. **First Use (Burn-off):** It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) before cooking food. This helps to burn off any manufacturing residues and eliminate initial odors. A slight smell or smoke may occur during this process; this is normal. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Digital Control Panel

The Alpina Double XXL Air Fryer features an intuitive digital LED control panel. Use the touch controls to adjust settings.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control:** Adjusts cooking temperature from 60°C to 200°C. Use the+ and - buttons.
- **Timer Control:** Sets cooking time from 0 to 60 minutes. Use the+ and - buttons.
- **Basket Selection:** Buttons to select Basket 1 or Basket 2 for individual settings.
- **Pre-programmed Modes:** The panel offers 12 pre-set cooking programs for common dishes. Select the desired program, and the air fryer will automatically set the optimal temperature and time.
- **Sync Finish Function:** Allows both baskets to finish cooking at the same time, even if they start at different times or with different settings.

### 5.2 General Cooking Steps

1. **Prepare Food:** Place your ingredients into the cooking baskets. Do not overfill; ensure there is enough space for air to circulate.
2. **Insert Baskets:** Slide the baskets firmly into the main unit.
3. **Power On:** Press the Power button to turn on the air fryer.
4. **Set Settings:**
  - Select Basket 1 or Basket 2.
  - Adjust temperature and time using the+ and - buttons, or choose a pre-programmed mode.
  - Repeat for the second basket if cooking simultaneously.
  - Use the Sync Finish function if desired.
5. **Start Cooking:** Press the Start/Pause button to begin cooking.
6. **Shake/Flip Food:** For even cooking, some foods may require shaking or flipping halfway through the cooking process. The air fryer may beep to remind you. Carefully remove the basket, shake/flip, and reinsert.
7. **Finish Cooking:** The air fryer will beep when the cooking time is complete. Carefully pull out the baskets and transfer food to a serving plate.
8. **Power Off:** Press the Power button to turn off the appliance and unplug it from the wall outlet.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
- 2. Cleaning Baskets and Plates:**
  - Remove the cooking baskets and foldable cooking plates.
  - Wash them in warm, soapy water using a non-abrasive sponge. For stubborn food residue, soak them in warm water for about 10 minutes.
  - Rinse thoroughly and dry completely before reassembling or storing.
  - *Note:* While some components may be dishwasher safe, hand washing is often recommended to prolong the non-stick coating.
- 3. Cleaning the Interior:** Wipe the interior of the main unit with a damp cloth. Do not use abrasive cleaners or steel wool. Ensure no water enters the heating element area.
- 4. Cleaning the Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth.
- 5. Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## 7. TROUBLESHOOTING

---

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance.
Food is not cooked evenly.	Baskets are overfilled. Food was not shaken/flipped.	Do not overfill the baskets; cook in smaller batches if necessary. Shake or flip food halfway through cooking.
White smoke comes from the appliance.	Fat residue from previous use. Cooking fatty foods.	Clean the baskets and cooking plates thoroughly after each use. For fatty foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Appliance emits a plastic smell during first use.	Manufacturing residues burning off.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

## 8. PRODUCT SPECIFICATIONS

---

- **Brand:** Alpina
- **Model Number:** 8711252430102
- **Power:** 2800 W (2 x 1400 W)
- **Capacity:** 2 x 5.5 Liters (Total 11 Liters)
- **Temperature Range:** 60°C - 200°C

- **Timer Range:** 0 - 60 minutes
- **Control Panel:** Digital LED with 12 pre-programmed modes
- **Product Dimensions:** 49.1 x 31.4 x 38.6 cm (Length x Width x Height)
- **Material:** Plastic
- **Color:** Black

## 9. WARRANTY AND SUPPORT

---

Your Alpina Double XXL Air Fryer 11L comes with a standard manufacturer's warranty. Please refer to your purchase documentation or the retailer's website for specific warranty terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact the Alpina customer service department or your point of purchase. Always have your model number (8711252430102) and proof of purchase ready when contacting support.

