



Manuals.plus /

› FUNSNAP /

› FUNSNAP FP-A6-02 Auto Face Tracking Selfie Stick Tripod User Manual

FUNSNAP FP-A6-02

FUNSNAP FP-A6-02 Auto Face Tracking Selfie Stick Tripod User Manual

Model: FP-A6-02

INTRODUCTION

Thank you for choosing the FUNSNAP FP-A6-02 Auto Face Tracking Selfie Stick Tripod. This device is designed to provide a hands-free, intelligent solution for capturing photos and videos, featuring automatic face tracking, adjustable fill lights, and a versatile design. This manual will guide you through the setup, operation, and maintenance of your new tripod.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1x Auto Face Tracking Selfie Stick Tripod
- 2x Detachable Ring Fill Lights
- 1x Charging Cable (USB-C)
- 1x Wireless Remote Control
- 1x User Manual
- 1x Carrying Bag

KEY FEATURES

- **360° AI Face Tracking:** Automatically follows your movement without the need for an app.
- **Gesture Control:** Use specific hand gestures to start and stop tracking.
- **Detachable Fill Lights:** Two ring lights with three color modes (warm, natural, cool) and adjustable brightness.
- **Multi-Angle Adjustment:** Supports 270° vertical and 360° horizontal rotation.
- **Extendable Design:** Telescoping pole extends up to 70.9 inches (180 cm) and collapses to 11.8 inches (30 cm).
- **Wireless Remote Control:** Detachable remote for capturing photos and videos from up to 32.8 ft (10 m) away.
- **Universal Compatibility:** Adjustable phone clamp fits most smartphones (2 to 4 inches wide).
- **1/4 inch Interface:** Standard screw for mounting additional accessories like ring lights or action cameras.

SETUP GUIDE

1. **Unfold the Tripod:** Gently pull the legs outwards from the base of the tripod until they are fully extended and stable. The tripod can be used as a handheld selfie stick or a freestanding tripod.
2. **Extend the Pole:** Pull the telescoping pole upwards to extend it to your desired height. The pole can extend up to 70.9 inches (180 cm).
3. **Mount Your Smartphone:** Open the adjustable phone clamp at the top of the tripod and securely place your smartphone inside. Ensure your phone is centered and stable.
4. **Attach Fill Lights (if detached):** If the fill lights are not already attached, slide them onto the designated slots on either side of the phone clamp. Ensure they click into place.
5. **Unlock the Gimbal:** Locate the lock/unlock switch on the gimbal head (usually a small lever or button near the phone clamp's base). Slide it to the 'unlocked' position to allow for 360° rotation.



Image: Visual guide for unfolding the tripod, extending the pole, and unlocking the gimbal switch.

6. **Pair Remote Control:** The wireless remote control is detachable from the tripod handle. Turn on the remote control (usually by pressing and holding a button). On your smartphone, go to Bluetooth settings and pair with the device named 'FUNSNAP Remote' or similar.

OPERATING INSTRUCTIONS

Powering On/Off

- **Main Unit:** Press and hold the power button on the tripod's main body until the indicator light turns on.
- **Fill Lights:** Each fill light has its own power button. Press to turn on/off and cycle through brightness levels.

360° AI Face Tracking

The FP-A6-02 features built-in AI for face tracking, requiring no external app. Once powered on, the device will automatically detect and track faces.

- **Activate Tracking:** Ensure the green indicator light on the device is on, indicating face tracking mode is active.
- **Start Tracking (OK Gesture):** Show an 'OK' hand gesture to the camera. The device will begin tracking your face.
- **Stop Tracking (Palm Gesture):** Show an open 'Palm' hand gesture to the camera. The device will stop tracking.



Green Light on
Enable Face Tracking Mode

OK Gesture
Start Tracking

Palm Gesture
Stop Tracking

Image: Demonstration of 'OK' and 'Palm' gestures for face tracking control.

Using the Fill Lights

The two detachable fill lights provide enhanced illumination for your content.

- **Adjust Color Mode:** Each light has a button to cycle through three color temperatures: Warm, Natural, and Cool.
- **Adjust Brightness:** Continue pressing the button to adjust the brightness level within each color mode.
- **Charging:** The fill lights are rechargeable via a USB-C port located on the side of each light.

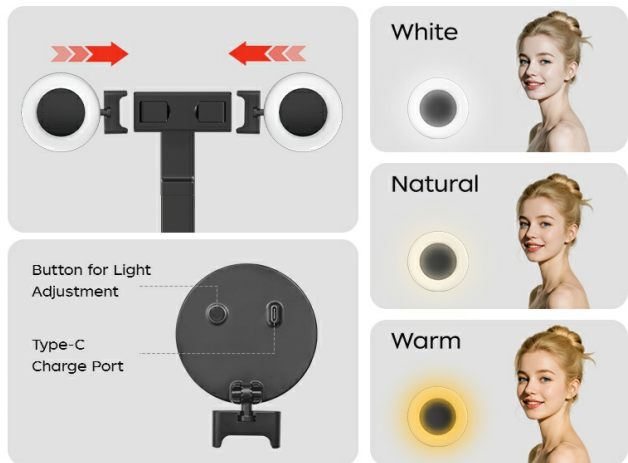


Image: Detachable fill lights with various color modes and charging port.

Wireless Remote Control

The detachable remote allows you to control your smartphone's camera from a distance.

- **Capture Photos/Videos:** Once paired via Bluetooth, press the button on the remote to trigger your smartphone's camera shutter or start/stop video recording.
- **Range:** The remote operates effectively up to 32.8 ft (10 m) away.

Wireless Remote Control

33ft/10m Range



Image: The wireless remote control for capturing photos and videos.

Official Product Video

Your browser does not support the video tag.

Video: This video demonstrates the FUNSNAP Auto Face Tracking Tripod with Fill Lights in action, showcasing its setup, auto-tracking capabilities, and the use of fill lights.

MAINTENANCE

- **Charging:** Charge the main tripod unit and fill lights using the provided USB-C cable. Ensure the device is fully charged before extended use.
- **Cleaning:** Use a soft, dry cloth to clean the surface of the tripod and lights. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, collapse the tripod to its compact size and store it in the provided carrying bag to protect it from dust and damage.

TROUBLESHOOTING

Issue	Possible Solution
Face tracking is not working.	Ensure the gimbal switch is in the 'unlocked' position. Verify the green indicator light is on. Make sure your face is clearly visible to the camera and try the 'OK' gesture again. Avoid rapid movements.
Remote control is not connecting.	Ensure the remote control is powered on. Check your smartphone's Bluetooth settings to confirm it's paired. If already paired, try unpairing and re-pairing the remote.
Fill lights are not turning on.	Check if the fill lights are charged. Connect them to the charging cable and allow sufficient time to charge. Ensure the power button on each light is pressed firmly.
Tripod is unstable.	Ensure the tripod legs are fully extended and placed on a flat, stable surface. Do not overload the phone clamp with accessories beyond its weight limit.

SPECIFICATIONS

Feature	Detail
Brand	FUNSNAP
Model Name	FP-A6-02
Color	Black
Material	Aluminum
Compatible Devices	Smartphone
Item Weight	8 Ounces
Weight Limit	4.4 Pounds
Maximum Height	70.9 Inches (180 cm)
Folded Size	11.8 Inches (30 cm)
Tripod Head Type	Gimbal Heads
Number of Leg Sections	4
Remote Control Range	Up to 32.8 ft (10 m)
Battery Life (Fill Lights)	Approx. 50 minutes at maximum brightness

WARRANTY AND SUPPORT

The FUNSNAP FP-A6-02 Auto Face Tracking Selfie Stick Tripod comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any questions regarding your product, please contact FUNSNAP customer support. Refer to the contact information provided on the product packaging or the official FUNSNAP website for assistance. Our customer support team is available 24/7 to help you.