



[Manuals.plus](#) /

› [SUNSMAI](#) /

› SUNSMAI S65 4-in-1 Steam Vacuum Mop Instruction Manual

SUNSMAI S65

SUNSMAI S65 4-in-1 Steam Vacuum Mop Instruction Manual

Model: S65

INTRODUCTION

The SUNSMAI S65 4-in-1 Steam Vacuum Mop is designed for comprehensive floor cleaning. It integrates vacuuming, steam mopping, and self-cleaning functions to efficiently manage various floor types. This manual provides detailed instructions for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance of your device.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Always connect to a properly grounded outlet.
- Do not immerse the appliance in water or other liquids.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Exercise extreme caution when cleaning on stairs.
- Do not use without filters in place.
- Unplug from outlet when not in use and before servicing.
- Steam is hot. Avoid direct contact with steam.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Main body x1
- HEPA filter x1
- User Manual x1
- Docking Station x1
- Roller Brush x1
- Carpet brush (optional) x1
- Cleaning Tool x1



Figure 1: Included Components

ASSEMBLY & SETUP

1. Handle Assembly

Insert the handle into the main body until you hear a click, indicating it is securely locked in place. Ensure the handle is firmly attached before use.

Video 1: Handle Assembly and Disassembly Steps. This video demonstrates how to correctly attach and detach the handle from the main unit.

2. Brush Roll Cover Installation

Align the brush roll cover with the water outlet on the mop head and press down firmly until it clicks into position. Verify that there are no large gaps between the cover and the mop head to ensure proper sealing and operation.

Video 2: Brush Roll Cover Installation Steps. This video illustrates the correct procedure for installing the brush roll cover.

3. Filling the Clean Water Tank

Unscrew the cap of the clean water tank (780ml capacity) and fill it with clean water. You may add a small amount of non-corrosive, non-flammable liquid cleaning solution if desired. Do not overfill. Ensure the cap is securely tightened before use.

OPERATING INSTRUCTIONS

1. Power On and Mode Selection

Press the power button to turn on the device. Use the mode switch to select between Dry Vac, Wet Vac, and Steam Mode, depending on your cleaning needs. The intelligent LED display will show the current mode and temperature.



Figure 2: Intelligent LED Control Panel



Figure 3: Multi-Surface Cleaning Modes

2. Dual Suction Modes

The device offers two suction modes:

- **Eco Mode (6.5 kPa):** Suitable for energy-efficient daily cleaning and light debris.
- **Max Mode (9.0 kPa):** Provides deep cleaning for embedded debris, pet hair, paper scraps, and food residues.

Toggle between modes using the designated button on the handle.



Equipped with carpet brush

Easy to clean carpet hair, meeting the needs of multiple scenarios

Figure 4: Dual Suction Modes and Water Tanks

3. Steam Cleaning

In Steam Mode, the mop heats water to 212°F (100°C) to effectively dissolve stubborn stains and eliminate 99.9% of germs and bacteria. Allow 15-20 seconds for steam to generate before use. This feature is ideal for tough messes on hard floors.



Figure 5: High-Temperature Steam Cleaning

Video 3: Quick & Effective Floor Cleaning. This video demonstrates the steam vacuum mop in action, quickly cleaning various floor types.

Video 4: Multi-Function Steam Mop for Stubborn Stains. This video highlights the effectiveness of the steam mop on difficult floor stains.

4. Carpet Cleaning

For carpets and rugs, attach the dedicated carpet roller brush. Use the Dry Vac mode to effectively remove pet hair, dust, and other dry debris.

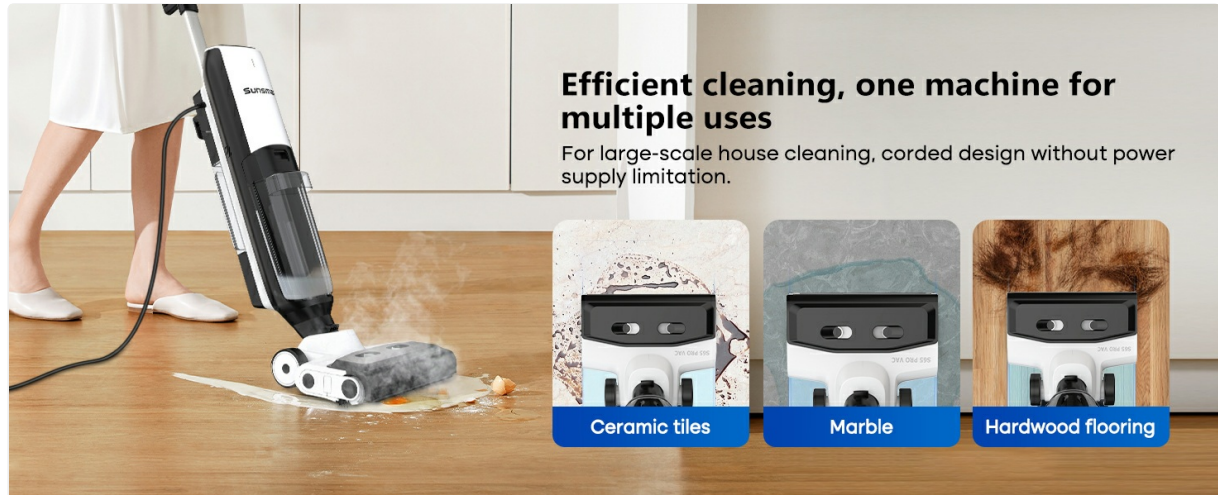


Figure 6: Effective Natural Cleaning for Pet Stains

5. Edge Cleaning

The S65 features an enhanced edge-to-edge design, allowing it to clean within 0.2 inches of baseboards and furniture, ensuring thorough cleaning in hard-to-reach areas.



Figure 7: Deep Cleaning with Edge Design

MAINTENANCE

1. Automatic Self-Cleaning

To activate the automatic self-cleaning program, place the device on its docking station and press and hold the self-cleaning button for 3 seconds. The system will use high-temperature steam to clean the brush and internal pipes, then flush residual grime with fresh water. This process helps maintain hygiene and prevents odors without manual brush cleaning.



Figure 8: Automatic Self-Cleaning Program

2. Emptying the Wastewater Tank

After each use, or when the dirty water tank (550ml capacity) is full, remove it from the main unit and empty its contents. Clean the tank and the HEPA filter thoroughly to prevent blockages and odors. Ensure the HEPA filter is dry before reinserting.

Video 5: Wastewater Tank Removal. This video demonstrates how to remove and empty the wastewater tank.

3. Real-Time Water Circulation System

The device features a real-time water circulation system that continuously delivers fresh water while capturing wastewater. This prevents the use of dirty water for cleaning. Regularly check and clean both the clean and dirty water tanks.



Figure 9: Real Fresh Water Cleaning System

TROUBLESHOOTING

If you encounter issues with your SUNSMAL S65, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Weakened Suction	Clogged filter, full dirty water tank, or brush roll obstruction.	Check and clean the HEPA filter. Empty the dirty water tank. Inspect the brush roll for any tangled debris.

Problem	Possible Cause	Solution
No Steam Output	Empty clean water tank, steam nozzle clogged, or device not heated sufficiently.	Refill the clean water tank. Perform self-cleaning cycle. Allow 15-20 seconds for preheating.
Leaking Water	Water tanks not properly installed, damaged tank, or seals.	Ensure both clean and dirty water tanks are securely in place. Check for cracks or damage to tanks and seals.
Device Not Turning On	Power cord not connected, power outlet issue.	Ensure the power cord is fully plugged into a working outlet.

Video 6: Self-Inspection Steps for Weakened Suction. This video guides you through checking common causes of reduced suction power.

SPECIFICATIONS

Feature	Detail
Model Name	S65
Rated Power	1500W
Suction Mode	Eco / Max
Clean Water Tank Capacity	780ml
Sewage Tank Capacity	550ml
Length of Power Cord	Approx. 6m
Product Weight	12.3 Pounds (5.4 Kg)
Voltage	120 Volts
Maximum Temperature	212 Degrees Fahrenheit
Special Features	Cord Wrap, Detachable, Dual Tank, Edge Cleaning
Included Components	Carpet roller brush, HEPA filter, Soft bristle roller brush, User Manual



WARRANTY AND SUPPORT

Your SUNSMAI S65 Steam Vacuum Mop comes with a **1-Year Protection Coverage**. For any questions or assistance, please contact our support team.

Contacting Support:

- **Online:** Navigate to your Amazon account, then 'Orders', select 'Order Detail' for your purchase, and click 'Ask a question' under the 'Sold by: Easylife US' section.
- We offer **24/7 Support** and aim for **12-hour swift help** response times.



Figure 11: Customer Support Information