

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SWZEC](#) /

› [SWZEC Oryzom ProTrim 2.0 Hair and Beard Trimmer User Manual](#)

SWZEC ProTrim 2.0

SWZEC Oryzom ProTrim 2.0 Hair and Beard Trimmer User Manual

Model: ProTrim 2.0

1. INTRODUCTION

Thank you for choosing the SWZEC Oryzom ProTrim 2.0 Hair and Beard Trimmer. This device is engineered for precise and uniform hair and beard trimming, featuring durable stainless steel blades, a powerful motor, an intuitive LCD screen, and convenient USB charging. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

Package Contents:

- Oryzom ProTrim 2.0 Trimmer
- 8 Comb Guides (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual

2. SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to the product, always follow these basic safety precautions:

- **WARNING:** Do not use on infants.
- Keep away from water sources. Do not immerse the trimmer in water.
- Keep out of reach of children.
- Do not use on irritated skin.
- Risk of eye injury. Exercise caution when trimming near the eyes.
- Always follow cleaning and maintenance instructions provided in this manual.
- Only use the provided charging cable.
- Do not disassemble the trimmer. Contact qualified service personnel for repairs.

3. PRODUCT FEATURES

The Oryzom ProTrim 2.0 is designed for superior grooming with the following key features:

- **Precision Stainless Steel Blades:** Ensures sharp, clean cuts without snagging.
- **Powerful Motor:** Delivers consistent performance, even on thick hair.
- **Integrated LCD Screen:** Displays battery level and motor speed for optimal control.
- **Long Battery Life:** Up to 180 minutes of cordless operation on a single charge.
- **USB Charging:** Convenient and versatile charging options.
- **8 Comb Guides:** Provides a wide range of cutting lengths from 3mm to 25mm for versatile styling.
- **Water-Resistant Blade:** Easy to clean under running water for improved hygiene.



Figure 3.1: Overview of the SWZEC Oryzom ProTrim 2.0 Trimmer.

Réglage précis de la langue

Résultat parfait à chaque fois.



Figure 3.2: Precise Length Adjustment: The trimmer comes with 8 comb guides, offering cutting lengths from 3mm to 25mm for versatile styling.

Moteur haute performance

Performance puissante, même sur les cheveux épais.



Figure 3.3: High-Performance Motor: A powerful motor ensures efficient trimming, even through thick hair, with the LCD displaying battery and RPM.

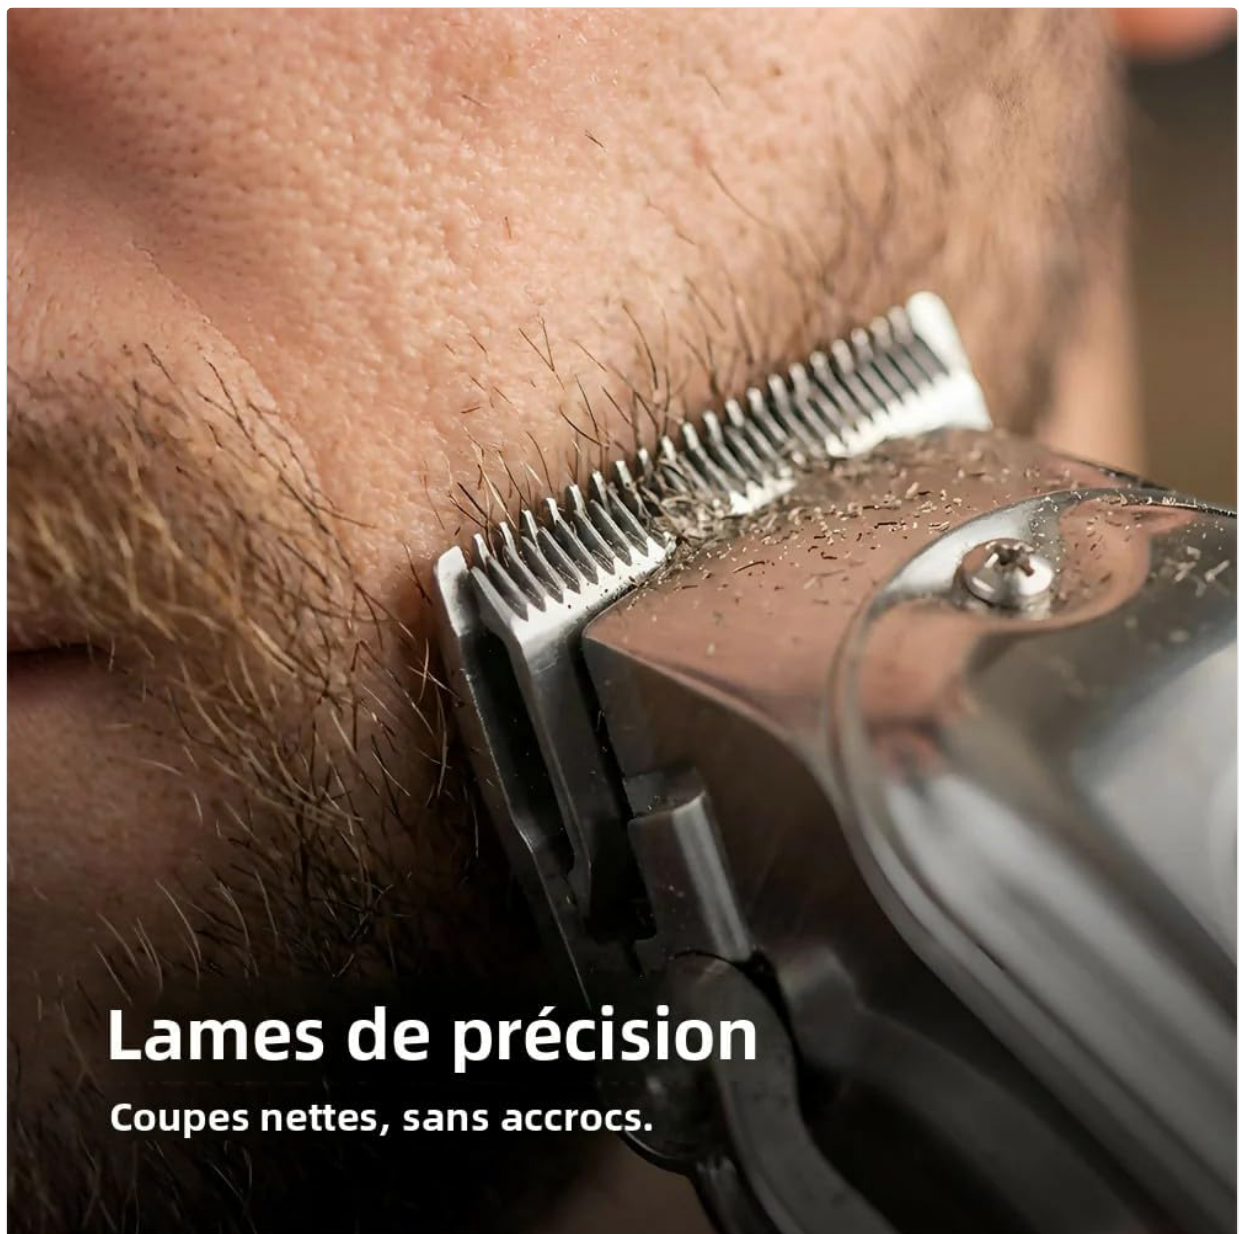


Figure 3.4: Precision Blades: The stainless steel blades are designed for clean, snag-free cuts, ensuring a smooth grooming experience.

4. SETUP

4.1 Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the USB charging cable to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The LCD screen will indicate the charging status. A full charge typically takes approximately 2-3 hours.
5. Disconnect the charger once fully charged to preserve battery life.

4.2 Attaching and Detaching Comb Guides

1. Ensure the trimmer is switched off before attaching or detaching comb guides.
2. To attach a comb guide, align the guide with the trimmer blade and push it firmly until it clicks into place.
3. To detach a comb guide, gently pull it upwards from the blade assembly.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn on the trimmer, press the power button. The LCD screen will illuminate, showing battery percentage and current motor speed.
- To turn off the trimmer, press the power button again.

5.2 Selecting Cutting Length

- Choose the desired comb guide based on the required cutting length (3mm to 25mm).
- Attach the selected comb guide firmly to the trimmer blade.

5.3 Trimming Hair and Beard

1. Ensure hair is clean and dry before trimming.
2. Start with a longer comb guide if you are unsure of the desired length, and gradually reduce it.
3. Hold the trimmer with the comb guide flat against the skin.
4. Move the trimmer slowly against the direction of hair growth for an even cut.
5. For detailing or outlining, remove the comb guide and use the bare blade carefully.



Figure 5.1: Long-lasting: The trimmer offers extended cordless operation, providing freedom and flexibility during use.



Figure 5.2: Gentle and Delicate on Skin: Designed for comfort, the trimmer is suitable for use even on sensitive areas like the neck.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

6.1 Cleaning the Blades

1. Ensure the trimmer is switched off and unplugged from any power source.
2. Remove the comb guide.
3. Use the provided cleaning brush to remove loose hairs from the blades.
4. The blade assembly is water-resistant. You can rinse the blades under running water to remove stubborn hair and debris. Do not immerse the entire trimmer body in water.
5. Allow the blades to air dry completely before reattaching the comb guide or storing the trimmer.



Figure 6.1: Easy to Clean: The water-resistant blade allows for quick and hygienic cleaning under running water.

6.2 Oiling the Blades

- After every few uses, or if the blades feel sluggish, apply a small drop of the lubricating oil (provided) to the blades.
- Turn the trimmer on for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.

6.3 Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep the comb guides and accessories together with the trimmer.

7. TROUBLESHOOTING

If you encounter any issues with your Oryzom ProTrim 2.0, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or no charge.	Charge the trimmer fully.
Poor cutting performance or snagging.	Blades are dull, dirty, or not oiled.	Clean the blades thoroughly and apply lubricating oil. If blades are dull, consider replacement (contact support).
Trimmer stops during use.	Battery is depleted.	Recharge the trimmer.
Excessive vibration or noise.	Hair caught in blades or blades misaligned.	Clean blades thoroughly. Ensure blades are properly seated.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	SWZEC
Model	ProTrim 2.0
Blade Material	Stainless Steel
Power Source	Battery Powered (Rechargeable via USB)
Max Cutting Length	25 Millimeters
Min Cutting Length	3 Millimeters (with comb guides)
Comb Guides	8 positions (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)
Display	LCD Screen
Recommended Use	Head, Face (Hair and Beard)
Product Dimensions	71.12 x 22.86 x 15.24 cm (approximate package dimensions)
Product Weight	405 grams (approximate package weight)
Country of Origin	China

9. WARRANTY AND SUPPORT

The SWZEC Oryzom ProTrim 2.0 comes with a standard manufacturer's warranty. Please refer to the product packaging or your purchase receipt for specific warranty terms and conditions. For technical support, warranty claims, or any other inquiries, please contact the retailer or SWZEC customer service through the contact information provided at the point of purchase or on the official SWZEC website.

Please retain your proof of purchase for warranty purposes.

