

Manuals.plus /

› Butterfly /

› Butterfly FLASH+ Portable Nutri-Blender User Manual

Butterfly FLASH+

Butterfly FLASH+ Portable Nutri-Blender User Manual

Model: FLASH+

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Butterfly FLASH+ Portable Nutri-Blender. Please read this manual thoroughly before operating the appliance and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Keep the blender out of reach of children.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Ensure the lid is securely fastened before operating the blender.
- Avoid contact with moving parts.
- Do not blend hot liquids, as pressure buildup can cause injury.
- Do not overfill the jar. Observe the maximum fill line.
- Always unplug the blender from the power source before cleaning or when not in use.
- Do not operate the blender with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.

PACKAGE CONTENTS

Verify that all items are present in your package:

- Butterfly FLASH+ Portable Nutri-Blender (Motor Base with Blades, Blending Jar, Lid)
- USB Type-C Charging Cable

- User Manual (this document)
- Warranty Card

SETUP

1. Initial Charging

Before first use, fully charge the blender. Connect the provided USB Type-C cable to the charging port on the motor base and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The indicator light will show charging status and turn off or change color when fully charged. A full charge provides power for up to 20 blends.



Image: The Butterfly FLASH+ Portable Nutri-Blender showing its components and USB charging capability.

2. Assembly

Ensure the motor base with the 6-leaf stainless steel blades is securely attached to the blending jar. Then, twist the lid onto the jar until it is firmly sealed. The blender is designed for easy assembly and disassembly.

Portable Blender Bottle



BPA-Free



USB Rechargeable



Stainless Steel
Blades

Image: Disassembled view of the Butterfly FLASH+ Portable Nutri-Blender, illustrating the separate jar, motor base with blades, and lid for easy cleaning and assembly.

OPERATING INSTRUCTIONS

1. Preparing Ingredients

- Cut fruits and vegetables into small pieces (approximately 1-2 cm) to ensure smooth blending and prevent blade obstruction.
- Add liquid (water, milk, juice) first, then soft ingredients, and finally harder ingredients or ice cubes. This helps the blades move freely.
- Do not exceed the 300ml capacity mark on the jar.

2. Blending

1. Ensure the jar is securely attached to the motor base and the lid is tightly closed.
2. Press the power button on the motor base to start blending. The blender operates with a single speed.
3. For optimal results, gently shake the blender during operation to ensure all ingredients are processed evenly.
4. The blending cycle will typically run for a set duration or until manually stopped by pressing the power button again.





Image: The Butterfly FLASH+ Portable Nutri-Blender filled with various fruits, demonstrating its use for making smoothies.

MAINTENANCE AND CLEANING

1. Cleaning After Use

- Immediately after each use, rinse the jar and blades.
- The blending jar is dishwasher safe. For manual cleaning, fill the jar with warm water and a drop of dish soap, then run the blender for a few seconds to self-clean. Rinse thoroughly.
- Wipe the motor base with a damp cloth. **Do not immerse the motor base in water.**
- Ensure all parts are completely dry before storing.

2. Storage

Store the blender in a clean, dry place away from direct sunlight and extreme temperatures. Ensure it is fully charged before long-term storage to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	Low battery, jar not securely attached, or safety mechanism engaged.	Charge the blender. Ensure the jar is twisted firmly onto the motor base.
Blades stop during blending.	Overloaded with ingredients, ingredients too large, or low battery.	Reduce ingredient quantity, cut ingredients into smaller pieces, add more liquid, or recharge the battery.
Leakage from the jar.	Lid not properly sealed or jar not correctly attached to the base.	Ensure the lid is tightly screwed on and the jar is firmly secured to the motor base.

SPECIFICATIONS

Brand	Butterfly
Model	FLASH+
Capacity	300 Milliliters
Wattage	40 Watts
Voltage	3.7 Volts
Power Source	Battery Powered (USB Rechargeable)
Blades	6-leaf Stainless Steel
Material	Plastic (BPA Free)
Product Dimensions (D x W x H)	10D x 10W x 20H Centimeters
Item Weight	900 Grams
Dishwasher Safe	Yes (Jar only)

WARRANTY INFORMATION

The Butterfly FLASH+ Portable Nutri-Blender comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt and warranty card for any claims.

For warranty service, please contact the manufacturer or authorized service center. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

SUPPORT

For further assistance, technical support, or inquiries regarding your Butterfly FLASH+ Portable Nutri-Blender, please contact:

Manufacturer: Butterfly Gandhimathi Appliances Ltd.

Contact Information: 9362019362

Address: 143, Pudupakkam Village, Vandalur - Kelambakkam Road

