

Waleaf XD-60/70TVS-18/23PC

Waleaf 60-inch Fluted Fireplace TV Stand Instruction Manual

Model: XD-60/70TVS-18/23PC

1. INTRODUCTION

Thank you for purchasing the Waleaf 60-inch Fluted Fireplace TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand with an integrated electric fireplace. Please read all instructions carefully before assembly and use, and retain this manual for future reference.

This TV stand is designed to accommodate televisions up to 70 inches and features a modern fluted design with curved edges, sliding side doors, and adjustable interior shelving. The integrated 18-inch electric fireplace offers adjustable flame effects and heat output, enhancing the ambiance of your living space.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- Ensure the TV stand is placed on a flat, level, and stable surface.
- Do not overload the TV stand. The top surface supports up to 300 lbs.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the appliance.
- The electric fireplace is for indoor use only. Do not use outdoors.
- Always unplug the fireplace from the power outlet before cleaning or performing maintenance.
- Supervise children and pets when the fireplace is in operation. The child lock function should be utilized.
- Do not run power cords under carpeting, throw rugs, runners, or similar coverings. Arrange cords away from traffic areas to prevent tripping hazards.

3. PACKAGE CONTENTS

Your Waleaf Fluted Fireplace TV Stand is shipped in two separate boxes. Please ensure you have received both

packages before beginning assembly. Carefully unpack all components and verify against the parts list in the included assembly guide. If any parts are missing or damaged, contact customer service immediately.



Image: Overall dimensions of the TV stand (70" W x 15.75" D x 23.39" H) and a note indicating the product ships in two separate boxes (Box A for the TV stand, Box B for the fireplace).

Box 1 (TV Stand Components): All wooden panels, hardware, and assembly tools for the TV stand structure.

Box 2 (Electric Fireplace): The 18-inch electric fireplace unit and its remote control.

4. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to have two adults for assembly. Please follow the step-by-step instructions provided in the separate assembly guide included in Box 1.

General Assembly Steps:

1. **Prepare the Area:** Clear a spacious, clean area for assembly. Lay out all parts on a soft surface to prevent scratches.

2. **Identify Parts:** Match all labeled parts with the diagrams in the assembly guide.
3. **Assemble the TV Stand Frame:** Follow the instructions to connect the main panels, side panels, and base.
4. **Install Shelves and Doors:** Insert the adjustable shelves into the desired positions. Attach the sliding side doors according to the guide.
5. **Insert Electric Fireplace:** Once the main TV stand structure is complete, carefully insert the electric fireplace unit into the designated central opening. Ensure it fits securely.
6. **Final Checks:** Verify all connections are tight and the stand is stable.



STABLE BASE

Keeps the cabinet steady and create a floating look.

Image: Visual representation of the TV stand's features, including the adjustable shelf, curved edges, sliding side tambour door, and stable base, which contribute to its stability and functionality.

5. OPERATING INSTRUCTIONS (ELECTRIC FIREPLACE)

The electric fireplace can be operated using the control panel on the unit or the included remote control.

Control Panel and Remote Functions:



5 LEVEL BRIGHTNESS SETTINGS



Image: Detailed view of the fireplace control panel and remote. The remote includes buttons for Power, Dimmer, Flame Speed, Heater, Timer, Child Lock, and Child Lock Unlock. The image also illustrates five levels of flame brightness (L1 to L5).

- **Power Button:** Turns the fireplace ON or OFF.
- **Heater Button:** Activates the heating function. Press to cycle between 750W and 1500W heat settings, or turn off heat. The flame effect can operate independently of the heat.
- **Dimmer/Brightness:** Adjusts the brightness of the flame effect (5 levels: L1-L5).
- **Flame Speed:** Changes the speed of the flame animation.
- **Timer:** Sets an automatic shutdown timer for the fireplace (e.g., 1-8 hours).
- **Child Lock:** Activates or deactivates the child lock feature, preventing accidental operation by children. Press and hold the child lock button on the remote to engage/disengage.



CURVED SLIDING DOOR

The sliding door provides a hidden space.

Image: A family enjoying the warmth from the electric fireplace, illustrating key features such as the 1-8 hour timed shutdown, two heating levels (750W/1500W), and the child lock function for safety.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TV stand and electric fireplace.

- **Cleaning the TV Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is unplugged and cool before cleaning. Use a soft, damp cloth to wipe the exterior. Do not spray water directly onto the unit.
- **Ventilation:** Keep the air vents of the fireplace clear of dust and obstructions to ensure proper heat dissipation.
- **Cord Care:** Periodically inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer service.

7. TROUBLESHOOTING

If you encounter issues with your Waleaf Fluted Fireplace TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, or circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check the main power switch on the fireplace unit. Reset the circuit breaker if necessary.
No heat output.	Heater function not activated, or thermostat setting too low.	Press the heater button on the control panel or remote to activate heat. Ensure the heat setting is at 750W or 1500W.
Remote control not working.	Dead batteries, or obstruction.	Replace batteries in the remote control. Ensure there is no obstruction between the remote and the fireplace sensor.

Problem	Possible Cause	Solution
Unusual noise or smell.	Dust accumulation, or internal component issue.	Unplug the unit and clean vents. If the issue persists, discontinue use and contact customer service.

If the problem persists after attempting these solutions, please contact Waleaf customer service for further assistance.

8. SPECIFICATIONS

- **Brand:** Waleaf
- **Model Number:** XD-60/70TVS-18/23PC
- **Product Dimensions (Overall):** 15.75"D x 70"W x 23.4"H
- **Material:** Wood (Stand), Metal (Fireplace components)
- **Color:** Black
- **Item Weight:** Approximately 61.27 Pounds
- **TV Size Capacity:** Up to 70 inches
- **Weight Capacity (Top Surface):** Up to 300 lbs
- **Fireplace Type:** 18-inch Electric Fireplace
- **Power Source:** Corded Electric
- **Heat Output:** 750W / 1500W
- **Features:** Adjustable flame brightness, flame speed, timer, child lock, remote control, sliding side doors, adjustable interior shelves.

9. WARRANTY AND SUPPORT

Waleaf is committed to providing quality products and customer satisfaction. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For any questions, missing parts, assembly assistance, or troubleshooting not covered in this manual, please contact Waleaf customer service. Our dedicated support team aims to provide a solution within 24 hours.

Customer Service Contact: Please refer to the contact information provided in your product packaging or visit the official Waleaf website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question