

Manuals.plus /

> Fanvace /

> Fanvace F30-EU Hi-Fi Lossless DSD-DAC MP3 Player User Manual

Fanvace F30-EU

Fanvace F30-EU Hi-Fi Lossless DSD-DAC MP3 Player User Manual

Model: F30-EU | Brand: Fanvace

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Fanvace F30-EU Hi-Fi Lossless DSD-DAC MP3 Player. Please read this manual thoroughly before using the device and retain it for future reference. This player is designed for high-fidelity audio playback, supporting various lossless formats and DSD decoding.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Keep the device away from water and other liquids.
- Use only the provided or approved charging cable.
- Listen at moderate volume levels to prevent hearing damage.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Fanvace F30-EU Music Player
- 1 x USB-C Charging Cable
- 1 x Audio Cable
- 1 x 64GB Micro SD Card
- 1 x Leather Case

- 1 x User Manual

4. PRODUCT OVERVIEW



Front view of the Fanvace F30-EU Hi-Fi Lossless DSD-DAC MP3 Player, showcasing its screen and control buttons.

4.1 Physical Features

- **Display:** 2-inch LCD screen
- **Controls:** Physical buttons for navigation, playback, and volume. A top-mounted wheel for volume and scrolling.
- **Ports:** USB-C port for charging and data transfer, 3.5mm audio output, Line-out port.
- **Storage:** Internal 64GB, expandable via Micro SD card up to 256GB.

4.2 Key Specifications

- **Dimensions (Height x Width x Depth):** 8.5 cm x 6.9 cm x 1.5 cm
- **Weight:** 100 Grams

- **DAC Chip:** ES9018K2M
- **Audio Resolution:** Up to 24-bit/192 kHz, DSD256 native decoding
- **Supported Audio Formats:** MP3, AAC, FLAC, APE, WAV, WMA, OGG, DSD, DSD256
- **Connectivity:** Auxiliary, USB
- **Battery Life:** Approximately 35 hours (average)

5. SETUP

5.1 Charging the Device

Before first use, fully charge the player. Connect the provided USB-C cable to the player's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The screen will indicate charging status.

5.2 Inserting a Micro SD Card

The player comes with a 64GB Micro SD card. To insert it, locate the Micro SD card slot on the side of the device. Gently push the card into the slot until it clicks into place. To remove, push the card in again until it springs out.

5.3 Transferring Music Files

1. Connect the player to your computer using the USB-C cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your desired audio files into the player's internal storage or the Micro SD card folder.
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

6. OPERATING THE PLAYER

6.1 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until the power-off prompt appears, then confirm.

6.2 Basic Navigation

The player features a combination of physical buttons and a top-mounted wheel for navigation:

- **Directional Buttons:** Use the directional buttons around the central 'OK' area to move through menus and lists.
- **OK Button:** Press the center button to confirm selections.
- **Back Button:** Typically located below the main navigation area, press to return to the previous screen.
- **Top Wheel:** Rotate the top wheel to adjust volume or scroll through long lists. Pressing the wheel may also serve as a selection or play/pause function depending on the context.

6.3 Playing Music

1. From the main menu, navigate to "Music" or "Browser".
2. Select your desired storage (internal or Micro SD).
3. Browse by Artist, Album, Song, or Folder.
4. Select a song or album to begin playback.
5. Use the Play/Pause button to control playback.

6. Use the Next/Previous track buttons to skip songs.

6.4 Volume Control

Adjust the playback volume using the dedicated volume buttons or by rotating the top-mounted wheel.

6.5 Settings Menu

Access the settings menu to customize various aspects of your player:

- **Equalizer:** Adjust audio frequencies to your preference or select from preset modes.
- **Display Settings:** Adjust brightness, backlight timer.
- **System Settings:** Language, date/time, factory reset, firmware version.

6.6 Connecting to External Devices

The player can be connected to headphones, speakers, or car audio systems via the 3.5mm audio output or the dedicated line-out port using the provided audio cable.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the manufacturer's website periodically for firmware updates to ensure optimal performance and new features.

8. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a power source and try again.
No sound from headphones.	Check headphone connection. Ensure volume is not muted or too low. Test with different headphones.
Music files are not recognized.	Verify that the files are in a supported format (MP3, FLAC, WAV, etc.). Ensure the Micro SD card is properly inserted and not corrupted. Re-transfer files if necessary.
Navigation is difficult or unresponsive.	Familiarize yourself with the button layout and the function of the top wheel. A system restart might resolve temporary unresponsiveness.
Battery drains quickly.	Reduce screen brightness. Close unnecessary applications (if applicable). Ensure no background processes are running.

9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Fanvace
Model Number	F30-EU
ASIN	B0GGRQ1NF1
Display Size	2 Inches
Display Technology	LCD
Memory Storage Capacity	64 GB (internal)
Expandable Storage	Micro SD up to 256 GB
Connectivity Technology	Auxiliary, USB
Special Feature	High Resolution Audio, DSD-DAC
Supported Standards	MP3, AAC, FLAC, APE, WAV, WMA, OGG, DSD, DSD256
Average Battery Life	35 hours
Item Weight	100 Grams
Item Dimensions (Height x Width x Depth)	8.5 cm x 6.9 cm x 1.5 cm
Compatible Devices	Smartphone, Personal Computer, Speaker, Headphones

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Fanvace website. Keep your proof of purchase for warranty claims.

For any issues not covered in this manual, please contact Fanvace customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GGRQ1NF1>

More documents and user manuals: <https://manuals.plus/>