

ZDQ965

Generic Compact 6 Egg Electric Cooker Instruction Manual

Model: ZDQ965

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Maintenance](#) [Safety Instructions](#) [Troubleshooting](#) [Package](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the Generic Compact 6 Egg Electric Cooker, Model ZDQ965. This multifunctional appliance is designed to simplify your cooking process, allowing you to prepare perfectly cooked eggs and other small items with ease. Its compact design and automatic shut-off feature make it a convenient addition to any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- 1 x Electric Egg Cooker Base
- 1 x Egg Tray (holds up to 6 eggs)
- 1 x Clear Lid
- 1 x Measuring Cup with Egg Piercer
- 1 x Instruction Manual (this document)



Image: Components of the Generic Compact 6 Egg Electric Cooker, showing the main unit, egg tray, and transparent lid.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Wash the egg tray, clear lid, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the main unit base with a damp cloth. Do not immerse the base in water.
3. **Placement:** Place the egg cooker base on a stable, flat, heat-resistant surface near an electrical outlet.
4. **Assemble:** Place the egg tray onto the heating plate of the base.



Image: The egg cooker with up to six eggs positioned in the egg tray, illustrating the capacity and readiness for operation.

5. OPERATING INSTRUCTIONS

5.1. Cooking Eggs (Hard, Medium, Soft Boiled)

1. **Pierce Eggs:** Use the egg piercer located at the bottom of the measuring cup to gently pierce the large end of each egg. This prevents cracking during cooking.
2. **Add Water:** Fill the measuring cup with cold water according to your desired egg consistency:
 - **Soft Boiled:** Fill to the "Soft" line.

- **Medium Boiled:** Fill to the "Medium" line.
- **Hard Boiled:** Fill to the "Hard" line.

Pour the measured water directly onto the heating plate of the egg cooker base.

3. **Place Eggs:** Place up to 6 pierced eggs into the egg tray.
4. **Cover:** Place the clear lid securely over the egg tray and base.
5. **Start Cooking:** Plug the power cord into a standard electrical outlet. Press the power button (usually illuminated) to start the cooking cycle. The indicator light will turn on.
6. **Automatic Shut-Off:** The egg cooker will automatically shut off and a buzzer will sound when all the water has evaporated and the eggs are cooked. The indicator light will turn off.
7. **Serve:** Carefully remove the lid (steam will be hot) and use the provided egg lifter clip or tongs to remove the eggs. Rinse eggs under cold water or place them in an ice bath to stop the cooking process and make them easier to peel.



Image: An illustration of different egg consistencies (fully cooked, tender, loose) achievable with the egg cooker, alongside the operating

appliance.

5.2. Cooking Other Foods

This appliance can also be used to steam other small food items. Ensure the food fits within the egg tray or a small heat-safe bowl placed on the tray.

- **Vegetables:** Small vegetables like corn kernels, chopped carrots, or broccoli florets can be steamed. Place them in a small heat-safe bowl on the egg tray.
- **Dumplings/Buns:** Small dumplings or buns can be steamed. Place them on the egg tray or in a small heat-safe bowl.
- **Sweet Potatoes/Potatoes:** Small, diced pieces of sweet potatoes or potatoes can be steamed.

For steaming other foods, add an appropriate amount of water to the heating plate (typically to the "Hard" line or slightly more, depending on the food and desired tenderness). The cooker will shut off automatically when the water evaporates. Monitor the food's doneness as cooking times may vary.

Multi-Functional Cooking



Image: Visual examples of the egg cooker's versatility, showing it used to prepare eggs, corn on the cob, sweet potatoes, steamed buns, dumplings, and egg custard.



The knob-controlled design of the egg cooker make it incredibly easy to use

Image: The egg cooker featuring its user-friendly knob-controlled design, shown alongside a prepared meal incorporating boiled eggs.

6. MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your egg cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The clear lid, egg tray, and measuring cup can be washed in warm, soapy water. Rinse thoroughly and dry completely. These parts are generally top-rack dishwasher safe, but hand washing is recommended for best care.
3. **Clean Heating Plate:** Wipe the heating plate with a damp cloth. If mineral deposits (scale) accumulate on the heating plate, you can remove them by adding a mixture of 1 part white vinegar to 2 parts water to the heating plate. Let it soak for 10-15 minutes, then scrub gently with a non-abrasive sponge. Rinse by wiping with a damp cloth. Do not immerse the base in water.

4. **Exterior:** Wipe the exterior of the base with a damp cloth and dry thoroughly.
5. **Storage:** Store the cleaned and dried egg cooker in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are not cooked to desired consistency.	Incorrect water level; eggs not pierced; lid not sealed properly.	Ensure correct water level is used for desired doneness. Always pierce eggs. Ensure lid is securely placed.
Eggs crack during cooking.	Eggs not pierced; cold eggs placed directly into hot cooker; too much water.	Always pierce the large end of each egg. Allow cold eggs to warm slightly at room temperature before cooking. Use the recommended water level.
Appliance does not turn on.	Not plugged in; power button not pressed; power outage.	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly. Check household circuit breaker.
White residue on heating plate.	Mineral deposits from water (scale).	Clean with a vinegar and water solution as described in the Maintenance section.

8. SPECIFICATIONS

- **Model:** ZDQ965
- **Rated Power:** 200W
- **Power Supply:** Wired Connection
- **Control Method:** Button
- **Capacity:** Up to 6 eggs
- **Materials:** Plastic, Stainless Steel
- **Dimensions (approx.):** 18.5 cm (L) x 13 cm (W) x 13.5 cm (H) / 7.28 in (L) x 5.12 in (W) x 5.31 in (H)
- **Weight (approx.):** 600g / 1.32lb



Image: Detailed dimensions of the Generic Compact 6 Egg Electric Cooker, indicating its length, width, and height for reference.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries, please contact the customer service department of your retailer.

