

## Shark FA023

# Shark ChillPill 2-in-1 Personal Cooling System Instruction Manual

Model: FA023

## 1. INTRODUCTION

---

The Shark ChillPill is a portable 2-in-1 personal cooling system designed to provide relief from heat both indoors and outdoors. It features a high-speed fan and a dry-touch evaporative misting system. This manual provides instructions for the safe and effective use, maintenance, and troubleshooting of your ChillPill device.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the device.
- Keep the device away from water and moisture. Do not immerse in water.
- Do not block the fan intake or outlet during operation.
- Use only the provided USB-C charging cable.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Avoid direct contact of the mist with electronic devices.

## 3. WHAT'S IN THE BOX

---

Verify that all components are present in your package:

- Shark ChillPill device
- Fan Cap
- Dry-Touch Misting Pod
- USB-C charging cable
- 3 replacement misting wicks



Image: The Shark ChillPill device in Rose Gold, showcasing its compact design.

## 4. PRODUCT COMPONENTS

---

The Shark ChillPill consists of a main unit and interchangeable cooling attachments:

- **Main Unit:** Contains the battery, controls, and connection point for attachments.
- **Fan Cap:** Provides high-speed airflow.
- **Dry-Touch Misting Pod:** Delivers a fine, evaporative mist.

# Shark. chillpill™

## THE 2-IN-1

### HIGH-SPEED FAN & MISTING SYSTEM



Image: An exploded view of the Shark ChillPill, illustrating the main unit, fan cap, and dry-touch misting pod.

## 5. SETUP

---

### 5.1 Charging the Device

1. Connect the USB-C charging cable to the charging port on the ChillPill device.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. The battery indicator on the device will show charging status. A full charge takes approximately 3.5 hours.

### 5.2 Attaching the Fan Cap or Misting Pod

1. Align the desired attachment (Fan Cap or Misting Pod) with the top of the main unit.
2. Twist the attachment clockwise until it clicks securely into place.

### 5.3 Filling the Misting Reservoir (for Misting Pod)

1. Ensure the Misting Pod is detached from the main unit.
2. Carefully open the reservoir cap.
3. Fill the reservoir with clean, cool tap water. Do not overfill.
4. Securely close the reservoir cap.

### 5.4 Replacing Misting Wicks (for Misting Pod)

1. Unscrew the bottom part of the Misting Pod to access the wick chamber.
2. Remove the old wick and insert a new replacement wick.
3. Reassemble the Misting Pod, ensuring all parts are secure.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off

Press and hold the power button on the main unit to turn the device on or off.

### 6.2 Adjusting Fan Speed

When the Fan Cap is attached and the device is on, rotate the dial on the main unit to adjust the fan speed.

There are 10 speed settings available. Higher speeds provide stronger airflow but may generate more noise.



Image: A person using the Shark ChillPill with the fan cap attached, demonstrating its high-speed airflow.

## CUSTOMIZE YOUR FAN SPEED & NOISE LEVEL. WITH ENDLESS WAYS TO CHILL.

Recommended fan speeds	1	2	3	4	5	6	7	8	9	10
Indoor relaxation	●	●								
Working from home	●	●	●							
Indoor workouts	●	●	●	●						
Running errands		●	●	●	●					
Commuting & travel			●	●	●	●				
Parks & picnics				●	●	●	●			
Walks & stroller rides					●	●	●	●		
Outdoor concerts & sidelines						●	●	●	●	●
Hot flashes & high temps						●	●	●	●	●
Outdoor adventures						●	●	●	●	●
Hot day cooldown						●	●	●	●	●

Image: A table outlining recommended fan speeds (1-10) for different activities, from indoor relaxation to outdoor adventures.

### 6.3 Using Dry-Touch Mist

When the Misting Pod is attached and filled with water, press the mist button to activate the misting function. You can choose between constant mist or interval mist mode by pressing the button again. Interval mode conserves water for longer use.



Image: A person using the Shark ChillPill with the dry-touch misting pod, showing the fine mist being emitted.

#### 6.4 Hands-Free Use

The ChillPill is designed for versatile hands-free use. It can be worn, clipped, or twisted for tabletop mode. Optional accessories (sold separately) include cross-body lanyards, clips, clamps, and wristlets to enhance portability and hands-free operation.

# GO HANDS-FREE


with crossbody straps, clips, and more.\*

\*Accessories sold separately.



Image: Individuals demonstrating different hands-free methods of carrying the Shark ChillPill, including wearing it and attaching it to clothing.

## HANDS-FREE. HASSLE-FREE. KEEP YOUR COOL.

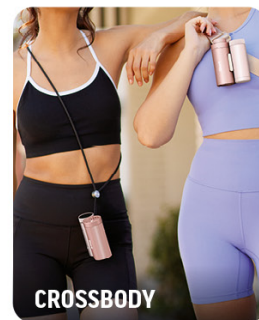

Accessories sold separately. Design may vary.

Image: A visual representation of different accessories for hands-free use, including a wristlet, clip, clamp, and crossbody strap.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Device

- Ensure the device is turned off and unplugged before cleaning.
- Wipe the exterior of the device with a soft, damp cloth.
- For the Fan Cap, use a dry brush or compressed air to remove dust from the fan blades.
- For the Misting Pod, periodically clean the reservoir with mild soap and water, then rinse thoroughly. Allow to air dry completely before reassembly.

### 7.2 Misting Wick Replacement

Replace misting wicks regularly, especially if you notice a decrease in mist output or if the wick appears discolored. Refer to section 5.4 for replacement instructions.

### 7.3 Storage

Store the ChillPill in a cool, dry place when not in use. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong battery life.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device not charged	Charge the device using the provided USB-C cable.
Fan not working	Fan Cap not securely attached; Obstruction in fan blades	Ensure Fan Cap is twisted securely. Check for and remove any obstructions.
No mist or weak mist output	Misting Pod not securely attached; Reservoir empty; Clogged or worn-out wick	Ensure Misting Pod is twisted securely. Refill reservoir with water. Replace misting wick.
Short battery life	Operating at high fan speeds or continuous mist; Battery degradation	Reduce fan speed or use interval mist mode. Ensure full charge before use.

## 9. SPECIFICATIONS

---

- **Model Number:** FA023
- **Product Dimensions:** 1.77 x 3.31 x 4.4 inches
- **Item Weight:** 12.3 ounces
- **Power Source:** Rechargeable Battery (USB-C)
- **Fan Speeds:** 10 levels
- **Mist Modes:** Constant, Interval
- **Battery Runtime:** Up to 11 hours (low fan speed), Up to 1.5 hours (max power)
- **Charge Time:** Approximately 3.5 hours

## 10. WARRANTY AND SUPPORT

---

Your Shark ChillPill device is covered by a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Shark website. For technical support, replacement parts, or service inquiries, please contact Shark customer service.