

[Manuals.plus](#) /

› [Greadio](#) /

› Greadio Portable CD Player CD40 User Manual

Greadio CD40

Greadio Portable CD Player CD40 User Manual

Model: CD40

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. PRODUCT OVERVIEW

The Greadio Portable CD Player Model CD40 is a versatile audio device designed for enjoying music, audiobooks, and language lessons. It supports various disc formats and offers multiple playback options, including AUX and TF card modes. This manual provides detailed instructions for its setup, operation, and maintenance.



Image: Greadio Portable CD Player Model CD40, showcasing its compact design.

2. SETUP GUIDE

2.1 Initial Activation and HOLD Switch

Before using the CD player, ensure the side switch is set to **"ON"**. This activates the control buttons. If the buttons are unresponsive, check if the switch is accidentally set to **"HOLD"**. The HOLD function locks all buttons to prevent accidental presses during transport.



Sicherer, bildschirmfreier Spaß für Kinder

HOLD-Schalter verhindert versehentliche Berührungen und
TF-Karten unterstützen Hörbücher oder Unterrichtseinheiten



Image: A child interacting with the CD player, illustrating the HOLD switch for button lock. The image also shows a TF card slot.

2.2 Connecting Headphones or External Speakers

The Greadio CD40 does not have built-in speakers. You must connect headphones or external speakers to hear audio. Use the provided 3.5mm AUX cable for external speakers or the included earphones.

- Insert the 3.5mm jack of your headphones or AUX cable into the headphone port on the CD player.
- If using external speakers, connect the other end of the AUX cable to the input port of your speakers.

Wiederaufladbarer CD-Player mit klarem Klang

Keine Lautsprecher, nur Sie und die Musik



Keine integrierten
Lautsprecher



Verwenden Sie
3,5-mm-Kopfhörer



CD



CD-R



CD-RW



MP3



WMA



Image: A person wearing headphones connected to the Greadio CD Player, demonstrating the use of external audio output. The image also highlights supported formats: CD, CD-R, CD-RW, MP3, WMA.

2.3 Charging the Battery

The CD player features a built-in 1200 mAh rechargeable battery, providing up to 11 hours of playback. Use the provided USB cable to charge the device.

- Connect the USB cable to the charging port on the CD player.
- Plug the other end into a 5V 1A USB power adapter (not included) or a computer's USB port.
- The charging indicator will show the charging status.

1200-mAh-Akku mit langer Wiedergabezeit

Wiedergabezeit spielen, Geld sparen und Ärger vermeiden – keine AA-Batterien erforderlich.



Kein
Lautsprecher



Kopfhörer
verwenden



5V 1A
USB-C-Aufladung



11 HRS
Wiedergabezeit



1200 mAh
Wiederaufladbar

Image: The Greadio CD Player being charged via USB-C, with indicators for 5V 1A USB-C charging, 11 hours playback time, and 1200mAh rechargeable battery.

2.4 Loading a CD

- Gently open the CD compartment cover.
- Place the CD onto the spindle with the label side facing up.
- Close the CD compartment cover firmly until it clicks.

2.5 Inserting a TF Card

The player supports TF (MicroSD) cards for playing audiobooks or voice lessons without Wi-Fi or a screen.

- Locate the TF card slot on the side of the player.
- Insert the TF card gently until it clicks into place.
- The player will automatically switch to TF card mode or allow selection via a mode button.

2.6 Connecting to a Car Stereo (AUX Mode)

Use the provided AUX cable to connect the CD player to your car's audio system.

1. Connect one end of the AUX cable to the headphone jack of the CD player.
2. Connect the other end of the AUX cable to your car stereo's AUX input.
3. Switch your car radio to AUX mode.
4. Turn on the CD player and enjoy music through your car speakers.

Der perfekte Begleiter für Ihr Auto, AUX-Anschluss für Autofahrten

- 1 Verwenden Sie das mitgelieferte **AUX-Kabel**, um den Kopfhöreranschluss des CD-Players an Ihr Autoradio anzuschließen.
- 2 Schalten Sie Ihr Autoradio in den **AUX-Modus**.
- 3 Schalten Sie den CD-Player ein und genießen Sie Ihre Musik.



Image: The Greadio CD Player placed in a car, connected to the car's audio system via an AUX cable, demonstrating its use as a car CD player.

3. OPERATING INSTRUCTIONS

3.1 Basic Playback Controls

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to stop playback.
- **Next Track:** Press the **NEXT** button to skip to the next track.
- **Previous Track:** Press the **PREVIOUS** button to go back to the beginning of the current track or to the previous

track if pressed again.

- **Volume Control:** Use the **VOLUME +/-** buttons to adjust the audio level.

3.2 Supported Formats and Anti-Shock System

The player supports CD, CD-R, CD-RW, MP3, and WMA formats. It features a 60-second anti-shock system for CDs and 120-second for MP3/WMA discs, ensuring smooth playback even during movement.



Image: The Greadio CD Player in a car, illustrating its anti-skip protection (30s for CD, 60s for MP3) for uninterrupted playback while traveling.

3.3 Programmable Playback

You can program up to 99 tracks to play in a specific order.

1. While in STOP mode, press the **PROG** button.
2. Use the **NEXT/PREVIOUS** buttons to select your desired track.
3. Press **PROG** again to confirm and add the track to the program list.
4. Repeat for up to 99 tracks.
5. Press **PLAY** to start programmed playback.

3.4 Snooze Function

The snooze function allows you to set a playback timer from 5 to 120 minutes.

- Refer to the user manual for specific button presses to activate and adjust the snooze timer.

4. MAINTENANCE

To ensure the longevity and optimal performance of your Greadio Portable CD Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use abrasive cleaners or solvents. For the optical lens, use a specialized CD lens cleaner if necessary, following its instructions carefully.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling CDs:** Always handle CDs by their edges to avoid fingerprints and scratches. Store them in their cases when not in use.
- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Buttons are unresponsive.	The HOLD switch is activated.	Slide the side switch from "HOLD" to "ON".
No sound from the player.	• No headphones/external speakers connected. • Volume is too low. • AUX cable not properly connected.	• Connect headphones or external speakers. • Increase the volume using the VOLUME + button. • Ensure the AUX cable is securely connected to both the player and the output device.
CD skipping or playback interruption.	• CD is scratched or dirty. • Excessive movement (though anti-shock is present). • Disc format not supported.	• Clean the CD with a soft, lint-free cloth. Try another CD. • Ensure the player is on a stable surface or minimize movement. • Verify the disc is CD, CD-R, CD-RW, MP3, or WMA format.
Player does not turn on.	• Battery is depleted. • Power switch is OFF.	• Charge the battery using the USB cable. • Ensure the side switch is set to "ON".

6. SPECIFICATIONS

Feature	Detail
Model Number	CD40
Brand	Greadio
Supported Audio Formats	CD, CD-R, CD-RW, MP3, WMA
Connectivity Technology	Auxiliary, TF/SD Card
Battery	1200 mAh Rechargeable (up to 11 hours playback)
Anti-Shock Protection	60 seconds (CD), 120 seconds (MP3/WMA)
Special Features	Programmable Memory, Portable, Rechargeable, HOLD Key Lock, Snooze Function
Included Components	CD Player, AUX Cable, USB Cable, Earphones, User Manual
Dimensions (L x W x H)	15.5 x 3 x 13.2 cm
Weight	235 Grams

7. WARRANTY & SUPPORT

Greadio is committed to providing quality products and dedicated customer service. For any questions, technical assistance, or warranty inquiries regarding your CD40 Portable CD Player, please contact Greadio customer support. Refer to the contact information provided in the packaging or on the official Greadio website for the most up-to-date support channels.

Greadio strives for continuous innovation and customer satisfaction, offering support and product improvements based on user feedback.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question