

## SUPERLEX B0GGZ9LRYW

# SUPERLEX 700W Bagless Canister Vacuum Cleaner User Manual

Model: B0GGZ9LRYW

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read this instruction manual carefully before using the appliance and keep it for future reference. Incorrect operation may cause damage to the appliance or injury to the user.

- Always ensure the power supply matches the voltage specified on the rating label.
- Unplug the vacuum cleaner from the power outlet before cleaning or performing any maintenance.
- Do not use the appliance to vacuum water or other liquids, hot ashes, sharp objects, or flammable materials.
- Keep the vacuum cleaner away from children and pets.
- Do not operate the vacuum cleaner without the dust container and all filters properly installed.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not pull the power cord to unplug the appliance; always grasp the plug.

## 2. PACKAGE CONTENTS

---

Carefully unpack all components and check against the list below. Ensure all parts are present and undamaged.

# PRODUKT ENTHÄLT



Figure 2.1: Included components and accessories.

1. Main Unit (with Power On/Off Switch and Cable Rewind Button)
2. Dust Container Assembly
3. Wheels (pre-attached to main unit)
4. Telescopic Tube
5. Flexible Hose
6. Floor Nozzle
7. Combined Crevice/Brush Nozzle (2-in-1)
8. Filter Set (HEPA filter and pre-filter)

## 3. ASSEMBLY AND SETUP

Follow these steps to assemble your vacuum cleaner before first use:

1. **Attach the Flexible Hose:** Insert the hose connector firmly into the suction inlet on the main unit until it clicks into place.
2. **Connect the Telescopic Tube:** Push the wider end of the telescopic tube onto the handle of the

flexible hose.

3. **Attach the Desired Nozzle:** Select either the Floor Nozzle or the Combined Crevice/Brush Nozzle and push it onto the end of the telescopic tube.
4. **Check Dust Container and Filters:** Ensure the dust container and all filters are correctly installed in the main unit before plugging in the appliance.

## 4. OPERATING INSTRUCTIONS

---

Your SUPERLEX vacuum cleaner is designed for efficient cleaning across various surfaces.

### 4.1 Powering On/Off

- **To Power On:** Unwind the power cord to the desired length and plug it into a suitable electrical outlet. Press the Power On/Off button located on the main unit.
- **To Power Off:** Press the Power On/Off button again. Unplug the appliance from the outlet.

### 4.2 Cleaning Different Surfaces

The versatile accessories allow for effective cleaning on various floor types and areas.



Figure 4.1: Multi-surface cleaning on wood, tile, and carpet.

- **Hard Floors (Wood, Tile):** Use the Floor Nozzle. For optimal results, ensure the brush setting is appropriate for hard surfaces if adjustable.
- **Carpets and Rugs:** Use the Floor Nozzle. The powerful 700W motor provides strong suction for deep cleaning.
- **Crevices, Upholstery, and Delicate Surfaces:** Attach the Combined Crevice/Brush Nozzle to the telescopic tube or directly to the hose handle for detailed cleaning.



# VIELSEITIGE REINIGUNG FÜR JEDEN BEREICH

Figure 4.2: Versatile cleaning applications for various areas.

## 4.3 Cleaning Radius

The vacuum cleaner features a 5-meter power cord and a 1.5-meter flexible hose, providing an extended cleaning radius for convenience.



Figure 4.3: Extended cleaning reach with 5m cord and 1.5m hose.

#### 4.4 Cable Retraction

To retract the power cord, press the cable rewind button on the main unit. Guide the cord manually to prevent it from whipping.

### 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

#### 5.1 Emptying the Dust Container

The 2-liter dust container should be emptied regularly, especially when the 'MAX' fill line is reached, to maintain strong suction power.

1. Ensure the vacuum cleaner is unplugged from the power outlet.
2. Press the dust container release button and carefully lift the dust container assembly from the main unit.
3. Position the dust container over a waste bin. Press the one-click emptying button to open the bottom flap and release the collected dust and debris.

4. Close the bottom flap securely until it clicks.
5. Reinstall the dust container assembly onto the main unit, ensuring it locks into place.



Figure 5.1: Emptying the dust container and cleaning the filter.

## 5.2 Cleaning the Filters

The HEPA filter and pre-filter should be cleaned regularly to maintain filtration efficiency and suction power. It is recommended to clean them after every 3-5 uses, or more frequently depending on usage.

1. Unplug the vacuum cleaner and remove the dust container assembly.
2. Carefully remove the HEPA filter and pre-filter from the dust container.
3. Tap the filters gently over a waste bin to remove loose dust.
4. Rinse the filters under cool, running water until the water runs clear. Do not use detergents or hot water.
5. Allow the filters to air dry completely for at least 24 hours before reinstallation. Do not use a hairdryer or other heating devices.
6. Once completely dry, reassemble the filters into the dust container and then reattach the dust container to the main unit.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your vacuum cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet. Check the power outlet with another appliance.
Weak suction power.	Dust container is full.	Empty the dust container.
Weak suction power.	Filters are dirty or clogged.	Clean or replace the HEPA and pre-filters as described in Section 5.2.
Weak suction power.	Hose or nozzle is blocked.	Turn off and unplug the vacuum. Inspect the hose, telescopic tube, and nozzles for blockages and remove them.
Unusual noise during operation.	Blockage in the air path.	Turn off and unplug the vacuum. Check for blockages in the hose, tube, or nozzles.
Unusual noise during operation.	Filters are not properly installed.	Ensure all filters are correctly seated in their compartments.

## 7. SPECIFICATIONS

---

Technical details for the SUPERLEX 700W Bagless Canister Vacuum Cleaner:

# STAUBSAUGER BEUTELLOS



Figure 7.1: Product dimensions and key technical features.

- **Brand:** SUPERLEX
- **Model:** B0GGZ9LRYW
- **Power:** 700 W
- **Dust Container Capacity:** 2 Liters
- **Power Cord Length:** 5 meters
- **Flexible Hose Length:** 1.5 meters
- **Filtration System:** HEPA filter with additional pre-filter
- **Special Features:** Bagless, Compact design, High cleaning radius, Automatic cable retraction
- **Product Dimensions (L x W x H):** 39 x 26 x 31 cm
- **Color:** Grey-gold
- **Form Factor:** Canister

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2026 SUPERLEX. All rights reserved.