

realme 15T 5G

realme 15T 5G Smartphone User Manual

Model: 15T 5G

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the 'What's in the Box' section are present and undamaged.

What's in the Box:

- realme 15T 5G Smartphone
- USB Cable
- Quick Start Guide (if included)
- SIM Ejector Tool (if included)

1.2 Inserting the SIM Card

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) into the tray with the gold contacts facing down. Ensure proper orientation.
4. Carefully push the tray back into the slot until it is flush with the device.

1.3 Initial Power On and Setup Wizard

Press and hold the Power button until the realme logo appears. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

1.4 Charging the Device

Connect the provided USB cable to the smartphone's USB Type-C port and the other end to the power adapter. Plug the adapter into a wall outlet. The realme 15T 5G supports 60W fast charging. It is recommended to fully charge the device before first use.

2. OPERATING INSTRUCTIONS

2.1 Display Features

The realme 15T 5G features a 6.67-inch AMOLED display with a 120Hz refresh rate for smooth visuals. It offers 4000 nits peak brightness for clear visibility even in bright sunlight, Eye Protection with 2160Hz PWM Dimming, and Vivid Vision with 1.07 Billion Colors.



Image: The realme 15T 5G's 6.67-inch AMOLED display, highlighting its 4000 nits peak brightness, 2160Hz PWM dimming for eye protection, and 1.07 billion color support for vivid visuals.

2.2 Performance and Multitasking

Powered by the MediaTek Dimensity 6400 Max 5G chipset and 8GB of RAM, the device is designed for seamless multitasking and efficient performance. It supports 5G connectivity for faster data speeds.

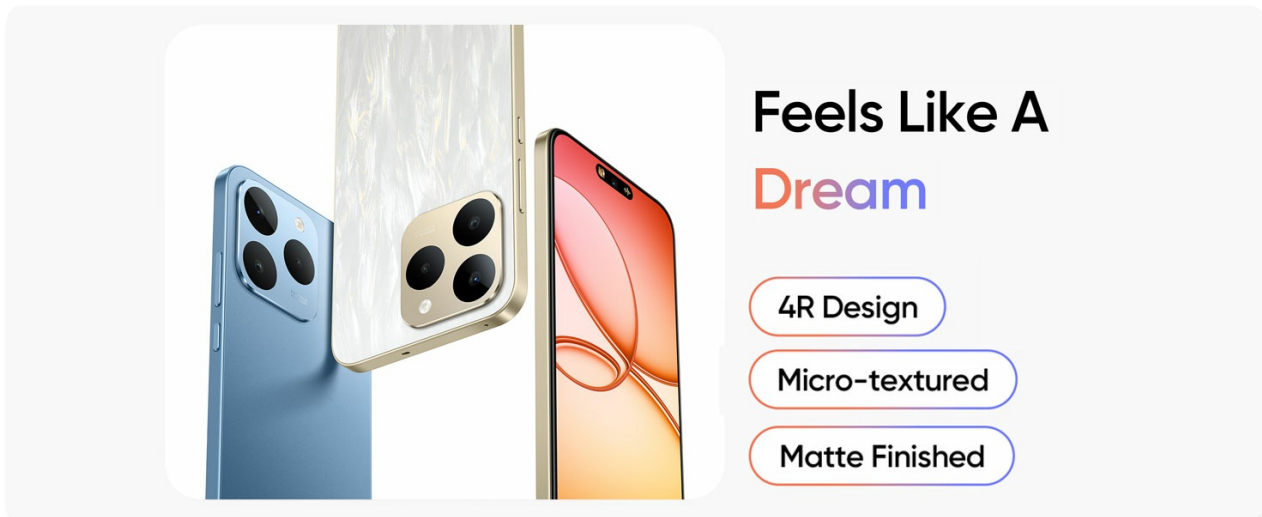


Image: Illustration of the realme 15T 5G's Dimensity 6400 Max 5G chipset, demonstrating its capability for smooth multitasking across various applications.

LOOKS GREAT!

50MP Front & Rear AI Cameras
7000mAh Titan Battery


realme 15T



Image: Visual representation of the smartphone's memory, indicating 8GB of dynamic RAM and up to 256GB of ROM (available in different configurations).

2.3 Camera Functionality

The device is equipped with dual 50MP AI cameras on both the front and rear. These cameras are designed to capture detailed photos and support various modes for different lighting conditions, including low-light environments.

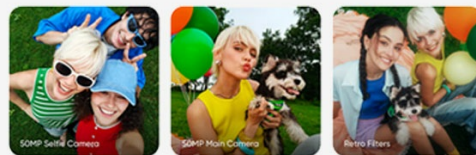

Every Portrait

Looks Great!

50MP + 50MP
Front & Rear Cameras



Image: Close-up view of the realme 15T 5G's camera modules, highlighting the 50MP front and rear AI cameras for capturing high-quality images.

2.4 Battery Management

The 7000mAh battery provides extended usage time. With 60W fast charging, the device can be quickly recharged. To optimize battery life, manage background app usage and adjust screen brightness.

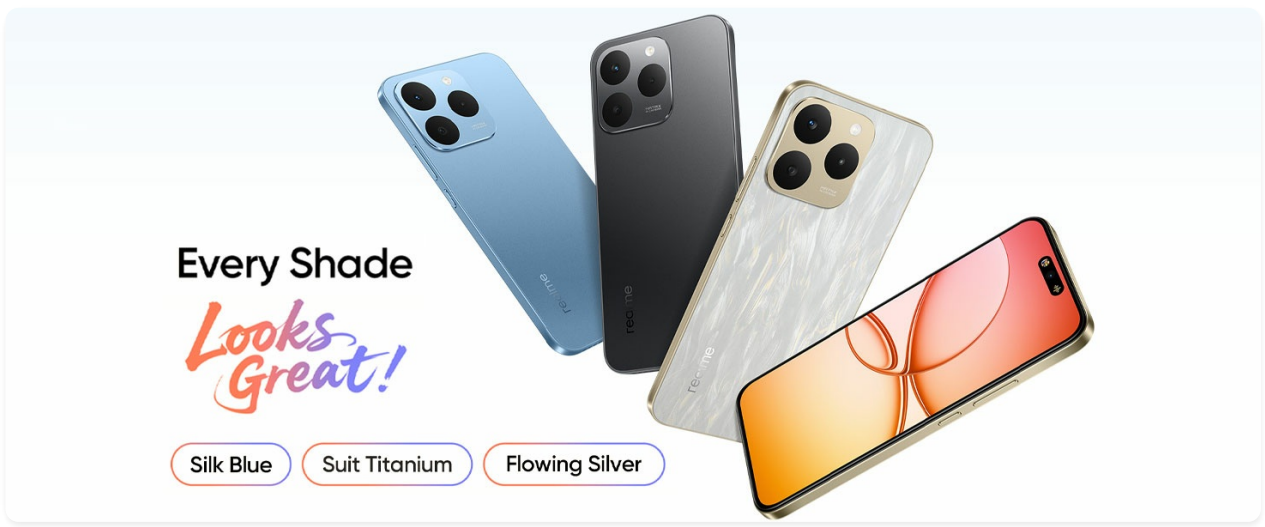


Image: The realme 15T 5G showcasing its 7000mAh battery capacity, with estimated usage times for YouTube, Spotify, and gaming.

2.5 Mini Capsule Feature

The Mini Capsule feature provides quick access to important notifications and information, such as charging status, power saving mode, flashlight, and other alerts, displayed around the front camera cutout.

IP69 Dust & Water Resistance

Spills & Splash Ready



Image: A visual representation of the realme 15T 5G's Mini Capsule feature, showing dynamic notifications for weather, data usage, power saving, flashlight, and charging status around the front camera.

3. MAINTENANCE

3.1 Dust and Water Resistance (IP69)

The realme 15T 5G is rated IP69 for dust and water resistance. This means it is protected against dust ingress and high-pressure, high-temperature water jets. While it offers robust protection, it is not fully waterproof. Avoid intentional submersion in water or exposure to harsh chemicals.

AI Edit Genie

Just Say "Change my top's color to red"
And AI Will Edit it.



Just like realme 15 Pro 5G

Segment's Brightest 6.57" 4000 nits AMOLED Display*

Device	Brightness (nits)
realme 15T	4000 nits
Competitor A	1300 nits
Competitor B	1800 nits
Competitor C	3000 nits

Image: The realme 15T 5G being splashed with water, demonstrating its IP69 rating for dust and water resistance, making it suitable for various environments.

3.2 Cleaning Your Device

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using abrasive materials or harsh cleaning agents. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics.

3.3 Battery Care

To prolong battery lifespan, avoid exposing the device to extreme temperatures (hot or cold). Do not allow the battery to fully discharge frequently. Use only the original charger and cable or certified compatible accessories.

3.4 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Navigate to **Settings > About phone > Software update** to check for available updates.

4. TROUBLESHOOTING

4.1 Device Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the Power button for at least 10-15 seconds to force a restart.

4.2 Charging Issues

- Verify that the USB cable and power adapter are securely connected and undamaged.
- Try using a different power outlet.
- Clean the USB Type-C port on the phone for any debris.

4.3 Network Connectivity Problems

- Check if the SIM card is properly inserted.
- Restart the device.
- Go to **Settings > Network & internet > Mobile network** and ensure mobile data is enabled.
- Reset network settings: **Settings > System > Reset options > Reset Wi-Fi, mobile & Bluetooth**

4.4 Camera Not Working

- Restart the device.
- Clear the cache and data of the Camera app: **Settings > Apps > See all apps > Camera > Storage & cache > Clear cache / Clear storage.**
- Ensure the Camera app has necessary permissions: **Settings > Apps > See all apps > Camera > Permissions.**

4.5 Performance Slowdown

- Close unnecessary background applications.
- Clear cache data regularly (e.g., from browser, social media apps).
- Ensure sufficient storage space is available.
- Restart the device periodically.

5. SPECIFICATIONS

Feature	Detail
Brand	realme
Model	15T 5G
Operating System	Android 15
Processor	MediaTek Dimensity 6400 Max 5G Chipset
RAM	8 GB
Internal Storage	128 GB
Display Size	6.67 Inches
Display Type	AMOLED
Refresh Rate	120 Hz
Rear Camera	Dual 50 MP
Front Camera	50 MP
Battery Capacity	7000 mAh
Fast Charging	60W
Connector Type	USB Type C
Cellular Technology	5G
IP Rating	IP69 Dust & Water Resistance
Weight	181 Grams
Dimensions (L x W x H)	15.8 x 7.2 x 0.8 Centimeters

6. WARRANTY INFORMATION

The realme 15T 5G Smartphone typically comes with a 1-year limited manufacturer's warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by accidents, misuse, unauthorized repairs, or normal wear and tear.

For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official realme website.

7. CUSTOMER SUPPORT

For technical assistance, service, or further inquiries, please contact realme customer support through their official channels.

Manufacturer Contact Information:

REALME MOBILE TELECOMMUNICATIONS (INDIA) PRIVATE LIMITED

3rd Floor, Tower-B, Building No.8, DLF Cyber City,

Gurugram-122002, Haryana, India

You can also visit the official realme website for FAQs, support resources, and service center locations.