



Manuals.plus /

› coioc /

› coioc S18-2 Bluetooth Speaker User Manual

coioc S18-2

coioc S18-2 Bluetooth Speaker User Manual

Model: S18-2

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this product and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Do not expose the speaker to extreme temperatures, direct sunlight, or open flames.
- Do not immerse the speaker in water for extended periods, despite its waterproof rating. Ensure the charging port cover is securely closed before exposure to water.
- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty and may cause damage.
- Use only the provided or a certified charging cable.
- Keep the speaker away from children and pets.
- Avoid listening at high volume levels for prolonged periods to prevent hearing damage.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- coioc S18-2 Bluetooth Speaker
- Power Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your coioc S18-2 Bluetooth Speaker.

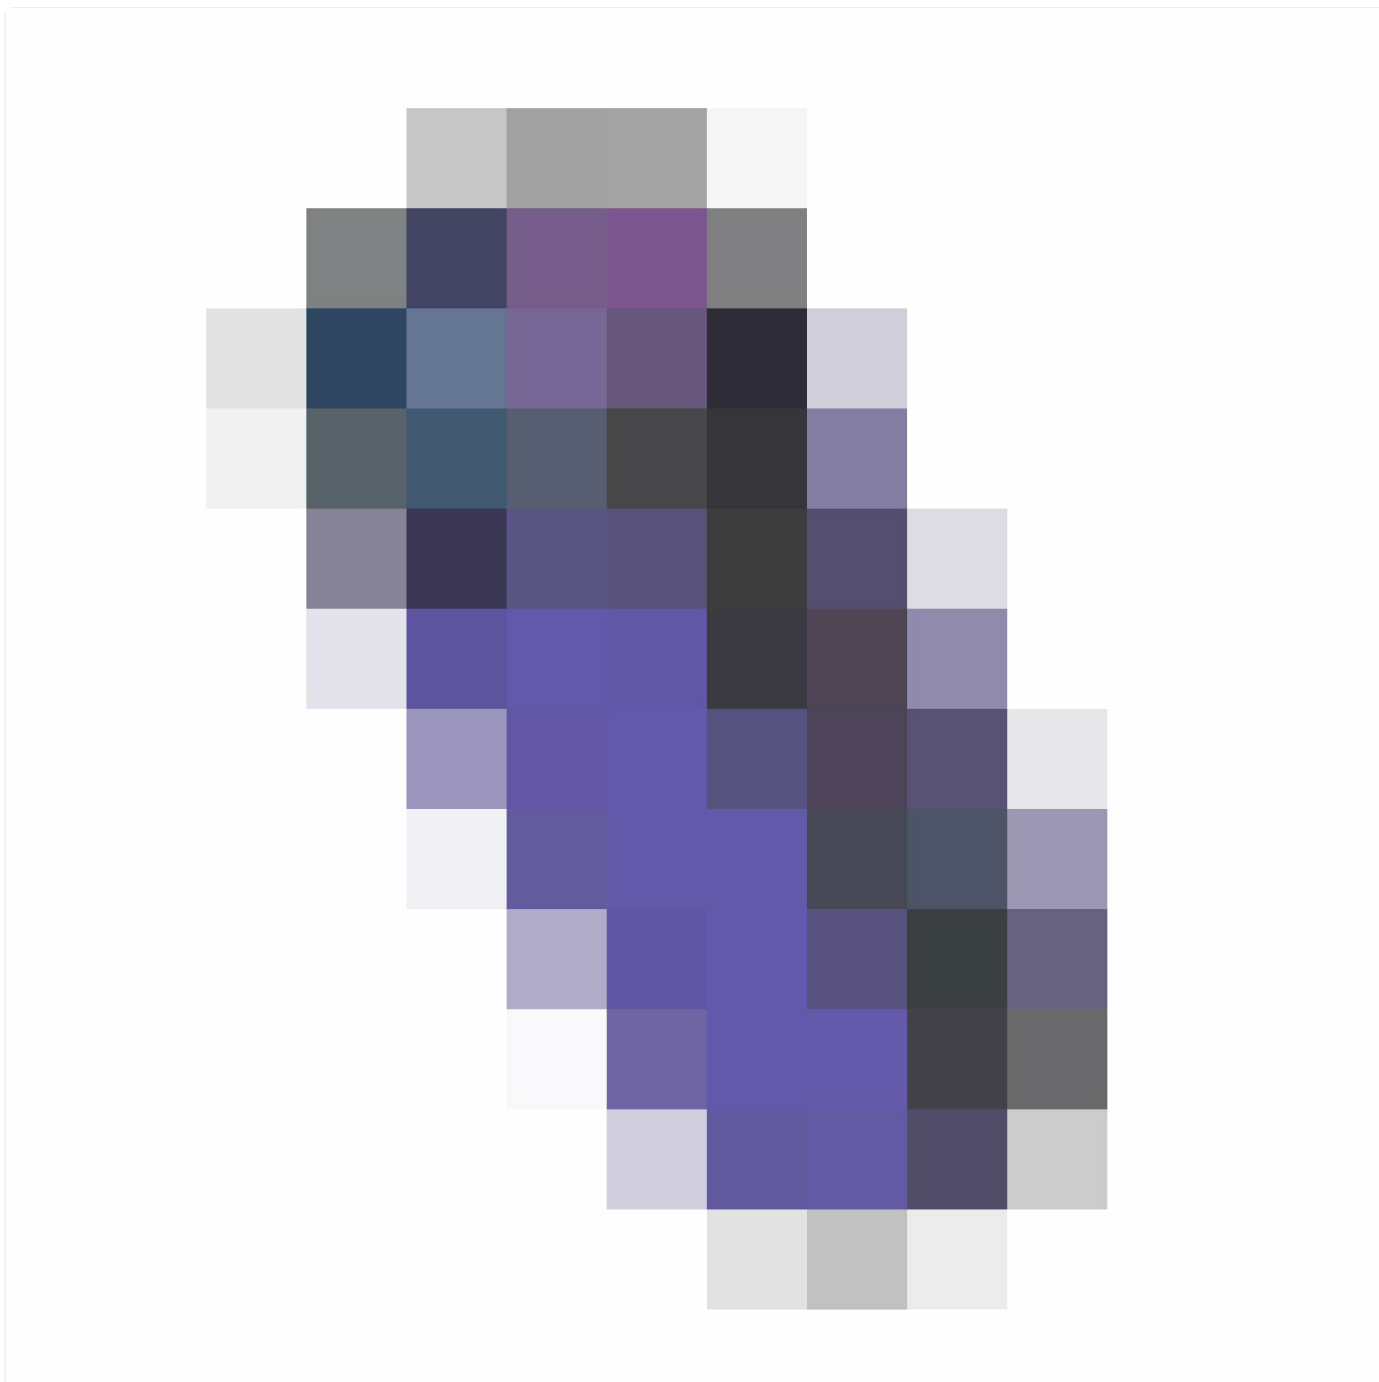


Figure 1: coioc S18-2 Bluetooth Speaker. This image displays the speaker's overall design, highlighting its portable form factor and the Phantom Purple color. The top panel likely contains touch controls for power, volume, and Bluetooth pairing.

Control Panel (Touch Controls)

- **Power Button:** Press and hold to turn the speaker on or off.
- **Bluetooth Pairing Button:** Press to enter Bluetooth pairing mode.
- **Play/Pause Button:** Press to play or pause audio. During a call, press to answer/end.
- **Volume Up (+):** Press to increase volume. Press and hold to skip to the next track.
- **Volume Down (-):** Press to decrease volume. Press and hold to skip to the previous track.

Ports

- **USB-C Charging Port:** For connecting the power cable to charge the speaker. Ensure the waterproof cover is sealed when not charging.

1. Charging the Speaker

1. Open the waterproof cover on the side/back of the speaker to reveal the USB-C charging port.
2. Connect the provided power cable to the speaker's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate to show charging status. It will typically turn off or change color when fully charged.
4. Once charging is complete, disconnect the cable and securely close the waterproof cover.

2. Power On/Off

- **To Power On:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power Off:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt and the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in pairing mode (the LED indicator will typically flash blue rapidly). If not, press the Bluetooth Pairing Button.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "coioc S18-2" from the list of found devices.
4. Once paired, you will hear an audible confirmation, and the LED indicator will turn solid blue.
5. The speaker will automatically connect to the last paired device when powered on, if that device's Bluetooth is active and within range.

OPERATING THE SPEAKER

Music Playback

- **Play/Pause:** Press the Play/Pause Button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

Volume Control

- **Increase Volume:** Press the Volume Up (+) button repeatedly.
- **Decrease Volume:** Press the Volume Down (-) button repeatedly.

Call Management

- **Answer/End Call:** Press the Play/Pause Button once.
- **Reject Call:** Press and hold the Play/Pause Button for 2 seconds.

True Wireless Stereo (TWS) Pairing (Optional)

If you have two coioc S18-2 speakers, you can pair them together for a stereo sound experience.

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Bluetooth Pairing Button for 3 seconds until you hear a TWS pairing prompt.
3. The primary speaker will automatically search for the secondary speaker. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio in stereo.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure the charging port is dry before charging.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to about 50% every few months to prolong battery life.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided power cable.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters). Forget "coioc S18-2" on your device and try pairing again.
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both the speaker and your connected device. Ensure the speaker is successfully paired and connected.
Sound distortion.	Volume too high; device too far; interference.	Reduce volume on both speaker and device. Move device closer to speaker. Avoid obstacles between speaker and device.

SPECIFICATIONS

Brand	coioc
Model Number	S18-2
Speaker Maximum Output Power	30 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Speaker Type	Portable Speaker
Color	Phantom Purple
Battery Average Life	30 Hours
Waterproof	Yes
Control Method	Touch
Speaker Size	5 Inches
Item Dimensions (D x W x H)	5"D x 5"W x 5"H
Compatible Devices	Laptop, Smartphone, Tablet, Television
Number of Audio Channels	2.0
Audio Driver Type	Dynamic Driver

WARRANTY AND SUPPORT

This coioc S18-2 Bluetooth Speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, warranty claims, or general inquiries, please contact coioc customer service:

- **Website:** www.coioc.com/support (*Example link, replace with actual if available*)
- **Email:** support@coioc.com (*Example email, replace with actual if available*)

When contacting support, please have your product model number (S18-2) and purchase information ready.

