

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ANCHEER](#) /

› [ANCHEER AMAK00015 White Folding Ebike 14 inch User Manual](#)

ANCHEER AMAK00015

ANCHEER AMAK00015 White Folding Ebike 14 inch User Manual

Model: AMAK00015

1. IMPORTANT SAFETY INFORMATION

Before operating your ANCHEER AMAK00015 Ebike, please read this manual thoroughly. Adhere to all safety warnings and instructions to prevent injury or damage. This Ebike is UL 2849 certified, ensuring compliance with safety standards for electrical systems.

- Always wear a helmet and appropriate safety gear when riding.
- Ensure all components are securely fastened before each ride.
- Do not exceed the maximum weight recommendation of 265 pounds.
- Familiarize yourself with local ebike regulations and traffic laws.
- Avoid riding in adverse weather conditions or on slippery surfaces.
- Regularly inspect brakes, tires, and electrical connections.

2. PACKAGE CONTENTS

Your ANCHEER AMAK00015 Ebike package includes the following items:

- ANCHEER 14-inch Folding Electric Bike (partially assembled)
- Seat with seat post
- Pedals (Left and Right)
- Charging Adapter
- Tool Kit (including wrenches and screwdrivers)
- User Manual
- Front Light (pre-installed)
- Rear Light (pre-installed)



Image: All components included in the package.

Video: Watch a detailed unboxing and initial assembly of the ANCHEER 14-inch Folding Electric Bike.

Video: Another perspective on unboxing and assembly for the A14 Foldable Electric Bike.

3. SETUP AND ASSEMBLY

3.1 Unfolding the Ebike

1. Carefully remove the ebike from its packaging.
2. Locate the folding mechanism on the frame and release the latch.
3. Unfold the main frame until it locks into place. Ensure the locking mechanism is secure.
4. Unfold the handlebar stem and secure its latch. Verify it is locked firmly.

3.2 Handlebar Adjustment

1. Adjust the handlebar to a comfortable riding position.
2. Tighten any screws or quick-release levers on the handlebar to ensure it is stable and does not rotate.
3. Install the bell and reflector on the handlebar, tightening their screws.

3.3 Seat Installation and Adjustment

1. Insert the seat post into the seat tube on the bike frame.
2. Adjust the seat height to your preference. **Important:** Do not exceed the marked safety scale range on the seat post.
3. Secure the seat post with the quick-release lever. Ensure it is tight enough to prevent the seat from slipping during use.

3.4 Pedal Installation

1. Identify the Left (L) and Right (R) pedals. The pedals are typically marked.
2. The left pedal screws counter-clockwise, and the right pedal screws clockwise.
3. Carefully thread each pedal into its corresponding crank arm.
4. Use a wrench from the tool kit to tighten the pedals securely.



Image: The ANCHEER Ebike is foldable for convenient storage and transport.



Image: Demonstrating the folding mechanism of the ANCHEER Ebike.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Display

1. To power on the ebike, insert the key into the ignition and turn it to the 'ON' position.
2. Press the power button on the handlebar display to activate the screen.
3. The LCD display shows essential information such as battery level, current speed, and mileage.
4. Long press the 'M' button on the display to view mileage and voltage information.
5. To power off, turn the key to the 'OFF' position and press the power button on the display.

4.2 Riding Modes and Speed Levels

The ANCHEER Ebike features three working modes:

- **Throttle Mode (Stepless Control):** Provides power without pedaling.
- **Pedal Assist Mode (3 Levels):** Provides electric assistance while pedaling. Press the 'M' button to switch between ECO, TOUR, and SPORT assist levels.
- **Bicycle Mode:** Ride as a traditional bicycle without electric assistance.

4.3 Lights and Horn

- The ebike is equipped with a high-brightness front light and a rear light for night riding safety.
- Press the dedicated button on the handlebar to turn the front and rear lights on or off.
- Use the horn button to alert others in crowded areas.

4.4 Cruise Control

The ebike features a smart cruise control function:

1. Press the 'M' button once to change the interface; the display will show "P8" for cruise control setting.
2. Press and hold the 'M' button for more than 3 seconds to enter the selection interface. The default setting is "0000" (no cruise control). Press once to change to "0001" for cruise control.
3. Press the 'M' button for more than 3 seconds to set and return to the previous interface.

4. Once activated, maintain a consistent speed for 8-10 seconds to engage cruise control.



Image: Intelligent Digital Display for monitoring ride information.

Image: Step-by-step guide for cruise control setting.

Video: Demonstrating the functions of the new meter on the ANCHEER 14-inch Folding Electric Bike.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your ebike.

- **Battery Care:** Charge the 48V 7.8Ah battery regularly, even when not in use, to maintain its health. Avoid fully discharging the battery. Store the battery in a cool, dry place.
- **Tire Pressure:** Check tire pressure before each ride. Maintain the recommended pressure for optimal performance and safety.
- **Brake Inspection:** Regularly inspect the disc brakes for wear and tear. Ensure brake levers are responsive and brake pads are not excessively worn. Adjust or replace as needed.
- **Cleaning:** Clean the ebike with a damp cloth. Avoid using high-pressure water jets directly on electrical components.

- **Fasteners:** Periodically check all bolts, nuts, and quick-release levers to ensure they are tight and secure.



Image: The ebike's battery system with multiple protection features.



Image: The high-speed brushless motor and disc brake system.

6. TROUBLESHOOTING

If you encounter issues with your ANCHEER Ebike, refer to the following common troubleshooting tips:

- **Ebike Not Powering On:** Ensure the battery is fully charged and properly seated. Check the key is in the 'ON' position and the power button on the display is pressed.
- **Motor Not Engaging:** Verify that the ebike is in an assist mode (ECO, TOUR, SPORT) or throttle mode. Check all electrical connections for looseness.
- **Brakes Not Responsive:** Inspect brake cables for tension and ensure brake pads are not worn. Adjust cable tension or replace pads if necessary.
- **Unusual Noises:** Stop riding immediately and inspect the ebike for loose parts, rubbing components, or damaged areas.
- **Error Codes:** If the display shows an error code (e.g., E10), consult the full user manual for specific code meanings and solutions. If the issue persists, contact customer support.

7. SPECIFICATIONS

Key specifications for the ANCHEER AMAK00015 White Folding Ebike 14 inch:

Feature	Specification
Bike Type	Electric Bike
Model Name	AMAK00015
Color	White Folding Ebike
Wheel Size	14 Inches
Frame Material	Aluminum
Motor Power	500W Max Motor
Max Speed	22 MPH
Battery	48V 7.8Ah (374.4 Watt Hours)
Max Range	Up to 45 Miles
Suspension Type	Dual (Front Suspension, Rear Suspension, Seat Springs)
Brake Style	Disc
Maximum Weight Recommendation	265 Pounds
Minimum User Height	54 Inches
Special Feature	LCD-Display, Cruise Control
UL Certification	UL 2849 Certified



Image: Ebike dimensions and rider recommendations.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your ANCHEER AMAK00015 Ebike comes with a limited warranty:

- **1 Year Warranty:** Covers the battery and motor.
- **30-Day Easy Returns:** Available for eligible purchases.

8.2 Customer Support

For any questions, concerns, or assistance with installation, maintenance, or other aspects of your ebike, please contact the ANCHEER customer service team:

- **Phone Support:** +1 626 688 9296 (Monday-Friday, 9:00-12:00 AM PST / 14:00-18:00 PM PST)
- **Email Support:** Scan the QR Code below or visit the official ANCHEER website.
- **Facebook Messenger:** [AncheerOfficial](#)

TOP CUSTOMER SERVICE



1-Year Warranty



In accordance with UL 2849



30-Day Free Trial



Call Support

Tel: +1 626 688 9296 Monday-Friday
(9:00-12:00 AM PST/14:00-18:00 PM PST)



Email Support

Please Scan the QR Code



Image: ANCHEER Customer Service details.