

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec Bolero Aguazero 4360 Dark 45 cm Freestanding Dishwasher User Manual

Cecotec Bolero Aguazero 4360 Dark (A01_EU01_119734)

Cecotec Bolero Aguazero 4360 Dark 45 cm Freestanding Dishwasher User Manual

Model: Bolero Aguazero 4360 Dark (A01_EU01_119734)

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Keep this manual for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury.

- This appliance is intended for household use only.
- Do not allow children to play with or operate the dishwasher.
- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact authorized service personnel.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with points down to prevent injury.

2. PRODUCT OVERVIEW

The Cecotec Bolero Aguazero 4360 Dark is a 45 cm freestanding dishwasher designed for efficient and quiet operation. It features an Inverter Plus Duo motor, a touch control panel, and a capacity for 11 place settings.

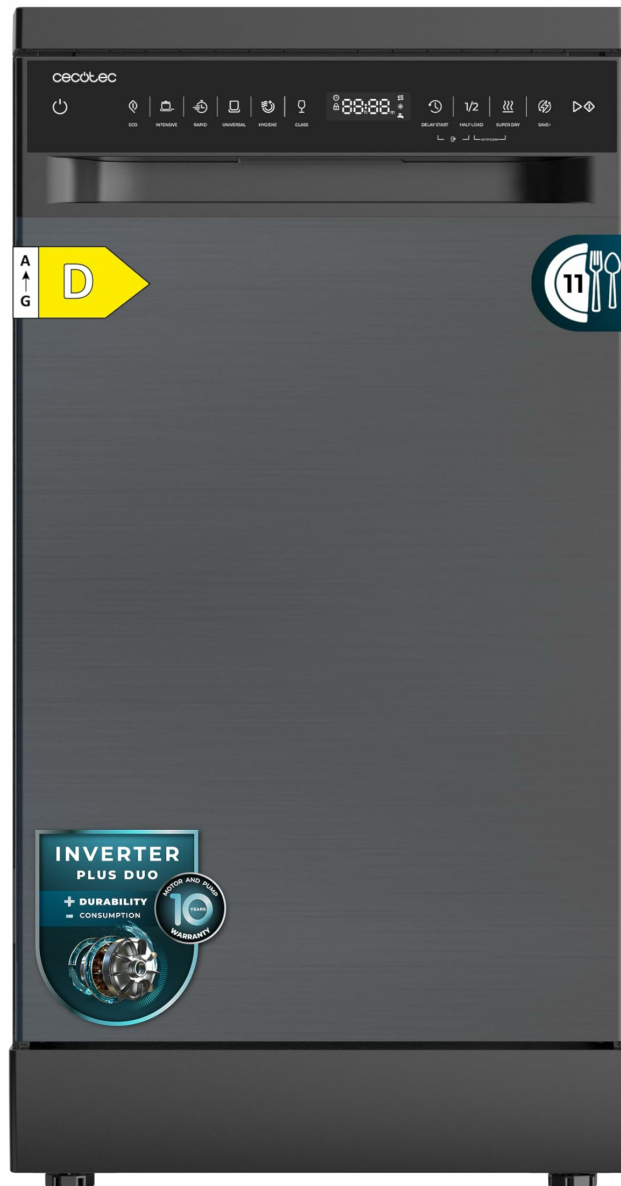


Image 1: Front view of the Cecotec Bolero Aguazero 4360 Dark Dishwasher, showing its compact 45 cm width and overall dimensions of approximately 85 cm height and 59 cm depth.

Key Features:

- **Capacity:** 11 place settings, suitable for daily use and special occasions.
- **Energy Efficiency:** Class D rating for optimized energy consumption.
- **Motor:** Advanced Inverter Plus Duo technology with inverter motor and BLDC pump for quiet, efficient, and durable performance.
- **Control Panel:** Intuitive touch control panel with hidden controls for a sleek design.
- **Programs:** 6 wash programs to suit various needs, from delicate glassware to heavily soiled pots.
- **Drying:** Super Dry function with a special hot and cold air drying cycle.
- **Efficiency Functions:** Save+ for reduced time and energy consumption.
- **Hygiene:** AutoClean function to maintain a bacteria-free and odor-free interior, and an ABT antibacterial filter.
- **Convenience:** Delay Start (up to 24 hours), adjustable upper basket, and a dedicated cutlery tray.
- **Safety:** ChildLock system to prevent accidental operation.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Keep packaging materials out of reach of children.

3.2 Placement

This is a freestanding dishwasher. Place it on a firm, level floor. Ensure there is adequate space for opening the door and for connections. The dimensions are approximately 58.8 cm (depth) x 44.7 cm (width) x 85 cm (height).

84,45cm



44,8 cm

59cm

Image 2: Front view of the Cecotec Bolero Aguazero 4360 Dark Dishwasher, showcasing its dark inox finish and touch control panel.

3.3 Water and Drain Connections

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is securely fastened and free from kinks. The drain hose should be positioned at a height between 40 cm and 100 cm from the floor.

3.4 Electrical Connection

Connect the dishwasher to a properly grounded electrical outlet (220 Volts). Do not use extension cords or adapters. Ensure the electrical supply meets the appliance's requirements.

3.5 First Use

Before the first wash, ensure the salt dispenser is filled (if applicable to your model, consult the specific salt indicator) and the rinse aid dispenser is filled. Run a short program without dishes to clean the interior.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The dishwasher features a touch control panel. The specific layout and icons are detailed in the appliance's quick start guide. Common controls include Power, Program Selection, Delay Start, and Special Functions.

4.2 Loading the Dishwasher

For optimal cleaning, load dishes correctly. Scrape off large food particles before loading. Avoid overcrowding.

- **Lower Basket:** Suitable for large items like plates, bowls, pots, and pans.
- **Upper Basket:** Ideal for glasses, cups, and smaller plates. This basket is adjustable to accommodate taller items below.
- **Cutlery Tray:** Place forks, spoons, and knives individually in the dedicated cutlery tray for thorough cleaning.





Image 3: Side view of the Cecotec Bolero Aguazero 4360 Dark Dishwasher, showing its compact depth.

4.3 Adding Detergent and Rinse Aid

- **Detergent:** Add the appropriate amount of dishwasher detergent to the dispenser before each wash cycle.
- **Rinse Aid:** Fill the rinse aid dispenser when the indicator light signals it is low. Rinse aid helps with drying and prevents water spots.

4.4 Program Selection

Select one of the 6 available wash programs based on the soil level and type of dishes. Refer to the program chart in your quick start guide for details on temperature, duration, and water consumption for each program.

4.5 Special Functions

- **Super Dry:** Activates an enhanced drying cycle using hot and cold air for perfectly dry dishes.
- **Save+:** Reduces wash time and energy consumption for lightly soiled loads.
- **Delay Start:** Allows you to postpone the start of a wash cycle by up to 24 hours.
- **Half Load:** Optimizes water and energy usage when the dishwasher is not fully loaded.

- **ChildLock:** Locks the control panel to prevent accidental changes during operation. Activate/deactivate as per the appliance's instructions.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and longevity of your dishwasher.

5.1 Cleaning Filters

The dishwasher is equipped with an ABT antibacterial filter system. Regularly check and clean the filters to prevent blockages and ensure efficient washing. Remove the filter assembly, rinse under running water, and brush away any food debris. Reassemble correctly.

5.2 Cleaning the Interior

Use the AutoClean function periodically to keep the interior free from bacteria and odors. For manual cleaning, wipe the interior with a damp cloth and a mild detergent. Do not use abrasive cleaners.

5.3 Cleaning the Exterior

Wipe the exterior surfaces, including the control panel, with a soft, damp cloth. For the dark inox finish, use a specialized stainless steel cleaner if necessary, following the product instructions.

6. TROUBLESHOOTING

Before contacting service, consult the following table for common issues and solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue; Door not closed properly; Delay Start active	Check power connection; Ensure door is latched; Cancel or wait for Delay Start
Dishes not clean	Improper loading; Clogged filters; Insufficient detergent; Incorrect program	Reload dishes correctly; Clean filters; Add more detergent; Select appropriate program
Water not draining	Clogged drain hose or filter; Drain pump malfunction	Check and clear drain hose/filter; Contact service if pump is faulty
Excessive noise	Dishes interfering with spray arms; Foreign object in pump; Improper installation	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level
Water spots on dishes	Low rinse aid level; Hard water	Refill rinse aid dispenser; Consider using dishwasher salt (if applicable)

7. SPECIFICATIONS

Feature	Specification
Model Name	Bolero Aguazero 4360 Dark
Model Number	A01_EU01_119734

Feature	Specification
Dimensions (D x W x H)	58.8 cm x 44.7 cm x 85 cm
Weight	36.8 kg
Capacity	11 Place Settings
Energy Class	D
Noise Level	47 Decibels
Programs	6
Controls Type	Touch
Voltage	220 Volts
Installation Type	Freestanding
Special Features	Low consumption, Half load, Delay timer, Super Dry, AutoClean, ChildLock

8. WHAT'S IN THE BOX

- Cecotec Bolero Aguazero 4360 Dark Dishwasher
- Lower Basket
- Upper Basket
- Cutlery Tray
- Drain Hose
- User Manual

9. WARRANTY AND SUPPORT

This product comes with a **3-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

Spare parts for this appliance will be available for a period of **10 years** within the EU, ensuring long-term support and repairability.

For technical assistance, service, or warranty claims, please contact Cecotec customer support. Refer to the contact information provided in your purchase documentation or on the official Cecotec website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GHN6V97G>

More documents and user manuals: **<https://manuals.plus/>**