

- Manuals.plus /
- › RemotesReplaced /
 - › RemotesReplaced Remote Control Instruction Manual for NORDMENDE ND24S3900H-SMART-VIDAA

RemotesReplaced ND24S3900H-SMART-VIDAA

RemotesReplaced Remote Control Instruction Manual

For NORDMENDE ND24S3900H-SMART-VIDAA Televisions

INTRODUCTION

This manual provides comprehensive instructions for the RemotesReplaced replacement remote control, designed for seamless compatibility with NORDMENDE ND24S3900H-SMART-VIDAA television models. This remote offers identical functionality to the original remote control without requiring any complex setup.



Image: Front view of the RemotesReplaced remote control, showing all buttons and layout.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment.

2. Initial Use

This RemotesReplaced remote control is pre-programmed for the NORDMENDE ND24S3900H-SMART-VIDAA television. No code setup or programming is required. Simply insert the batteries, and the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Familiarize yourself with the remote control's buttons and their functions:



Image: Angled top view of the remote control, providing a clearer look at the button layout.

- **POWER:** Turns the television on or off.
- **MUTE:** Mutes or unmutes the television sound.

- **TV / SAT / DVD / AUX:** Selects the input source (Television, Satellite, DVD player, Auxiliary device).
- **MENU:** Accesses the television's main menu.
- **EXIT:** Exits the current menu or on-screen display.
- **SHIFT:** Used for accessing secondary functions of certain buttons (if applicable).
- **Number Buttons (0-9):** Directly selects channels or inputs numerical data.
- **SOURCE:** Cycles through available input sources.
- **-/--:** Toggles between single and double-digit channel entry.
- **GUIDE:** Displays the electronic program guide (EPG).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **OK:** Confirms selections in menus.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **BACK:** Returns to the previous screen or menu.
- **SLEEP:** Sets a sleep timer for the television.
- **TV/DTV:** Switches between analog TV and digital TV modes.
- **INFO:** Displays information about the current program or input.
- **EPG:** Accesses the Electronic Program Guide.
- **FAV:** Accesses favorite channels list.
- **NET TV / SMART:** Accesses smart TV features and internet applications.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the on-screen menu or application.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback (e.g., on a connected DVD player or smart TV apps).

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

When storing the remote for extended periods, remove the batteries to prevent leakage, which can cause damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the television's infrared receiver.
 - Make sure you are within the effective operating range of the television.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the problematic buttons, to remove any dirt or debris.

- If only certain buttons are unresponsive after checking batteries, the remote may require replacement.

SPECIFICATIONS

Model Number	ND24S3900H-SMART-VIDAA
Brand	RemotesReplaced
Compatibility	NORDMENDE ND24S3900H-SMART-VIDAA Televisions
Power Source	2 x AAA Batteries (not included)
Manufacturer	Linkwebb

WARRANTY INFORMATION

Specific warranty details for this RemotesReplaced product are not provided in the available product information. Please refer to your purchase documentation or contact the seller directly for warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your RemotesReplaced remote control, please contact the retailer or the manufacturer, Linkwebb. Contact information may be available on your purchase receipt or the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0GHP5HB9B>

More documents and user manuals: **<https://manuals.plus/>**