

LICAEVEY LICAEVEYyumidorkbc

LICAEVEY Mini Sticker Printer User Manual

Model: LICAEVEYyumidorkbc

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your LICAEVEY Mini Sticker Printer. This portable thermal printer allows for inkless printing of various content directly from your mobile device via Bluetooth. Please read this manual thoroughly before operating the device and retain it for future reference.

2. WHAT'S IN THE BOX

Carefully unpack your LICAEVEY Mini Sticker Printer and ensure all items are present:

- 1 x LICAEVEY Mini Sticker Printer (Dimensions: 8.7 x 8.7 x 4.2 cm, Weight: 163g)
- 1 x USB Type-C Charging Cable
- 3 Rolls of Thermal Paper (57mm width - 1 pink, 1 blue, 1 white)
- 2 x User Manuals (This document is one of them)



Image: Package contents including the printer, charging cable, and thermal paper rolls.

3. SPECIFICATIONS

Feature	Specification
Brand	LICAEVEY
Model Name	LICAEVEYyumidorkbc
Printing Principle	Thermal Printing

Feature	Specification
Printing Precision	203 DPI
Printing Speed	20mm/s
Connectivity	Bluetooth
Supported Systems	Android, iOS
APP Name	Support for Print
Battery Type	Li-ion battery
Battery Capacity	1300mAh
Charging Interface	Type-C
Charging Time	2-3 Hours
Printer Dimensions	Approx. 8.7 x 8.7 x 4.2 cm (3.4 x 3.4 x 1.7 in)
Printer Weight	Approx. 163 g (5.7 oz)
Thermal Paper Size	Approx. 57mm / 2.24in

4. SETUP

4.1 Charging the Printer

Before first use, fully charge the printer. Connect the provided USB Type-C cable to the printer's charging port and the other end to a standard USB power adapter (not included).

- The indicator light will illuminate during charging.
- Charging typically takes 2-3 hours.
- Once fully charged, the indicator light may change color or turn off, depending on the model.



Image: Type-C charging port.

4.2 Loading Thermal Paper

Follow these steps to correctly load the thermal paper roll:

1. Gently open the printer cover.
2. Insert a 57mm thermal paper roll into the paper compartment, ensuring the printing side (usually smoother) faces outwards.
3. Pull a small length of paper out beyond the cutting edge.
4. Close the printer cover firmly until it clicks into place.



Image: Paper output slot with serrated cutting edge.

4.3 App Installation

The LICAEVEY Mini Sticker Printer operates with the "Support for Print" application. Download it from your device's app store:

- For Android devices, search for "Support for Print" on the Google Play Store.
- For iOS devices, search for "Support for Print" on the Apple App Store.
- Install the application on your smartphone or tablet.

4.4 Bluetooth Pairing

To connect your printer to your mobile device:

1. Ensure the printer is charged and powered on. Press and hold the power button until the indicator light illuminates.
2. Enable Bluetooth on your mobile device.
3. Open the "Support for Print" application.
4. Within the app, navigate to the device connection settings (usually represented by a Bluetooth icon or a 'Connect Printer' option).

5. Select your LICAEEVEY printer from the list of available devices. The printer's name may appear as "LICAEEVEY" or a similar identifier.
6. Once connected, the app will indicate a successful pairing.

5. OPERATING INSTRUCTIONS

5.1 Printing from the App

The "Support for Print" app offers various features for creating and printing stickers, notes, and labels:

1. Open the "Support for Print" app and ensure your printer is connected via Bluetooth.
2. Select the desired printing function (e.g., text, image, template, QR code, barcode).
3. Customize your content using the app's editing tools, which include fonts, borders, and icons.
4. Preview your design to ensure it appears as intended.
5. Tap the 'Print' button to send the design to your LICAEEVEY Mini Sticker Printer.



Image: Using the app to print a custom sticker.

5.2 Personalized Printing Features

The app allows for diverse printing applications:

- **Photos:** Print black and white photos directly from your gallery.
- **QR Codes/Barcodes:** Generate and print QR codes or barcodes for various uses.
- **Notes & Lists:** Create to-do lists, shopping lists, or journal entries.
- **Labels:** Design and print labels for organization, storage, or gifts.
- **Banners & Charts:** Utilize templates for creative projects.

6. MAINTENANCE

6.1 Cleaning the Printer

To ensure optimal printing quality and prolong the life of your printer:

- Turn off the printer and disconnect the charging cable before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior of the printer.
- For the thermal print head, use a cotton swab lightly dampened with isopropyl alcohol. Gently wipe the print head to remove any dust or paper residue. Allow it to dry completely before closing the cover and powering on.
- Do not use harsh chemicals or abrasive materials.

6.2 Thermal Paper Replacement

When the paper roll is depleted, replace it by following the steps in Section 4.2 "Loading Thermal Paper". Ensure you use 57mm thermal paper for compatibility.

7. TROUBLESHOOTING

If you encounter issues with your LICAEVEY Mini Sticker Printer, refer to the following common problems and solutions:

- **Printer not turning on:**
Ensure the printer is fully charged. Connect it to the charging cable and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Cannot connect via Bluetooth:**
Verify that Bluetooth is enabled on your mobile device and the printer is powered on. Close and reopen the "Support for Print" app. Try restarting both your mobile device and the printer. Ensure no other devices are currently connected to the printer.
- **No print output or blank pages:**
Check if the thermal paper is loaded correctly with the printing side facing outwards. Ensure the paper roll is not depleted. Clean the thermal print head as described in Section 6.1.
- **Poor print quality (faint or incomplete print):**
The battery might be low; charge the printer. The thermal print head may be dirty; clean it as described in Section 6.1. Ensure you are using high-quality thermal paper.
- **App crashes or freezes:**
Ensure your "Support for Print" app is updated to the latest version. Clear the app's cache or reinstall the app if the issue persists.

If these solutions do not resolve the issue, please contact customer support.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The LICAEEVEY Mini Sticker Printer comes with a manufacturer warranty for 90 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

8.2 Customer Support

For technical assistance, warranty claims, or any other inquiries, please refer to the contact information provided with your purchase documentation or visit the official LICAEEVEY website.