

BarcaLounger 7-1541-5309-84

BarcaLounger Phoebe Manual Recliner User Manual

Model: 7-1541-5309-84

1. INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and care of your BarcaLounger Phoebe Manual Recliner. Please read all instructions carefully before use to ensure proper function and longevity of your furniture. The Phoebe Manual Recliner is a 3-way recliner featuring a flared tight back, flared welted rolled arms, and a loose welted box seat cushion. The cushion contains pocketed coil springs encased in foam, wrapped in Dacron with a down blend topper. It is supported by hand-carved wood legs.

2. SAFETY INFORMATION

Important Safety Precautions:

- Keep hands and feet clear of the reclining mechanism when operating the recliner.
- Do not allow children to play on or around the recliner unsupervised.
- Ensure the recliner is placed on a level surface to prevent tipping.
- Do not stand on the footrest or armrests.
- Maximum weight recommendation for this recliner is 140 pounds. Exceeding this limit may cause damage or injury.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- BarcaLounger Phoebe Push Thru The Arms Recliner (Main Body)
- Detachable Legs (if shipped separately)
- Instruction Manual (this document)

Note: Small parts may be included for leg attachment. Keep them out of reach of children.

4. SETUP AND ASSEMBLY

Your Phoebe recliner may arrive with the legs detached for shipping. Follow these steps for assembly:

1. Carefully remove all packaging materials.
2. With assistance, gently lay the recliner on its back on a soft, clean surface to avoid scratching the upholstery.
3. Locate the attachment points for the legs on the underside of the recliner.
4. Attach each leg securely. Ensure they are tightened firmly but do not overtighten.
5. With assistance, carefully return the recliner to its upright position.
6. Position the recliner in your desired location, ensuring there is sufficient space behind it for reclining (Wall Proximity: 17 inches).



Figure 4.1: Close-up view of the recliner's hand-carved wooden leg.

5. OPERATING INSTRUCTIONS

The Phoebe recliner features a manual push-through-the-arm reclining mechanism.

1. **To Recline:** While seated, gently push back on the armrests and your back simultaneously. The footrest will extend, and the backrest will recline. Continue pushing until you reach your desired reclining position.
2. **To Return to Upright Position:** Gently push down on the footrest with your legs while leaning forward slightly. The footrest will retract, and the backrest will return to its upright position. Ensure the footrest is fully closed before exiting the recliner.



Figure 5.1: The Phoebe recliner in its upright, non-reclined position.



Figure 5.2: Side view of the Phoebe recliner in a partially reclined position, showing the extended footrest.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner. This recliner is upholstered in leather.

- **General Cleaning:** Dust regularly with a soft, dry cloth.
- **Leather Care:** For spills, blot immediately with a clean, absorbent cloth. Do not rub. For general cleaning, use a leather cleaner and conditioner specifically designed for top-grain leather, following the product's instructions. Avoid harsh chemicals, abrasive cleaners, or excessive moisture.
- **Mechanism Care:** The reclining mechanism is designed for long-term use. Avoid forcing the mechanism. If it becomes stiff, a silicone-based lubricant can be applied sparingly to moving parts, but consult a professional if issues persist.
- **Sunlight Exposure:** Avoid placing the recliner in direct sunlight for prolonged periods, as this can cause fading and drying of the leather.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common solutions:

- **Recliner does not recline smoothly:**
 - Ensure no objects are obstructing the reclining mechanism.
 - Check if the recliner is placed too close to a wall (requires 17 inches of wall proximity).
 - Verify that all assembly bolts (if any) are securely tightened.
- **Footrest does not retract fully:**

- Apply firm, even pressure with your legs to push the footrest down.
 - Check for any obstructions under the footrest.
- **Squeaking noises:**
 - Apply a small amount of silicone-based lubricant to visible pivot points on the reclining mechanism.
 - Ensure all connections are tight.

If problems persist, please contact customer support.

8. SPECIFICATIONS

Model Name:	Phoebe
Model Number:	7-1541-5309-84
Brand:	BarcaLounger
Color:	Cashmere-Taupe
Material:	Top Grain Leather with Split Grain Leather on sides & back
Product Dimensions (D x W x H):	37.8"D x 33.75"W x 41.25"H
Seat Height:	21.75 inches
Seat Depth:	22.5 inches
Arm Height:	26.75 inches
Item Weight:	106 pounds
Maximum Weight Recommendation:	140 pounds
Wall Proximity:	17 inches
Frame Construction:	Furniture grade plywood frame (18mm @ 11 ply & 18mm @ 14 ply), Hardwood Plywood, Mortise and tenon frames with glued joints and corner blocks, CARB certified.
UPC:	850077320996

9. WARRANTY INFORMATION

For detailed warranty information regarding your BarcaLounger Phoebe Manual Recliner, please refer to the product description on the retailer's website or the official BarcaLounger store page. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a defect, please contact BarcaLounger

customer support or the retailer from whom you purchased the product.
For more information, you may visit the official BarcaLounger store:
[BarcaLounger Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question