

[Manuals.plus](#) /

› [Olakids](#) /

› Olakids Kids Bicycle User Manual (Models 10240 and Series)

Olakids 10240

Olakids Kids Bicycle User Manual

Models: 10240 (and 12, 14, 16, 18, 20 Inch Series)

1. INTRODUCTION

Thank you for choosing an Olakids Kids Bicycle. This manual provides essential information for the safe assembly, operation, and maintenance of your new bicycle. Please read this manual thoroughly before assembly and first use, and retain it for future reference. This guide applies to Olakids Kids Bikes across various wheel sizes (12, 14, 16, 18, 20 inches) and model 10240.



Image: Olakids Kids Bicycle, showcasing its design with a doll seat and front basket.

2. SAFETY INFORMATION

Your child's safety is paramount. Always ensure the following safety guidelines are followed:

- **Helmet Use:** Always ensure your child wears a properly fitted helmet that meets safety standards (e.g., CPSC, ASTM) when riding the bicycle.
- **Adult Supervision:** Young riders should always be supervised by an adult.
- **Brake Operation:** The bicycle is equipped with both a hand brake and a rear coaster brake. Teach your child how to use both effectively. Regularly check brake functionality before each ride.
- **Chain Guard:** The enclosed chain guard is designed to prevent clothing or body parts from getting caught in the chain. Ensure it is always securely in place.
- **Bell:** Use the safety bell on the right handle to alert others to the rider's presence.
- **Pre-Ride Check:** Before each ride, check that all bolts and quick releases are tight, tires are properly inflated, brakes are working, and the steering is smooth.
- **Compliance:** This product complies with US CPSIA and ASTM requirements, made from safe materials free

from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde. It has passed tests for stability, asphyxiation, load, and shear.

- **Riding Environment:** Ensure the child rides in safe, open areas away from traffic, obstacles, and hazards.

3. PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged. The package typically includes:

- 1 x Olakids Kids Bicycle (85% pre-assembled)
- Training Wheels (detachable)
- Doll Seat (removable)
- Front Basket
- Decorative Streamers
- Assembly Tools
- Detailed Assembly Instructions

If any parts are missing or damaged, please contact customer support immediately.

4. SETUP AND ASSEMBLY

Your Olakids Kids Bicycle arrives 85% pre-assembled, allowing for quick installation, typically within 15 minutes. Follow the detailed assembly instructions provided in the box. The required tools are also included.

General Assembly Steps:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Front Wheel Installation:** Attach the front wheel to the fork. Ensure it is centered and securely fastened.
3. **Handlebar Installation:** Insert the handlebar stem into the fork tube and tighten the bolts. Ensure the handlebars are straight and secure.
4. **Pedal Installation:** Attach the pedals. Note that pedals are typically marked 'L' for left and 'R' for right, and they thread in opposite directions.
5. **Seat Post Installation:** Insert the seat post into the frame and adjust to the appropriate height. Secure with the quick-release or bolt mechanism.
6. **Training Wheels (Optional):** If desired, attach the detachable training wheels to the rear axle. Ensure they are level and securely tightened.
7. **Accessories:** Attach the doll seat, front basket, and decorative streamers as per the instructions.
8. **Final Checks:** Perform all safety checks mentioned in Section 2 before the first ride.

5. OPERATING INSTRUCTIONS

Adjustments:

- **Seat Height:** The saddle height can be adjusted to ensure the child's feet can comfortably touch the ground (with training wheels) or reach the pedals effectively. Loosen the quick-release or bolt, adjust, and re-tighten.
- **Handlebar Height:** The handlebar height can also be adjusted to suit the child's comfort and reach. Loosen the stem bolt, adjust, and re-tighten.
- **Training Wheels:** These are detachable and can be removed once the child gains confidence and balance.

Braking:

- **Hand Brake:** Located on the handlebar, this brake typically controls the front wheel. Squeeze the lever gently to slow down or stop.
- **Coaster Brake:** This brake is activated by pedaling backward. It controls the rear wheel.
- Teach your child to use both brakes smoothly and gradually to avoid sudden stops.

Accessories:

- **Doll Seat:** The removable doll chair allows children to bring their favorite toys along for the ride. Ensure it is securely attached.
- **Basket:** The front basket provides convenient storage for small items. Avoid overloading the basket to maintain balance.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Olakids Kids Bicycle.

- **Cleaning:** Clean the bicycle regularly with a damp cloth and mild soap. Avoid harsh chemicals. Dry thoroughly after cleaning.
- **Tire Pressure:** Check tire pressure before each ride. Maintain the recommended pressure (usually indicated on the tire sidewall) for optimal performance and safety. The widen rubber pneumatic tires are suitable for various terrains.
- **Chain Lubrication:** Periodically lubricate the chain with bicycle-specific chain lubricant to ensure smooth operation and prevent rust.
- **Brake Check:** Inspect brake pads for wear and ensure brake cables are not frayed. Adjust brakes as needed to maintain proper stopping power.
- **Bolt Tightness:** Regularly check and tighten all bolts, nuts, and quick releases, especially on the handlebars, seat post, wheels, and pedals.
- **Frame Inspection:** The sturdy carbon steel frame is designed for durability. Periodically inspect the frame for any signs of damage or cracks.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Loose Handlebars/Seat:** If handlebars or seat wobble, ensure the stem bolts and seat post quick-release/bolt are securely tightened. Refer to assembly instructions.
- **Brakes Not Engaging:** Check brake cable tension and brake pad alignment. Adjust the cable tension at the lever or caliper. Ensure pads are not worn out.
- **Tires Flat:** Inflate tires to the recommended pressure. Check for punctures if they deflate quickly.
- **Pedals Squeaking:** Apply a small amount of grease to the pedal threads where they connect to the crank arm.
- **Chain Noise:** Clean and lubricate the chain. Ensure the chain guard is not rubbing against the chain.

For issues not listed here or if problems persist, please contact Olakids customer support.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Olakids
Model Number	10240
Bike Type	Kids Bike
Age Range (Description)	Little Kid
Wheel Sizes Available	12, 14, 16, 18, 20 inches (Specific model may vary)
Number of Speeds	1
Frame Material	Carbon Steel
Suspension Type	Dual
Brake Style	Caliper (Handbrake), Coaster (Rear)
Special Features	Adjustable Handlebars, Detachable Training Wheels, Removable Doll Seat, Front Basket
Included Components	1 x Kids Bike, Assembly Tools, Instructions
Wheel Material	Rubber
Bicycle Drivetrain Type	Chain Drive
Specific Uses For Product	Mixed Terrain

9. WARRANTY AND SUPPORT

Olakids stands behind the quality of its products. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Olakids website.

If you have any questions, require technical assistance, or need to report a missing/damaged part, please contact Olakids customer support through the retailer where the product was purchased or via the contact information provided on the official Olakids website.

Please have your model number (10240) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question