

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [IINE](#) /

> IINE Mini Retro Game Controller User Manual

IINE Mini Retro Game Controller

IINE Mini Retro Game Controller User Manual

Model: Mini Retro Game Controller (Grey)

1. INTRODUCTION

The IINE Mini Retro Game Controller is a compact, wireless gamepad designed for versatile gaming and control across multiple platforms. Its retro-inspired design and pocket-sized form factor make it ideal for gaming on the go, while its multi-mode functionality extends its use beyond traditional gaming to multimedia, touch control, and productivity tasks.

2. PACKAGE CONTENTS

- IINE Mini Retro Game Controller (Grey)
- Charging Cable
- Lanyard
- User Manual

3. PRODUCT FEATURES

- **Retro Design & Pocket Size:** Inspired by classic gaming, this controller offers a compact, nostalgic look in a highly portable form.
- **Motion Control:** Built-in 6-axis gyroscope enables intuitive movement-based gameplay.
- **Right-Side Only Operation:** Designed exclusively for right-side use, functioning as a right-side joypad-style controller for single-side gameplay scenarios. **Note:** This is a right-side only controller and not a dual-controller set.
- **Multi-Mode Support:** Supports various operation modes for different games and scenarios:
 - Single Joypad Mode: For multiplayer-style games on compatible consoles (right-side use only).
 - Switch Mode: Play compatible console games.
 - Xinput Mode: Play PC and iOS games.
 - HID Mode: Play compatible Android games.
- **Multimedia, Touch & Productivity Control:** Functions as a compact control tool for:
 - Multimedia Mode: Photo shooting and music control.
 - Touch Control Mode: Browse short videos or read e-books.
 - Mouse Mode: Simulate mouse clicks.
 - Keyboard Mode: PPT page turning and office use.

- **Ultra-Portable with Keychain Design:** Easily attaches to keys, backpacks, or pouches, making it an ideal travel controller.



Image: Overview of the controller's full functionality, including touch, multimedia, gamepad, keyboard, and mouse modes.

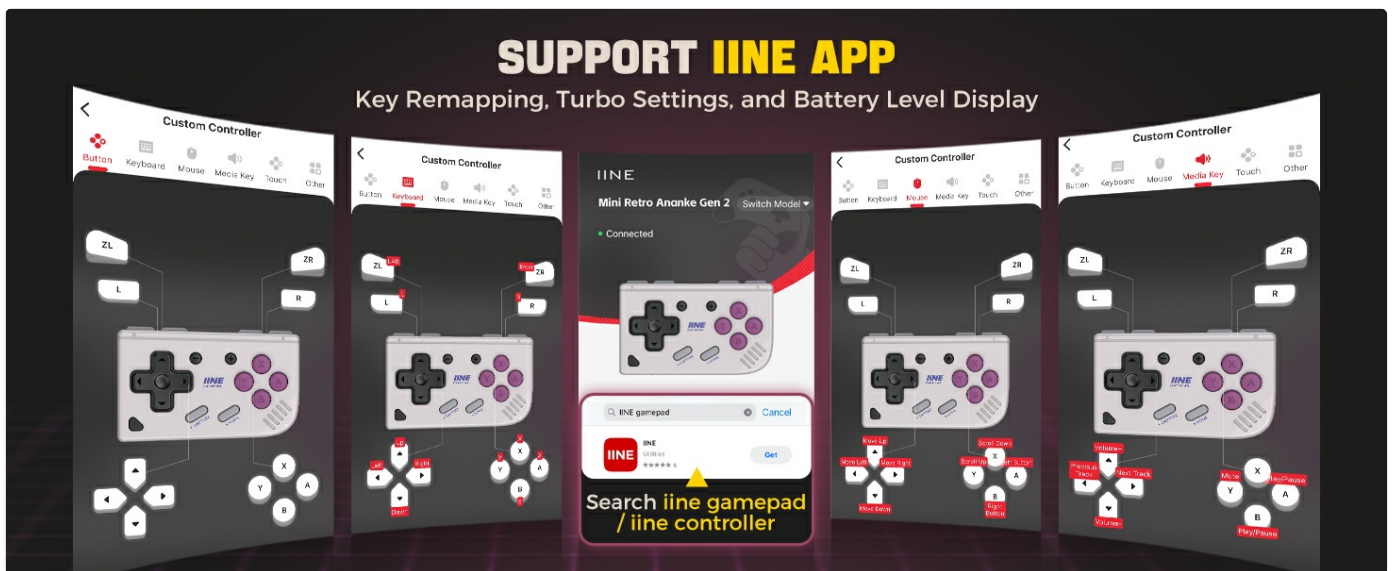 


Image: Detailed view of the controller emphasizing its 6-axis motion control capability.

4. SETUP AND PAIRING

4.1 Charging the Controller

Before first use, fully charge the controller using the provided charging cable. Connect the cable to the controller's charging port and a USB power source. The indicator light will show charging status and turn off when fully charged.

4.2 Pairing with Devices

The controller supports various pairing modes. To select a mode, press and hold the **[Pairing]** button along with the corresponding direction on the D-pad:

- **Switch Mode:** Hold **[Pairing]** + **[Up]**
- **PC / iOS Mode (Xinput):** Hold **[Pairing]** + **[Left]**
- **Android Mode (HID):** Hold **[Pairing]** + **[Right]**

Release the buttons when the indicator light flashes rapidly, then complete the pairing process on your device's Bluetooth settings.

4.3 NS2 Wake-Up Steps (for Nintendo Switch)

1. On your Nintendo Switch, navigate to **[Controller]** → **[Change Grip/Order]**.

2. Press and hold the **[Pairing] + [UP]** buttons on the IINE controller to connect. Release the buttons when the indicator light flashes rapidly.
3. After pairing is complete, temporarily remove both original Joy-Cons from the NS2.
4. Quickly reattach the original left and right Joy-Cons to the NS2.
5. Press and hold the **[Home]** button on the IINE controller to wake up and reconnect for future use.

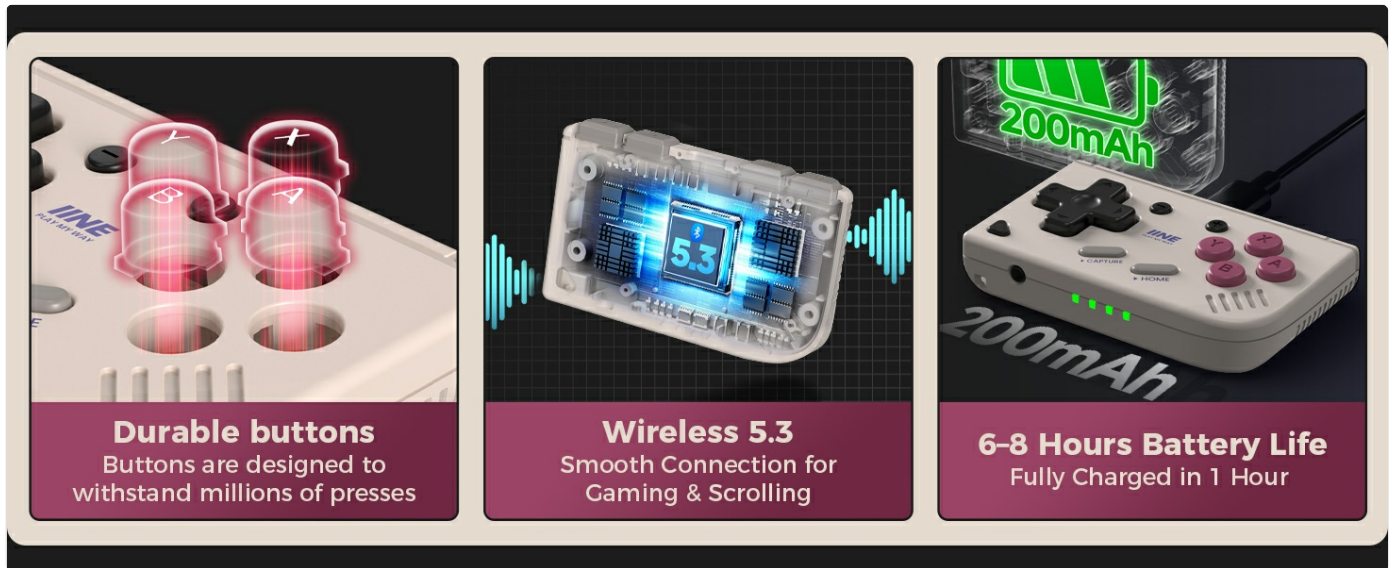 


Image: Game Controller Mode pairing instructions and special functions.



Image: NS2 Wake-Up Steps for Nintendo Switch connectivity.

Video: Demonstrates the IINE Mini Retro Ananke Gen 2 Controller's features and usage across various platforms, including Switch gaming and multimedia control.

5. OPERATING INSTRUCTIONS

5.1 Game Controller Modes

- **Single Joypad Mode:** Use for multiplayer games on compatible consoles where a single right-side joypad is required.
- **Switch Mode:** For playing games on Nintendo Switch.
- **Xinput Mode:** For PC and iOS gaming.
- **HID Mode:** For playing compatible Android games.

5.2 Multimedia, Touch & Productivity Modes

- **Multimedia Mode:** Activate by holding **[Pairing] + [Y]**. Use for remote photo capture and music control (next track, previous track, play/pause).

- **Touch Control Mode:** Activate by holding **[Pairing] + [X]**. Allows hands-free browsing of short videos and reading e-books by simulating touch gestures.
- **Mouse Mode:** Activate by holding **[Pairing] + [B]**. Simulates mouse clicks and cursor movement for navigation.
- **Keyboard Mode:** Activate by holding **[Pairing] + [A]**. Enables PPT page turning and other office-related keyboard functions.

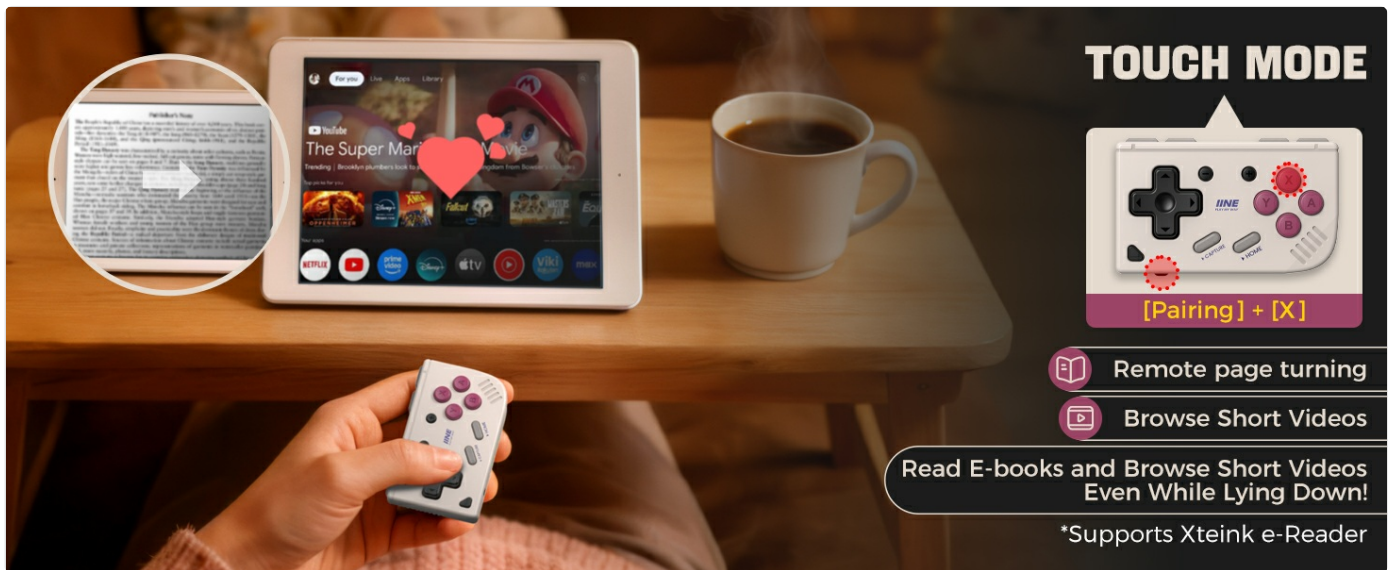 


Image: Controller in Touch Mode for hands-free media consumption.



Image: Controller in Multimedia Mode for remote photo and music control.



Image: Controller in Keyboard and Mouse Modes for productivity.

5.3 Special Functions

- **Turbo Function:** Enables rapid firing of buttons. Refer to the in-app customization for setup.
- **Joystick ↔ D-pad Switch:** Allows switching between joystick and D-pad input for certain games.

5.4 IINE App Customization

Enhance your controller experience with the official IINE app. The app allows for key remapping, turbo settings, and battery level display.

- **iOS:** Search "iine controller" in the App Store.
- **Android:** Search "iine controller" in Google Play.
- **PC:** Refer to the mobile app for help and support regarding PC customization.



Image: IINE App Customization interface.

Video: A brief overview of the IINE Retro Controller's design and basic functionality.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

- **Controller Not Pairing:** Ensure the controller is charged. Verify you are using the correct pairing mode combination (e.g., [Pairing] + [Up] for Switch). Try restarting both the controller and the device you are trying to pair with.
- **Input Lag or Disconnections:** Ensure the controller is within range of the device. Avoid interference from other wireless devices. Ensure the controller is fully charged.
- **Buttons Not Responding:** Check if the controller is properly paired and in the correct mode for the game/application. If using the IINE app, ensure no custom mappings are interfering.
- **Motion Control Issues:** Ensure the device and game support motion control. Recalibrate motion sensors if available in your device settings.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Compatible Devices	Android, iOS, PC, Nintendo Switch (NS1 & NS2)
Controller Type	Gamepad
Connectivity	Wireless 5.3
Motion Control	Built-in 6-axis Gyroscope
Battery Life	6-8 Hours (approx.)
Charging Time	1 Hour (fully charged)
Button Quantity	6 (excluding D-pad and triggers)
Color	Grey
Manufacturer	weutop



Image: Key specifications including button durability, wireless technology, and battery performance.

9. WARRANTY AND SUPPORT

The IINE Mini Retro Game Controller comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact IINE customer support.

For technical assistance, troubleshooting, or any other inquiries, please contact the IINE Brand Store directly through their official channels or the platform where the product was purchased.