

[Manuals.plus](#) /

› [ZYWUOY](#) /

› ZYWUOY Wireless Remote Control User Manual for Insta360/GoPro/Smartphones Model 117VGLO6F0A2L634ET60

ZYWUOY 117VGLO6F0A2L634ET60

ZYWUOY Wireless Remote Control User Manual

Model: 117VGLO6F0A2L634ET60

1. INTRODUCTION

Thank you for purchasing the ZYWUOY Wireless Remote Control. This device is designed to provide convenient and versatile control over your Insta360, GoPro, and other compatible action cameras, as well as smartphones. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

2. PRODUCT OVERVIEW

The ZYWUOY Wireless Remote Control is a compact and lightweight device featuring intuitive buttons for easy operation. It comes with a wrist strap for convenient portability and attachment to various accessories.



Figure 2.1: Front view of the remote control, showing the power button, mode switch button, and shutter button, along with the wrist strap and USB-C charging cable.





Figure 2.2: Side view of the remote control, highlighting the USB-C charging port for power input.

Button Functions:

- **Power Button** (⏻): Press and hold to power on/off. Short press to check battery status.
- **Mode Switch Button** (↺): Short press to cycle through different camera modes (e.g., photo, video).
- **Shutter/Record Button** (○): Press to take a photo or start/stop video recording.
- **Indicator Lights**: Provide status feedback for power, connection, and mode.

3. PACKAGE CONTENTS

Please check the package for the following items:

Product details



Figure 3.1: All items included in the package: the remote control, two wrist straps of different lengths, and a USB-C charging cable.

- 1 x ZYWUOY Wireless Remote Control
- 1 x USB-C Charging Cable
- 2 x Adjustable Wrist Straps (one short, one long)

4. SETUP

4.1 Initial Charging

Before first use, fully charge the remote control. Connect the provided USB-C cable to the remote's charging port and plug the other end into a 5V/100mA USB power source (e.g., computer USB port, wall adapter). The indicator light will show charging status and turn off or change color when fully charged.

4.2 Pairing with Your Device

To pair the remote control with your camera or smartphone:

1. Ensure the remote control is sufficiently charged.
2. Power on the remote control by pressing and holding the Power Button () until the indicator lights activate.
3. On your camera or smartphone, enable Bluetooth and enter pairing mode. Refer to your device's manual for specific instructions.
4. The remote control should appear in the list of available Bluetooth devices. Select it to initiate pairing.
5. Once paired, the indicator light on the remote will confirm a successful connection (e.g., solid blue light).

Note: Some cameras may require specific settings or apps to enable remote control functionality. Consult your camera's user manual for details.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **To Power On:** Press and hold the Power Button () for approximately 3 seconds. The indicator lights will illuminate.
- **To Power Off:** Press and hold the Power Button () for approximately 3 seconds. The indicator lights will turn off.

5.2 Taking Photos and Recording Videos

After successful pairing:

- **Switching Modes:** Short press the Mode Switch Button () to cycle through available modes on your connected device (e.g., Photo, Video, Time-lapse). The remote's indicator lights may change to reflect the selected mode.
- **Taking a Photo:** In photo mode, short press the Shutter/Record Button ().
- **Starting Video Recording:** In video mode, short press the Shutter/Record Button () to start recording.
- **Stopping Video Recording:** While recording, short press the Shutter/Record Button () again to stop recording.



Figure 5.1: The remote control comfortably worn on a wrist, allowing for easy access to controls during activities.



Figure 5.2: The remote control attached to a selfie stick, illustrating its versatility for controlling cameras from a distance.

6. COMPATIBILITY

The ZYWUOY Wireless Remote Control is designed for broad compatibility with various devices, including:

- Insta360 X5/X4/X3/Go 3S/ACE Pro 2/ACE Pro/ONE X2 series cameras
- GoPro Hero series cameras
- Smartphones (iOS and Android)

Note: Compatibility may vary depending on specific device models and firmware versions. Ensure your device's Bluetooth is enabled and updated.

7. CHARGING

The remote control features an efficient charging system:

- **Charging Input:** 5V/100mA
- **Battery Capacity:** 3.7V/120mAh
- **Full Charging Time:** Approximately 3 hours

Connect the remote to a standard USB power source using the provided USB-C cable. The indicator light will typically show red during charging and turn off or blue when fully charged.

8. MAINTENANCE

- Keep the remote control dry. Do not expose it to moisture or liquids.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Store the remote in a cool, dry place when not in use.
- Avoid extreme temperatures and direct sunlight.

9. TROUBLESHOOTING

9.1 Remote Not Powering On

- Ensure the remote is fully charged. Connect it to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Press and hold the Power Button () for 3-5 seconds.

9.2 Unable to Pair with Device

- Ensure both the remote and your device (camera/smartphone) have sufficient battery.
- Make sure Bluetooth is enabled on your device and it is in pairing mode.
- Keep the remote control within close proximity (e.g., 1 meter) to the device during pairing.
- Try restarting both the remote control and your device.
- Clear previous Bluetooth connections on your device and attempt pairing again.

9.3 Remote Not Responding

- Check if the remote is still connected to your device (indicator light status).
- Ensure the remote is within the operating range (up to 50 meters). Obstacles can reduce this range.
- Verify that your camera or smartphone app is active and ready to receive commands.
- Re-pair the remote control with your device.

10. SPECIFICATIONS

Model Number	117VGLO6F0A2L634ET60
Dimensions (Remote)	37 x 37 x 18.9 mm
Weight (Remote)	23 g
Material	ABS
Operating Range	Up to 50 meters
Battery Capacity	3.7V/120mAh
Charging Input	5V/100mA
Charging Time	Approx. 3 hours

11. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues or require technical assistance, please contact the seller or manufacturer's customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question