

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec Conga Rockstar RS80 Pet Flex Detect Cordless Stick Vacuum Cleaner User Manual

Cecotec RS80 Pet Flex Detect

Cecotec Conga Rockstar RS80 Pet Flex Detect Cordless Stick Vacuum Cleaner

User Manual

INTRODUCTION

Thank you for choosing the Cecotec Conga Rockstar RS80 Pet Flex Detect Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

Safety Instructions

- Ensure the power supply voltage matches the rating label on the charger.
- Do not use the appliance near water or in wet environments.
- Keep hair, loose clothing, fingers, and all body parts away from openings and moving parts.
- Do not vacuum flammable or combustible materials, hot ashes, or sharp objects.
- Always turn off the vacuum cleaner before attaching or detaching accessories, or performing maintenance.
- Use only original Cecotec accessories and spare parts.
- Do not operate the vacuum cleaner if it is damaged or malfunctioning. Contact customer support.

SETUP

Package Contents

Verify that all components are present:

- Conga Rockstar RS80 Pet Flex Detect main unit
- Flexible tube
- Charger
- Wall mount
- Extendable tube
- Pet brush accessory

- Crevice tool
- User Manual

Assembly

1. **Attach the main unit to the extendable tube:** Align the connectors and push until it clicks into place.
2. **Attach the floor brush to the extendable tube:** Align the connectors and push until it clicks.
3. **Charging the battery:** The battery may not be fully charged upon arrival. Connect the charger to the battery or the main unit and plug it into a power outlet. The charging indicator will illuminate.



Figure 1: Handheld unit with digital display. The display shows battery level and current operating mode.

Wall Mount Installation

Choose a suitable location near a power outlet. Mark the drilling points for the wall mount, drill holes, insert wall plugs, and secure the mount with screws. Ensure it is firmly attached before hanging the vacuum cleaner.

OPERATING INSTRUCTIONS

Powering On/Off and Mode Selection

1. Press the power button to turn the vacuum cleaner on. It will start in Eco mode.
2. Press the mode selection button to cycle through Eco, Medium, and Turbo modes.
3. Press the power button again to turn the vacuum cleaner off.



Figure 2: Vacuuming with GreenDetect LED light. The 200AW suction power ensures effective cleaning.

Using the GreenDetect LED Light

The GreenDetect LED light on the floor brush helps to reveal hidden dust and dirt particles, ensuring a thorough clean. This feature is active during operation.



Figure 3: GreenDetect LED light highlighting dust on the floor.

Using Accessories

- **Flexible Tube:** Attach the flexible tube between the main unit and the floor brush or other accessories to reach under low furniture or into tight spaces.
- **Pet Brush Accessory:** Designed for grooming pets and simultaneously vacuuming loose hair. Gently brush your pet's coat while the vacuum collects the hair.
- **Crevice Tool:** Ideal for cleaning narrow gaps, corners, and edges.



Figure 4: Utilizing the flexible tube for cleaning under furniture.



Figure 5: Using the Pet Style accessory for pet hair removal.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Tank

1. Ensure the vacuum cleaner is turned off.
2. Locate the dust tank release button, usually near the main unit.
3. Press the button to detach the dust tank.
4. Position the tank over a waste bin and open the bottom flap to empty the contents.
5. Close the flap and reattach the dust tank to the main unit until it clicks securely.



Figure 6: Emptying the dust tank.

Cleaning the HairLess Brush

The HairLess Brush features a V-shaped design and serrated edges to prevent tangles. Periodically inspect the brush for any trapped hair or debris.

1. Turn off the vacuum cleaner and detach the floor brush.
2. Locate the brush roll release mechanism, usually on the side of the brush head.
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and secure it.



Figure 7: The HairLess brush with XXL capacity, designed to prevent tangles.

Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain suction power. It is recommended to clean it every 2-4 weeks, depending on usage.

1. Remove the dust tank.
2. Carefully remove the HEPA filter from the dust tank.
3. Tap the filter gently over a waste bin to dislodge dust. Do not wash the HEPA filter with water unless specified in the product documentation.
4. Reinsert the dry HEPA filter and reattach the dust tank.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on	Battery is not charged or not properly installed.	Charge the battery fully. Ensure the battery is securely clicked into place.
Low suction power	Dust tank is full. Filter is clogged. Brush roll is obstructed.	Empty the dust tank. Clean or replace the HEPA filter. Remove any obstructions from the brush roll.
Brush roll not spinning	Hair or debris tangled in the brush. Brush roll not properly installed.	Clean the brush roll of any tangles. Ensure the brush roll is correctly reinserted.
Short battery runtime	Operating in Turbo mode. Battery not fully charged. Battery degradation.	Use Eco or Medium mode for longer runtime. Ensure battery is fully charged. If battery life significantly decreases, consider replacing the battery.

SPECIFICATIONS

- **Model Name:** Conga Rockstar RS80 Pet Flex Detect
- **Model Number:** A01_EU01_122569
- **Brand:** Cecotec
- **Power:** 600 Watts
- **Suction Power:** 200 AW
- **Battery:** 33.6V MAX, 2500 mAh (Removable)
- **Runtime:** Up to 65 minutes (Eco mode, handheld); Up to 60 minutes (Eco mode, motorized tube/foot)
- **Filter Type:** HEPA Filter
- **Item Weight:** 1.22 Kilograms
- **Item Dimensions (L x W x H):** 10 x 25.5 x 37.5 centimeters
- **Color:** Grey
- **Special Features:** HairLess anti-tangle brush, GreenDetect LED light, Flexible tube, Pet brush accessory
- **Recommended Uses:** Bed, Car, Pet Hair, All floor types
- **Spare Parts Availability:** 10 Years

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Cecotec website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, spare parts, or any questions regarding your Cecotec Conga Rockstar RS80 Pet Flex Detect, please contact Cecotec customer service:

- **Website:** www.cecotec.com
- **Email:** Refer to the website for specific contact forms or email addresses.
- **Phone:** Refer to the website for regional contact numbers.

When contacting support, please have your product model number (A01_EU01_122569) and purchase date available.

