

[Manuals.plus](#) /

> [Arkaia](#) /

> Arkaia Replacement Remote Control for NORDMENDE ND39N2400T - User Manual

Arkaia ND39N2400T

Arkaia Replacement Remote Control

For NORDMENDE ND39N2400T

PRODUCT OVERVIEW

This Arkaia replacement remote control is specifically designed for the NORDMENDE ND39N2400T device. It offers full functionality comparable to the original remote, ensuring seamless operation of your television.



Figure 1: Front view of the Arkaia replacement remote control, showing its layout and approximate dimensions (19cm length, 4.7cm width).

SETUP INSTRUCTIONS

The Arkaia replacement remote control is pre-programmed for your NORDMENDE ND39N2400T device and requires no additional programming. Follow these steps to begin use:

1. **Verify Compatibility:** Ensure your device is a NORDMENDE ND39N2400T. This remote is not a universal remote and

is not suitable for other models.

2. **Install Batteries:** Open the battery compartment cover on the back of the remote control. Insert two (2) AAA batteries (not included), ensuring correct polarity (+/-).
3. **Close Compartment:** Securely close the battery compartment cover.
4. **Ready for Use:** The remote control is now ready for immediate use.

Important: Batteries are not included and must be purchased separately.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology, requiring a direct line of sight between the remote and your NORDMENDE ND39N2400T device. Point the remote directly at the television's IR receiver for optimal performance.





Figure 2: A hand holding the remote control, illustrating the typical grip and pointing direction during use.

Key Functions:

- **Power Button ():** Turns the television on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Volume Up/Down (V+/V-):** Adjusts the audio volume.
- **Channel Up/Down (P+/P-):** Changes the television channel.
- **Mute Button ():** Mutes or unmutes the sound.
- **Navigation Pad (▲ ▼ ◀ ▶ and OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Accesses the television's main menu.
- **Source Button:** Selects input sources (e.g., HDMI, AV).
- **Smart TV/Video Buttons:** Dedicated buttons for smart TV functions and video services.

Note: This remote control does NOT support voice control or pointer functions.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's response becomes sluggish or stops working.

Always replace both batteries at the same time with new AAA batteries.

- **Storage:** Store the remote control in a dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly and are not depleted. Replace with fresh AAA batteries if necessary.
 - Ensure there is a clear line of sight between the remote control and the television's IR receiver. Remove any obstructions.
 - Confirm that the remote control is indeed for the NORDMENDE ND39N2400T model.
- **Some Functions Not Working:**
 - While 99% of functions are adopted, some specific or advanced functions (e.g., PVR, 3D, DVD specific controls) might require referring to your television's original manual for alternative access methods if not directly available on this replacement remote.
 - Ensure you are pressing the correct button for the desired function.
- **Interference:** Strong light sources or other infrared devices can sometimes interfere with the remote's signal. Try operating the remote in a different environment if interference is suspected.

SPECIFICATIONS

Feature	Specification
Brand	Arkaia
Model Compatibility	NORDMENDE ND39N2400T
Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Dimensions (Approx.)	19 cm (Length) x 4.7 cm (Width)
Special Features	Pre-programmed, no setup required

WARRANTY AND SUPPORT

This Arkaia replacement remote control comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. For warranty claims or technical support, please contact your retailer or the Arkaia customer service department. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question