

Monster MS62120

Monster S620 Bluetooth Speaker User Manual

Model: MS62120

[Introduction](#) [Product](#)

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Safety](#) [Warranty](#)

1. INTRODUCTION

Thank you for purchasing the Monster S620 Bluetooth Speaker. This manual provides important information regarding the setup, operation, and maintenance of your speaker. Please read it carefully before use and retain it for future reference.

Package Contents:

- Monster S620 Bluetooth Speaker
- USB-C Charging Cable
- Quick Start Guide (Included in package)

2. PRODUCT OVERVIEW

The Monster S620 is a portable, waterproof Bluetooth speaker designed for high-quality audio playback. It features True Wireless Stereo (TWS) pairing, a built-in microphone for calls, and multiple input options.

Monster S620 60W

True Wireless Bluetooth Speaker



Image: Front view of the Monster S620 Bluetooth Speaker, showcasing its cylindrical design and speaker grilles.

Speaker Components and Controls:

Familiarize yourself with the speaker's buttons and ports:

Monster Multi-Functional Speaker



Image: Top-down view of the Monster S620 speaker, highlighting the control buttons (Power, Volume, Play/Pause, Bluetooth) and the covered ports for USB-C charging and TF card slot.

1. **Power Button:** Press and hold to power on/off. Short press to check battery status.
2. **Play/Pause Button:** Press to play or pause music. Press to answer/end calls. Hold to reject calls.
3. **Volume Down / Previous Track Button:** Short press for volume down. Long press for previous track.
4. **Volume Up / Next Track Button:** Short press for volume up. Long press for next track.
5. **Bluetooth / TWS Button:** Short press to enter Bluetooth pairing mode. Long press to initiate TWS pairing.
6. **LED Indicator:** Displays power, charging, and Bluetooth status.
7. **USB-C Charging Port:** For charging the speaker.
8. **TF Card Slot:** For playing music directly from a MicroSD card.
9. **Microphone:** For hands-free calls.

3. SETUP

3.1 Charging the Speaker

Before first use, fully charge the speaker. Use the provided USB-C cable and connect it to a 5V/2A power adapter (not included).

- The LED indicator will glow red during charging.
- The LED indicator will turn off or change color (depending on model) when fully charged.

3.2 Powering On/Off

- **To Power On:** Press and hold the **Power Button** for 2-3 seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power Off:** Press and hold the **Power Button** for 2-3 seconds until you hear an audible prompt and the LED indicator turns off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

To connect your Monster S620 speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and the LED indicator is flashing blue, indicating it is in pairing mode. If not, short press the **Bluetooth Button**.
2. Enable Bluetooth on your device (smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "**Monster S620**" from the list.
4. Once connected, the LED indicator will turn solid blue, and you will hear a confirmation sound.

4.2 True Wireless Stereo (TWS) Pairing

You can pair two Monster S620 speakers together for a stereo sound experience. Ensure both speakers are charged and powered off before starting.

TRUE WIRELESS STEREO SURROUND

Just connect 2 Monster speakers to deliver 120W of enjoy 360° bass surround audio



Image: Two Monster S620 speakers wirelessly connected to each other and a smartphone, illustrating the True Wireless Stereo (TWS) pairing feature.

1. Power on both Monster S620 speakers. Do not connect them to any Bluetooth device yet.
2. On one of the speakers (this will be the primary speaker), long press the **Bluetooth Button** for 2-3 seconds. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation sound, and the LED indicator on the primary speaker will flash blue (ready for device pairing), while the secondary speaker's LED will be solid blue.
4. Now, connect your Bluetooth device to the primary speaker as described in Section 4.1.

4.3 Music Playback

- **Play/Pause:** Press the **Play/Pause Button**.
- **Volume Up:** Short press the **Volume Up Button**.
- **Volume Down:** Short press the **Volume Down Button**.
- **Next Track:** Long press the **Volume Up Button**.
- **Previous Track:** Long press the **Volume Down Button**.

4.4 Call Functions

When connected to your smartphone via Bluetooth, you can manage calls directly from the speaker:

- **Answer/End Call:** Press the **Play/Pause Button**.
- **Reject Call:** Press and hold the **Play/Pause Button** for 2 seconds.

4.5 TF Card Mode

The speaker supports playing audio files directly from a TF (MicroSD) card.

1. Insert a TF card (with supported audio files) into the TF card slot.
2. The speaker will automatically switch to TF Card Mode and begin playing music.
3. Use the Play/Pause and Volume/Track buttons to control playback.

5. MAINTENANCE

5.1 Cleaning

- Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the charging port cover is securely closed to maintain IPX8 waterproof rating.

5.2 Storage

- Store the speaker in a cool, dry place away from extreme temperatures.
- If storing for an extended period, charge the speaker to at least 50% every three months to preserve battery life.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker LED is flashing blue. Enable Bluetooth on your device. Move device closer to speaker (within 33 feet). Forget "Monster S620" on your device and try pairing again.
No sound or low volume.	Volume too low on speaker or device; speaker not connected.	Increase volume on both speaker and connected device. Ensure speaker is successfully paired.
TWS pairing fails.	Speakers already connected to a device; incorrect pairing procedure.	Ensure both speakers are disconnected from any Bluetooth devices. Follow TWS pairing instructions carefully (Section 4.2).
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move away from other electronic devices.

7. SPECIFICATIONS

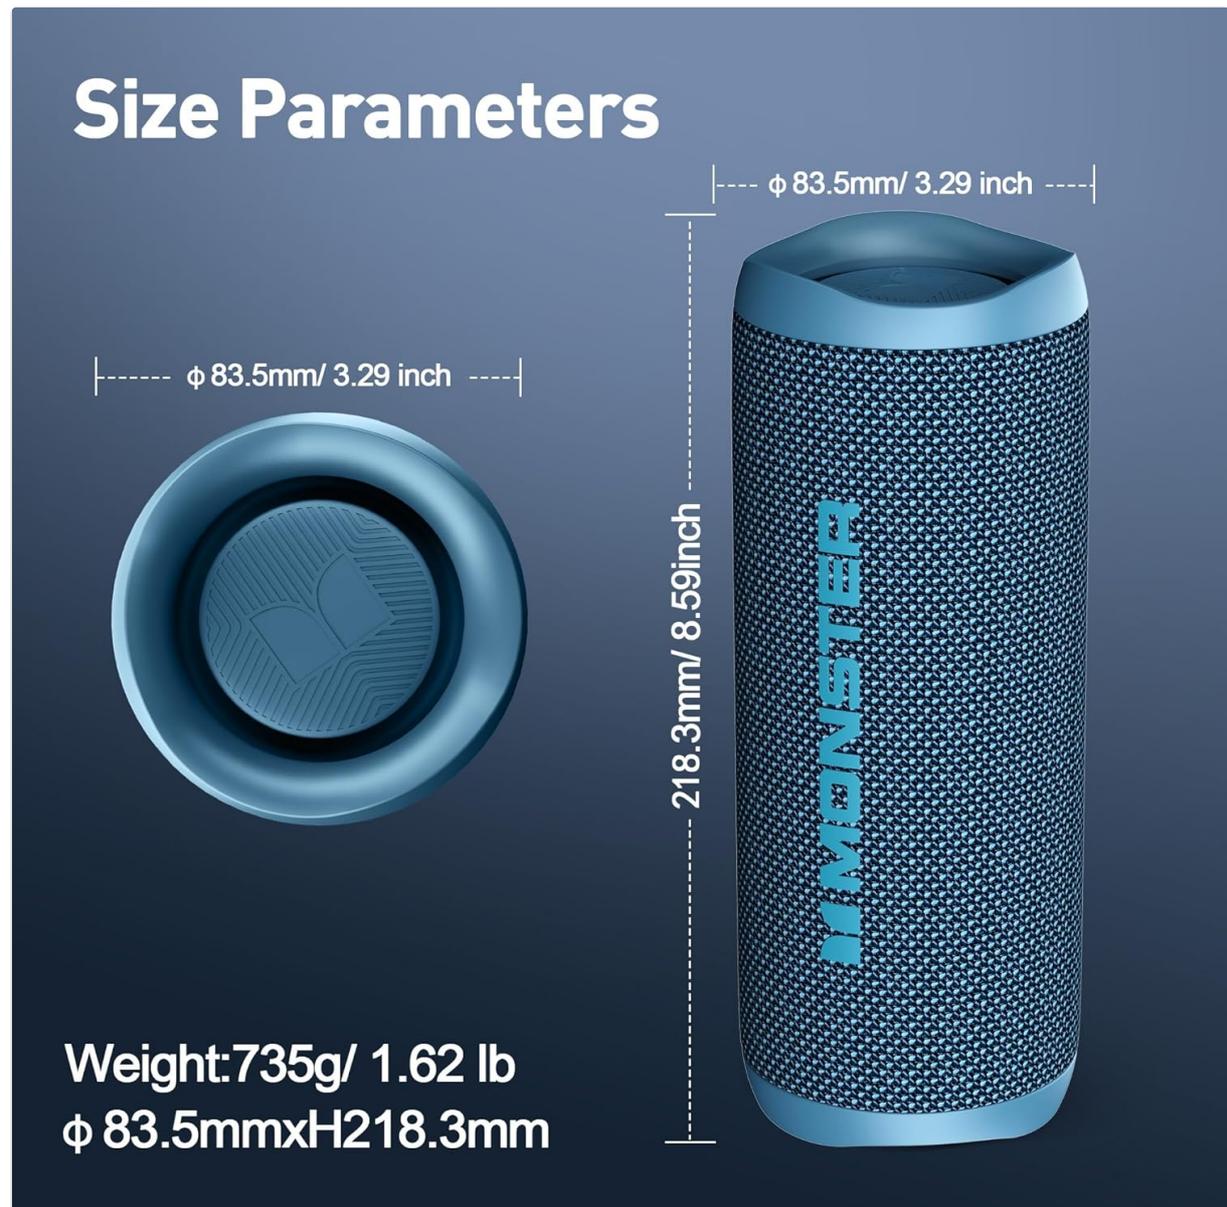


Image: Diagram showing the dimensions of the Monster S620 Bluetooth Speaker (83.5mm diameter, 218.3mm height) and its weight (735g / 1.62 lb).

- **Model:** MS62120
- **Bluetooth Version:** 5.4
- **Output Power:** 60W
- **Frequency Response:** 80Hz
- **Bluetooth Range:** Up to 33 feet (10 meters)
- **Water Resistance:** IPX8 (Submersible up to 1 meter for 30 minutes)
- **Battery Capacity:** 5200mAh (estimated based on common product features, not explicitly stated in provided data but implied by usage duration in A+ content)
- **Charging Port:** USB-C
- **Dimensions (D x W x H):** 3.15" x 3.15" x 8.58" (80mm x 80mm x 218mm)
- **Weight:** 1.85 pounds (0.84 kg)
- **Audio Input:** Bluetooth, TF Card

IPX8 Waterproof



Image: The Monster S620 speaker shown outdoors in the rain, emphasizing its IPX8 waterproof capability, along with icons for Bluetooth 5.4, hiking, camping, and biking.

8. SAFETY INFORMATION

- Do not disassemble, repair, or modify the speaker. This may cause fire, electric shock, or complete damage to the product.
- Do not expose the speaker to extreme temperatures (above 45°C or below -10°C).
- Keep the speaker away from direct heat sources, open flames, and strong magnetic fields.
- Ensure the charging port cover is fully sealed when using the speaker near water to maintain its IPX8 rating.
- Avoid prolonged listening at high volumes to prevent hearing damage.
- Dispose of the speaker and its battery responsibly according to local regulations.

9. WARRANTY AND SUPPORT

The Monster S620 Bluetooth Speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or customer service, please contact the retailer or visit the official Monster website.

