

## Beelicious Pro BAF813

# Beelicious Pro 12QT Large Double Air Fryer

## MODEL: BAF813 - INSTRUCTION MANUAL

[Safety Information](#)[Product Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

## 1. Safety Information

Please read all instructions carefully before using the Beelicious Pro 12QT Large Double Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the appliance is connected to a grounded outlet with the correct voltage (120 Volts). Do not immerse the cord, plug, or appliance in water or other liquids.
- **Hot Surfaces:** The air fryer generates heat and steam during operation. Always use oven mitts when handling hot surfaces or removing baskets. Do not touch hot surfaces directly.
- **Ventilation:** Place the air fryer on a stable, heat-resistant surface, at least 6 inches (15 cm) away from walls or other appliances to allow for proper air circulation. Do not block any ventilation openings.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when any appliance is used near children.
- **Intended Use:** This appliance is for household use only. Do not use it for commercial purposes or outdoors.
- **Food Placement:** Do not overfill the baskets. Ensure food does not come into direct contact with the heating element.
- **Unplug When Not in Use:** Always unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.

## 2. Product Overview

The Beelicious Pro 12QT Large Double Air Fryer (Model BAF813) is designed for efficient and versatile cooking with its

dual-basket system and advanced heating technology.



Front view of the Beelicious Pro 12QT Large Double Air Fryer with both baskets closed, showcasing its sleek matte black design.

#### Key Features:

- **Dual Baskets with Space-Saving Design:** Two independent baskets allow simultaneous cooking without flavor transfer. The stacked design optimizes counter space.
- **12QT Smart Split Layout:** Features a 5.5QT upper zone for larger items like a whole chicken and a 6.5QT lower

zone for longer items such as fish or steaks.

- **360° SyncHeat Airflow Technology:** High-speed air circulation ensures even cooking and crispy results with up to 80% less fat.
- **Unified Zone Cooking System:** Includes Smart Finish to synchronize cooking times for different foods and Match Cook to apply identical settings to both baskets.
- **Food-Safe Materials:** Constructed with a premium metal interior and PFAS-free, silicone-based nonstick coating for durability and safety. Baskets are dishwasher-safe.
- **Versatile Presets & Intuitive Controls:** One-touch presets for Air Fry, Roast, Bake, Broil, Preheat, and Dehydrate, controlled via a streamlined digital touchscreen with a dial.

# SyncHeat™ 360° Airflow Heating System

Less Oil, More Flavor, Faster Cooking

**2400** RPM

Ultra-Fast Spin

**1650W** Power

Rapid-Heat Core

**±5°F** Precision

Smart Temp Control



The dual-basket design allows for cooking different foods at different settings simultaneously, such as carbohydrates in the upper basket and protein & vegetables in the lower basket.

# Twice the Power, Half the Space

More Space for Living, More Meals for Sharing



**Compact**  
Vertical Design



**45% Less**  
Counter Space



**2X Faster**  
Faster Cooking



Depth includes front handle and rear ventilation clearance.

The 360° SyncHeat Airflow Technology ensures even heat distribution for consistent cooking results in both baskets.

## Smart Sync Cook for Perfect Timing

Synchronize Both Baskets to Finish Cooking Dishes at the Same Time



The vertical stacked design offers significant space savings on your countertop while providing a generous 12QT capacity.

### Internal Components & Safety Features:

 **Beelicious Pro**

## 12QT Family-Size Dual-Basket Cooker

More Space, More Flexibility, More Flavor!

**Carbohydrates:**

350°F | 15min

**Protein & Veggies:**

The air fryer features a premium metal interior for enhanced durability and an auto shut-off drawer for safety when baskets are pulled out.



**SHAKE / Turn Reminder**  
Auto Halfway Alert for Perfectly Even Results

The image shows the control panel of the Beelicious Pro Dual-Basket Cooker. It features a digital display showing '00:20' and '400°F'. The panel includes buttons for 'PREHEAT', 'AIR FRY', 'BROIL', 'BAKE', 'ROAST', and 'DEHYDRATE'. There are also buttons for 'SHAKE / TURN', 'WATCH COOK', 'PAUSE', and 'TIME / TEMP'. A 'SHAKE' button is highlighted with a dashed line. To the right, there is a graphic showing a basket of fries being shaken, with a circular inset showing the fries cooking evenly. Below this, there are two buttons: 'SHAKE' and '✓ Cook Evenly'.

The baskets are designed with a 100% silicone-based, PFAS-free coating, ensuring food safety and easy cleanup, including being dishwasher-safe.

### Product Video Overview:

This video provides a general overview of the Beelicious Pro 12QT Family-Size Dual-Basket Cooker, demonstrating its key features and benefits for everyday cooking.

## 3. Setup

### Unpacking:

- Carefully remove all packaging materials from the air fryer and its accessories.
- Check that all components are present and undamaged.

### Initial Cleaning:

- Before first use, wipe the exterior of the appliance with a damp cloth.
- Wash the cooking baskets and crisper plates with warm, soapy water. Rinse thoroughly and dry completely. The baskets are dishwasher-safe.
- Do not use abrasive cleaners or scouring pads, as this may damage the nonstick coating.

#### Placement:

- Place the air fryer on a stable, level, heat-resistant surface.
- Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper ventilation.
- Do not place the air fryer near flammable materials or under cabinets that may be damaged by heat or steam.

## Dual Baskets, Double the Flavor

Cook Your Whole Meal at Once

**Carbohydrates:**

**350°F | 15min**

**Protein & Veggies:**

**400°F | 20min**

Temperature: 100-400°F  
Time Range: 1-60 Min

Ensure proper placement and ventilation for optimal performance and safety.

## 4. Operating Instructions

---

### Control Panel Overview:

The air fryer features a digital touchscreen with a central dial for easy control. The display shows time, temperature, and selected cooking zones.

- **Power Button:** Turns the appliance on/off.
- **Dial:** Used to select cooking functions, adjust time, and temperature.
- **Time/Temp Button:** Toggles between time and temperature adjustment.
- **Zone 1 (Up) / Zone 2 (Down) Buttons:** Selects which basket's settings to adjust.
- **Preset Functions:** Air Fry, Roast, Bake, Broil, Preheat, Dehydrate.
- **Smart Finish:** Synchronizes cooking times for different settings in each basket to finish simultaneously.
- **Match Cook:** Copies settings from one basket to the other for uniform cooking.
- **Shake:** Activates a reminder to shake or flip food during cooking.

### Basic Operation:

1. Place food into the desired cooking basket(s). Do not overfill.
2. Insert the basket(s) firmly into the air fryer.
3. Press the Power button to turn on the appliance.
4. Select the desired cooking zone (1 or 2) using the '1 Up' or '2 Down' buttons.
5. Turn the dial to select a preset function (e.g., Air Fry, Roast) or manually set the time and temperature using the 'Time/Temp' button and dial.
6. Press the Play/Pause button to start cooking.
7. The air fryer will beep when cooking is complete. Carefully remove the baskets and food.

### Using Smart Finish Mode:

Smart Finish allows you to cook two different foods with different settings, ensuring both finish at the same time. The air fryer will automatically hold the start of the shorter cooking cycle.

1. Load food into both baskets.
2. Set the cooking time and temperature for Zone 1.
3. Set the cooking time and temperature for Zone 2.
4. Press the 'Smart Finish' button. The display will show 'HOLD' for the zone with the shorter cooking time.
5. Press the Play/Pause button to start. Both zones will finish simultaneously.

# 12QT Flexible Capacity, Smarter Fit

Engineered to Fit More of What You Cook



**2x2.5 lbs**  
French Fries



**2x10 pcs**  
Chicken Wings



**2x2.5 lbs**  
Whole Chicken



**2x3 lbs**  
Steak



**2x8 Inches**  
Pizza

Smart Finish ensures different dishes are ready at the same time, optimizing meal preparation.

## Using Match Cook Mode:

Match Cook is ideal when you want to cook the same food in both baskets with identical settings.

1. Load food into both baskets.
2. Set the desired cooking time and temperature for Zone 1.
3. Press the 'Match Cook' button. The settings from Zone 1 will automatically be applied to Zone 2.

4. Press the Play/Pause button to start cooking.

### Shake Reminder Function:

For certain foods, the air fryer will prompt you to shake or flip the contents of the basket halfway through the cooking cycle to ensure even crisping. When the 'SHAKE' icon appears, carefully remove the basket, shake or flip the food, and reinsert the basket to resume cooking.

### Video Guide for Smart Finish and Match Cook:


This video demonstrates how to effectively use the Smart Finish and Match Cook modes on your Beelicious Pro air fryer for synchronized and consistent cooking results.

## 5. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### Daily Cleaning:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
- Remove the cooking baskets and crisper plates. Wash them with warm, soapy water or place them in the dishwasher.
- For stubborn food residue, soak the baskets in warm, soapy water for 10-15 minutes before cleaning.
- Clean the interior of the air fryer with a damp cloth. If necessary, use a soft brush to remove any food debris from the heating element, ensuring the appliance is unplugged.

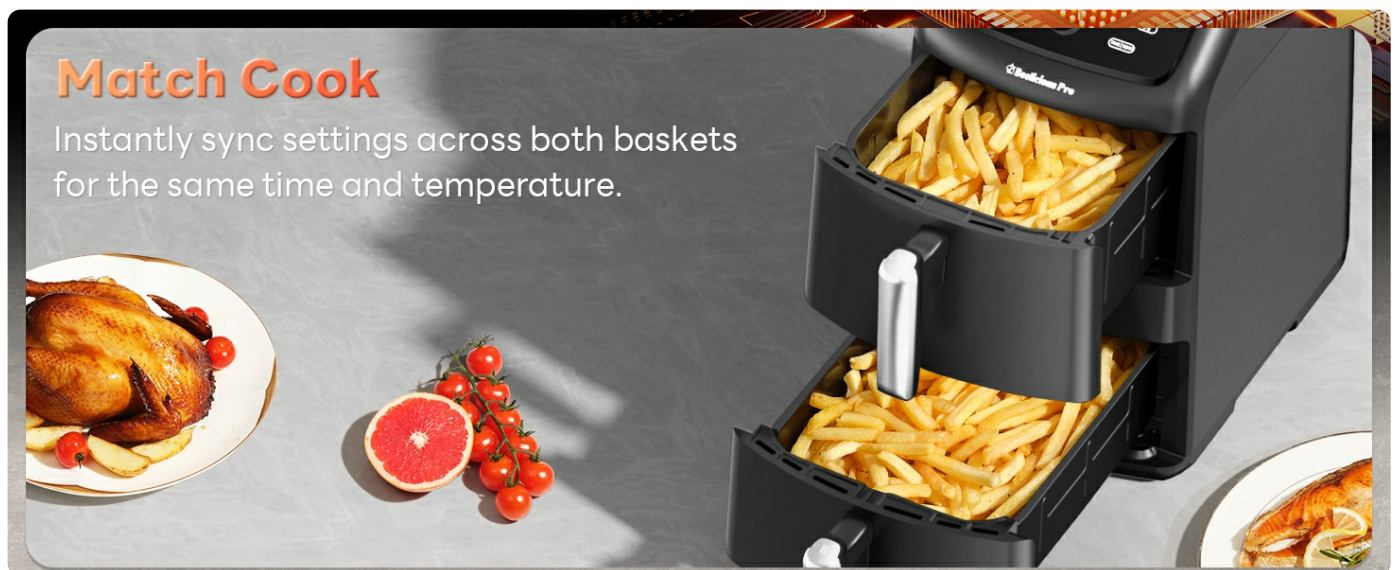

The nonstick coating on the baskets ensures easy food release and simplifies cleaning.



Both cooking baskets and crisper plates are dishwasher-safe for convenient and thorough cleaning.

### Storage:

Ensure the air fryer is clean and dry before storing. Store it in a cool, dry place.

## 6. Troubleshooting

If you encounter any issues with your Beelicious Pro air fryer, please refer to the following common problems and solutions:

| Problem                                | Possible Cause                                                                       | Solution                                                                                                                                                                                |
|----------------------------------------|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Air fryer does not turn on.            | Appliance not plugged in;<br>Power button not pressed;<br>Basket not fully inserted. | Ensure the power cord is securely plugged into a working outlet.<br>Press the Power button. Push the cooking basket(s) firmly until they click into place.                              |
| Food is not cooked evenly.             | Baskets are overcrowded;<br>Food not shaken/flipped;<br>Incorrect temperature/time.  | Do not overcrowd baskets; cook in smaller batches if necessary. Use the 'SHAKE' reminder or manually shake/flip food halfway through.<br>Adjust cooking time and temperature as needed. |
| White smoke coming from the appliance. | Grease residue from previous use; High-fat food cooking.                             | Clean the baskets and interior thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.                                                          |
| Food is not crispy.                    | Too much moisture in food;<br>Baskets overcrowded;<br>Incorrect temperature/time.    | Pat food dry before air frying. Avoid overcrowding baskets. Increase cooking time or temperature slightly.                                                                              |

## 7. Specifications

| Feature      | Detail         |
|--------------|----------------|
| Brand Name   | Beelicious Pro |
| Model Number | BAF813         |

| Feature                        | Detail                                                   |
|--------------------------------|----------------------------------------------------------|
| Product Dimensions (D x W x H) | 16.61" x 10.35" x 16.81"                                 |
| Color                          | Matte Black                                              |
| Capacity                       | 12 Quarts (5.5QT upper, 6.5QT lower)                     |
| Material                       | Plastic (exterior), Silicone (inner baskets)             |
| Output Wattage                 | 1650 Watts                                               |
| Voltage                        | 120 Volts                                                |
| Control Method                 | Touch                                                    |
| Min Temperature Setting        | 100 Degrees Fahrenheit                                   |
| Max Temperature Setting        | 400 Degrees Fahrenheit                                   |
| Air Frying Technology          | 360° SyncHeat Airflow Technology                         |
| Nonstick Coating               | Yes (PFAS-Free, Food-Grade Silicone-Based)               |
| Dishwasher Safe                | Yes (baskets)                                            |
| Special Features               | Match Cook Function, Smart Finish Function, Programmable |

## 8. Warranty & Support

Beelicious Pro is committed to providing quality products and customer satisfaction.

### Warranty Information:

This Beelicious Pro appliance comes with a**2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

### Customer Support:

For technical consultation, troubleshooting assistance, or warranty inquiries, please contact Beelicious Pro customer service:

- **Via Amazon:** Use the messaging system on the Amazon product page.
- **Via Hotline:** Refer to the contact information provided in your product packaging.

Our support team aims to resolve issues within 2 working days.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**