

[Manuals.plus](#) /

› [Cubiker](#) /

› Cubiker 32x19 Electric Standing Desk User Manual

Cubiker 32x19

Cubiker 32x19 Electric Standing Desk User Manual

Model: 32x19 | Brand: Cubiker

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Cubiker 32x19 Electric Standing Desk. This electric height-adjustable desk allows for effortless transitions between sitting and standing positions, promoting better posture and reducing fatigue. It features a smooth lifting range from 28.3 inches to 46.5 inches.



Image: The Cubiker 32x19 Electric Standing Desk with a maple top and white frame, set up in a home office.

SETUP AND ASSEMBLY

The Cubiker Electric Standing Desk is designed for quick and straightforward assembly. All necessary tools and clear instructions are included to facilitate the setup process.

Assembly Steps Overview:



Image: A visual guide illustrating the four main steps for assembling the Cubiker standing desk, indicating a 30-minute installation time.

1. Attach the crossbeam to the sturdy legs.
2. Secure the adjustable feet for stability.
3. Assemble the crossbeam and side wings to form the frame structure.
4. Place and secure the tabletop onto the frame for a solid desk.

Product Dimensions:

Product Dimensions

Versatile Sizes For All

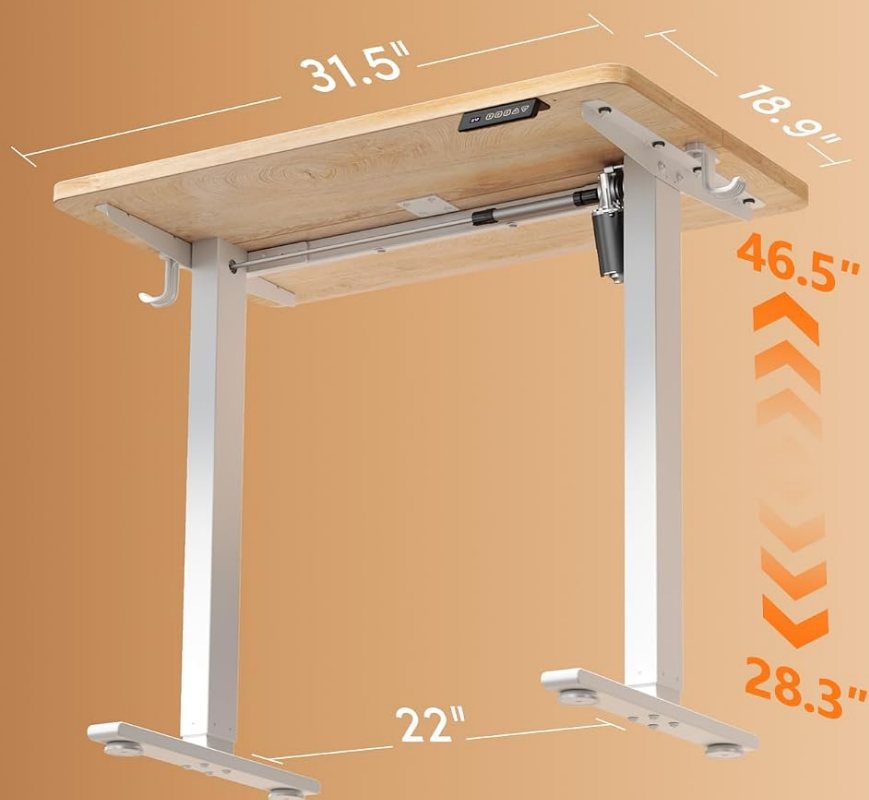


Image: Detailed dimensions of the desk, including a width of 31.5 inches, depth of 18.9 inches, and height adjustment range from 28.3 to 46.5 inches.

For a visual guide, please refer to the official assembly video:

Your browser does not support the video tag.

Video: Official Cubiker Standing Desk Assembly Video. This video provides step-by-step instructions for setting up your desk.

OPERATING INSTRUCTIONS

Your Cubiker Electric Standing Desk features smooth electric height adjustment and memory presets for convenience.

Height Adjustment:

- The desk offers a height range from 28.3 inches (sitting) to 46.5 inches (standing).
- Use the up (^) and down (v) arrow buttons on the control panel to adjust the desk to your desired height.
- The motor operates quietly, under 45 dB, ensuring minimal disturbance.



Image: A visual representation of the desk's height adjustment capabilities, showing users comfortably working in both sitting (28.3") and standing (46.5") positions.

Memory Presets:

The intelligent controller allows you to save up to three preferred height settings for quick recall.

Intelligent Controller

Customize Your Perfect Height Presets



28.3"
Sit & Focus



35.7"
Stand & Ease Up



46.5"
Walk & Stay Active

Image: A close-up of the desk's control panel, highlighting the digital display and three programmable memory buttons for height presets.

1. Adjust the desk to your desired height using the up/down buttons.
2. Press the "M" button, then press one of the numbered preset buttons (1, 2, or 3) to save the current height.
3. To recall a saved height, simply press the corresponding numbered button.

MAINTENANCE

To ensure the longevity and optimal performance of your Cubiker Electric Standing Desk, follow these general maintenance guidelines:

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.

- **Cable Management:** Regularly check and organize cables to prevent tangling or damage, which can interfere with the desk's movement.
- **Weight Distribution:** Distribute weight evenly across the desktop. Avoid placing excessive weight on one side.
- **Environmental Conditions:** Use the desk in a stable indoor environment. Avoid extreme temperatures or high humidity.

The desk is constructed with low-VOC materials, contributing to a healthier indoor environment.

TROUBLESHOOTING

If you encounter any issues with your Cubiker Electric Standing Desk, please refer to the following common troubleshooting tips. For further assistance, contact customer support.

Common Issues and Solutions:

Issue	Possible Cause	Solution
Desk not moving / No response	Power cable disconnected, motor cable loose, overload.	Check all cable connections. Reduce weight on the desktop. Perform a reset (refer to FAQ video).
Unusual noise or jerky movement	Uneven weight distribution, loose components.	Ensure weight is evenly distributed. Check that all assembly screws are tightened.
Error Code E07 (Load / Motor Error)	Weight exceeds 50kg (110 lbs) limit, or a cable is loose.	Reduce the weight on the desktop. Verify all motor cables are secure. Perform a Reset.

For additional troubleshooting and frequently asked questions, please watch the official FAQ video:

Your browser does not support the video tag.

Video: Official Cubiker Standing Desk FAQ Video. This video addresses common questions and troubleshooting steps.

SPECIFICATIONS

Brand	Cubiker
Model	32x19 Electric Standing Desk
Shape	Rectangular
Product Dimensions (D x W x H)	20"D x 32"W x 27"H (minimum height)
Color	Maple Top / White Frame
Style	Modern

Base Material	Alloy Steel
Top Material Type	Engineered Wood (Laminated)
Minimum Height	28.3 inches
Maximum Height	46.5 inches
Item Weight	31 pounds
Maximum Weight Capacity	176 lbs (80 kg)
Number of Height Positions	4 (including 3 memory presets)

– “

**365 Days of
Reliable Coverage**

If you have any concerns, please contact us immediately. We will resolve any issues promptly and professionally.

”

Highly Recommended by Millions of Customers

Best upgrade I've made to my workspace. Sitting less, feeling better #Cubiker#

14,385 Likes
Wonderful desk!!
Worth every penny
View all 2,110 comments

Why didn't I buy this sooner?
This desk changed how I work every day.

Cubiker
New Experiences in Life

CARB

FCC

ETL
LISTED US

Quality Assuring Budget Saving

Our frame has passed the certification of FCC, the table board has passed the certification of EPA and CARB and the power supply accessories have passed the certification of ETL

Image: The desk demonstrating its stability and maximum weight capacity of 176 lbs.

WARRANTY AND SUPPORT

Warranty Coverage:

Your Cubiker Electric Standing Desk comes with**365 Days of Reliable Coverage**. This warranty ensures that your product is free from defects in material and workmanship under normal use.

Customer Support:

If you have any concerns, questions, or require assistance with your product, please contact Cubiker customer support. Our team is dedicated to resolving any issues promptly and professionally.

For contact information, please refer to the Cubiker official website or your purchase documentation.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question