

Jugbow DT-57

Jugbow DT-57 Dog Training Collar Instruction Manual

Model: DT-57

Brand: Jugbow

INTRODUCTION

The Jugbow DT-57 Dog Training Collar is designed to assist in effective and humane dog training. It features three humanized training modes: beep, vibration, and safe static, along with an LED light for enhanced visibility. With an impressive 4200FT remote range and IPX8 waterproof rating for the collar, it is suitable for various training environments and weather conditions. The collar is rechargeable and designed to fit dogs weighing 10-120 lbs with neck sizes from 7.8-20 inches.

Please read this manual thoroughly before using the product to ensure proper operation and the safety of your pet.

PACKAGE CONTENTS

The Jugbow DT-57 Dog Training Collar package includes the following items:

- 1 x Remote Control
- 1 x Receiver (Collar Unit)
- 1 x Collar Strap
- 1 x 2-in-1 Fast Charging Cable
- 1 x Remote Lanyard
- 1 x Pair of Long Silicone Contact Points

- 1 x Pair of Conductive Silicone Caps
- 1 x Test Light Tool
- 1 x User Manual
- 1 x Quick Operation Guide



Image: The Jugbow DT-57 Dog Training Collar package showing the remote, receiver, collar strap, charging cable, and accessories.

Your browser does not support the video tag.

Video: A detailed look at all the items included in the Jugbow DT-57 Dog Training Collar package.

SETUP

1. Charging the Device

Before initial use, ensure both the remote control and the receiver collar are fully charged. Use the provided 2-in-1 fast charging cable.

1. Connect the 2-in-1 charging cable to a USB power adapter (not included).
2. Plug one end of the charging cable into the remote control and the other end into the receiver collar.
3. The devices will fully charge in approximately 2 hours. The remote has a standby time of up to 45 days, and the collar up to 35 days.

2 Hours Quick charge & Ultra Last Long Battery



Image: Illustration of the Jugbow remote and collar being charged simultaneously with the 2-in-1 fast charging cable.

Your browser does not support the video tag.

Video: Step-by-step guide on how to properly charge the Jugbow dog training collar and remote control.

2. Installing and Adjusting the Collar Strap

The collar strap is adjustable to fit various dog sizes (10-120 lbs, neck sizes 7.8-20 inches).

1. Thread the collar strap through the receiver unit.
2. Place the collar on your dog's neck, ensuring a snug but comfortable fit. You should be able to fit two fingers between the collar and your dog's neck.

3. Fasten the strap into the collar hole.
4. If the strap is too long, you can fold and cut off the excess.
5. Install the silicone covers onto the contact prongs to make them softer and prevent skin friction.

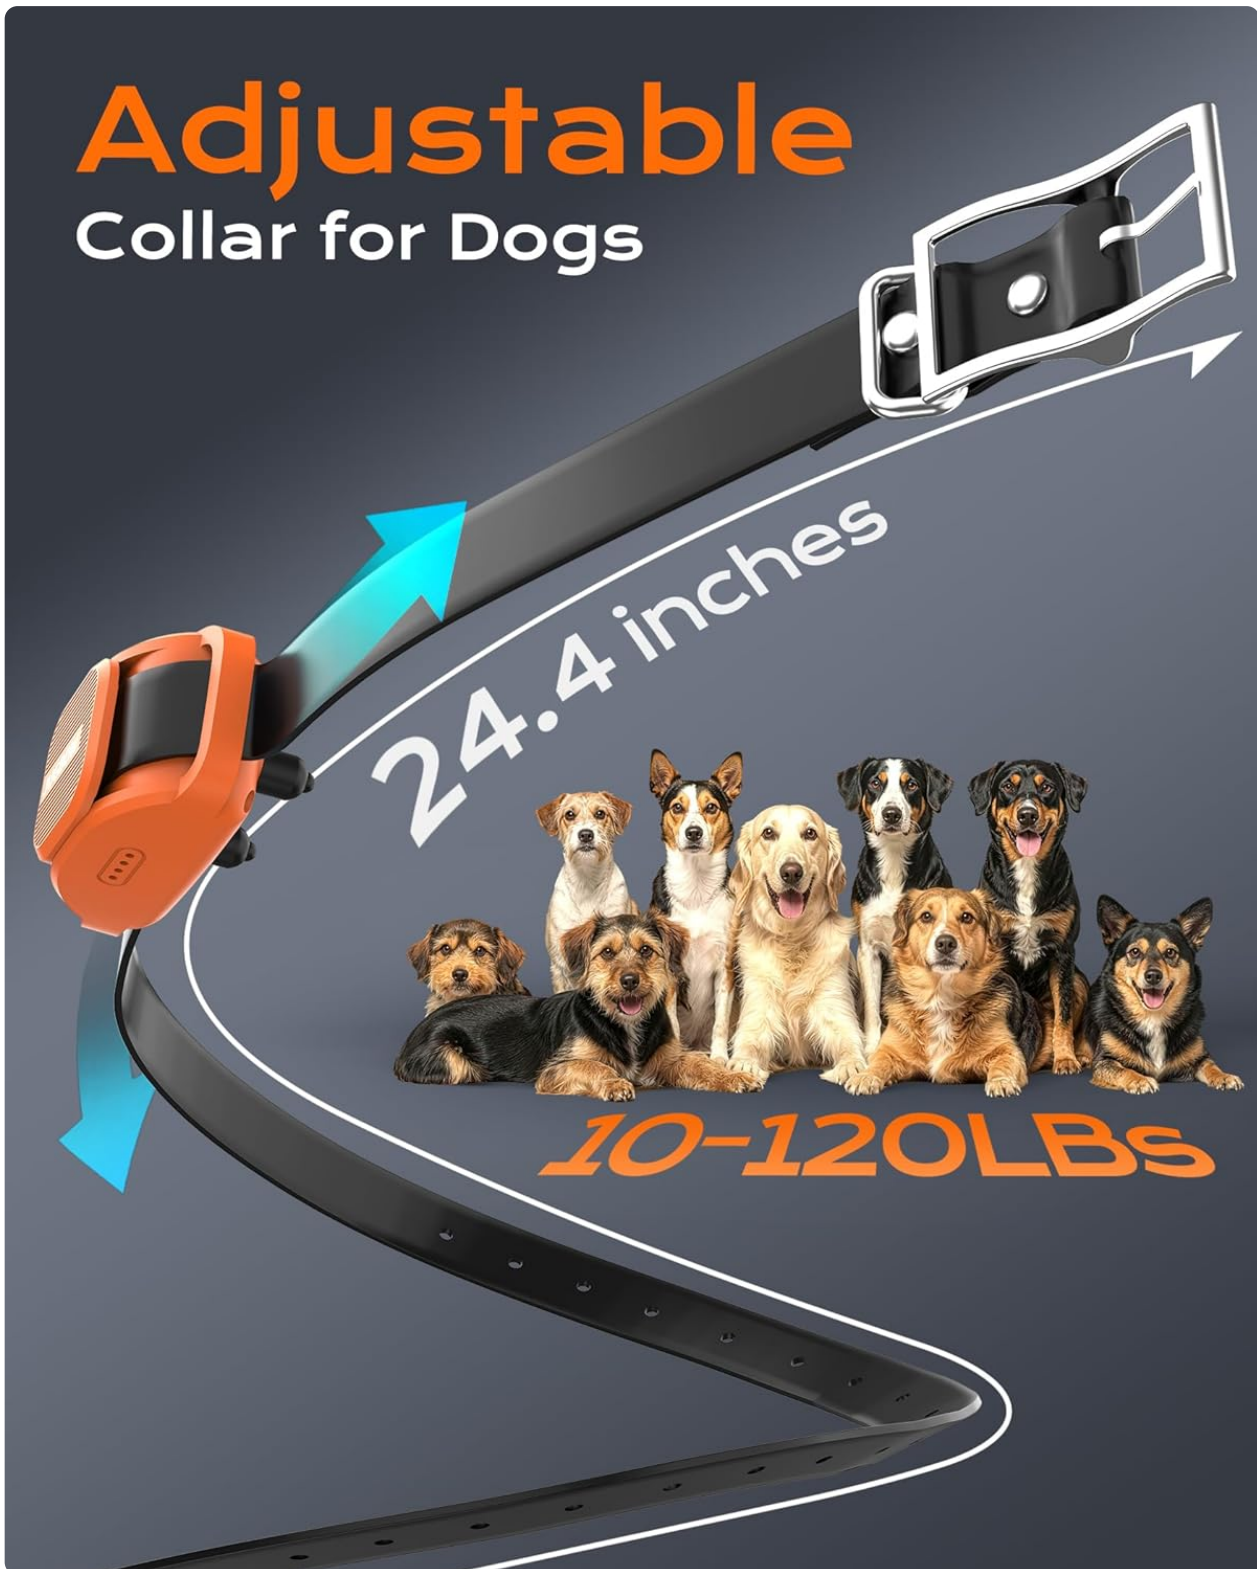


Image: The adjustable collar strap of the Jugbow training collar, demonstrating its suitability for various dog sizes.

Your browser does not support the video tag.

Video: Instructions on how to properly install and adjust the collar strap size for the Jugbow training collar.

Important Safety Note: Do not attach a leash to the training collar. Attaching a leash may cause neck injuries due to the contact prongs. Use a separate standard collar for leash attachment.

3. Pairing the Remote and Receiver

The device is typically paired at the factory. If re-pairing is needed, follow these steps:

1. Turn on the remote control.
2. When the collar is turned off, press and hold the power button on the receiver for 3 seconds until the red light comes on.
3. Release the power button. Continue to press and hold the power button until the green light flashes.
4. On the remote control, select an available channel (1 or 2).
5. Click any function button (Beep, Vibration, or Static) on the remote to complete the pairing. A successful pairing will be indicated by a beep from the collar.

OPERATING THE TRAINING COLLAR

The Jugbow DT-57 offers multiple training modes to suit your dog's needs.

1. Training Modes

- **Beep Mode (F1-F3):** Provides an audible tone. Adjustable levels.
- **Vibration Mode (1-3 Levels):** Delivers a gentle vibration. Adjustable levels.
- **Safe Static Mode (1-16 Levels):** Provides a safe static stimulation. Adjustable levels.
- **LED Light Mode:** Helps locate your dog in low-light conditions and provides a night safety alert.

4 Effective Training Modes

Correct Bad Behavior in Safe and Humane Way



Image: Visual representation of the four effective training modes: Beep, Vibration, Shock, and Lighting, available on the Jugbow remote.

2. Adjusting Training Levels

1. Press the top button on the remote to cycle through Beep, Vibration, and Static modes.
2. Once the desired mode is selected, rotate the rotary knob on the remote to adjust the intensity level.

Your browser does not support the video tag.

Video: Demonstration of how to adjust the strength levels for the various training functions on the Jugbow remote control.

3. 2-Channel Operation

The remote control supports training for up to two dogs simultaneously. Use the channel switch on the remote to select between Channel 1 and Channel 2. The remote remembers the last settings for each channel.

Your browser does not support the video tag.

Video: Guide on how to switch between training channels on the Jugbow remote for multi-dog training.

4. Remote Safety Lock

The remote features a safety lock to prevent accidental activation of training modes. This ensures that corrections are only delivered intentionally.

MAINTENANCE

1. Cleaning

- The collar strap can be spot cleaned with a damp cloth.
- Wipe the receiver and remote control with a dry cloth. Avoid using harsh chemicals or abrasive materials.

2. Contact Point Inspection

Regularly inspect the contact points and silicone caps for wear and tear. Replace them if they show signs of damage to ensure proper function and your dog's comfort.

Your browser does not support the video tag.

Video: Instructions on how to replace the electric contact columns on the Jugbow collar receiver.

TROUBLESHOOTING

- **Device not turning on:** Ensure both the remote and receiver are fully charged.
- **Collar not responding to remote:** Check if the devices are properly paired. Re-pair if necessary following the instructions in the Setup section. Ensure the remote is on the correct channel for the collar.
- **Static mode not working:** Use the provided test light tool to verify the static function. Place the test tool over the contact points and press the static button on the remote. If the test light flashes, the static function is working correctly. Ensure the contact points are making proper contact with your dog's skin.
- **Inconsistent correction:** Ensure the collar is fitted snugly on your dog's neck, allowing the contact points to make consistent contact with the skin. Trim excess fur if necessary.

SPECIFICATIONS

| Feature | Detail |
|--------------|--------|
| Model Number | DT-57 |

| | |
|----------------------------|--|
| Remote Range | Up to 4200FT |
| Training Modes | Beep (F1-F3), Vibration (1-3 Levels), Safe Static (1-16 Levels), LED Light |
| Waterproof Rating (Collar) | IPX8 |
| Battery Life (Collar) | Up to 35 days (standby) |
| Battery Life (Remote) | Up to 45 days (standby) |
| Charging Time | Approx. 2 hours (2-in-1 fast charging) |
| Dog Size Compatibility | 10-120 lbs, Neck sizes 7.8-20 inches |
| Material | Plastic |
| Closure Type | Buckle |

WARRANTY & SUPPORT

Warranty Information

The Jugbow DT-57 Dog Training Collar comes with a 1-year warranty.

For product registration and to view important video guides, please visit: jugbow.com/warranty

Customer Support

If you encounter any issues or have questions regarding your Jugbow DT-57 Dog Training Collar, please contact customer support:

- Email: service@jugbow.com
- Tiktok: [tkservice@jugbow.com](https://www.tiktok.com/@tkservice@jugbow.com)