

[Manuals.plus](#) /

> [VOCIC](#) /

> VOCIC D35 Folding Electric Scooter User Manual

VOCIC D35

VOCIC D35 Folding Electric Scooter User Manual

INTRODUCTION

Thank you for choosing the VOCIC D35 Folding Electric Scooter. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your scooter. Please read this manual thoroughly before using the product to ensure proper function and safety.

SAFETY INFORMATION

Your safety is paramount. Always adhere to the following guidelines:

- Always wear appropriate safety gear, including a helmet, when operating the scooter.
- Do not exceed the maximum load capacity of 150 kg (330 lbs).
- Operate the scooter at a safe speed, especially in crowded areas or on uneven terrain. The maximum speed is 6 km/h.
- Ensure the battery is fully charged before each use to avoid unexpected power loss.
- Avoid operating the scooter in heavy rain or through deep puddles to prevent damage to electrical components.
- Familiarize yourself with all controls before riding.
- Always use the electromagnetic brake for immediate and reliable stopping.
- Be aware of your surroundings and other pedestrians or vehicles.
- Do not modify the scooter in any way, as this may compromise safety and void the warranty.

Warning: The product packaging may contain information different from that shown on our website. Please always read the label, warnings, and instructions provided on the product before using or consuming it.

PRODUCT OVERVIEW

The VOCIC D35 is a versatile folding electric scooter designed for daily mobility. It features a robust carbon steel frame, a powerful 250W motor, and a long-lasting battery system.



Image: The VOCiC D35 Folding Electric Scooter in Orange Red, showcasing its compact design and features.

Key Features:

- **Extended Range:** Equipped with a 250W motor and two 20Ah batteries, offering an autonomy of up to 35 km.
- **Removable Batteries:** Batteries can be removed individually for convenient indoor charging.
- **Ample Storage:** Features removable front and rear baskets with a combined capacity of approximately 40 liters.
- **High Load Capacity:** Robust carbon steel frame supports up to 150 kg (330 lbs).
- **All-Terrain Tires:** 20 cm wide solid (puncture-proof) tires provide superior traction and stability.
- **Adjustable Comfort:** 4-way adjustment system including a handlebar tilt (0-90°), two-level seat height adjustment, 360° swivel seat, and flip-up armrests.
- **Simple Operation:** Intuitive controls with a lever for forward/reverse and immediate stop upon release.
- **Safety Features:** Clear battery level indicator, horn, and electromagnetic braking system.

35KM Re dell'Autonomia

Fiducia con batteria 24V*20Ah



Batteria Premium: **24V, 20Ah**



Motore Potente: **24V, 250W**



Velocità Max: **6KM/H**

Image: The scooter with its front and rear baskets, demonstrating the 40L storage capacity and highlighting a load capacity of 136kg.

COMPONENTS

The VOCIC D35 scooter consists of several key components:

- **Handlebar:** Includes controls for speed, direction, battery indicator, horn, and lights.
- **Seat:** Ergonomic, padded, adjustable height, and 360° swivel.
- **Armrests:** Flip-up for easy access.
- **Baskets:** Removable front and rear storage baskets.
- **Wheels:** Four 20 cm solid, puncture-proof tires.


- **Motor:** 250W high-performance motor.
- **Batteries:** Two 20Ah removable batteries.
- **Frame:** High-strength carbon steel chassis.
- **Braking System:** Electromagnetic brake.

Portata affidabile 136KG

Struttura stabile in acciaio al carbonio



Telaio robusto

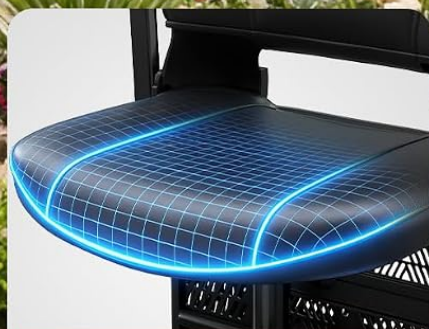

Sedile morbido in pelle



Image: A detailed view of the scooter's control panel, showing the speed adjustment dial, battery indicator, power switch, horn, and light controls.

SETUP AND ASSEMBLY

The VOCIC D35 scooter requires minimal assembly. Follow these steps for initial setup:

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Handlebar Installation:** Secure the handlebar into its upright position. Ensure it is locked firmly.
3. **Seat Installation:** Place the seat onto the post and ensure it is securely attached. Adjust the seat height to your preference.
4. **Basket Attachment:** Attach the front and rear baskets to their designated positions.
5. **Battery Installation/Charging:** Insert the removable batteries. Before first use, fully charge both batteries. Refer to the 'Battery Charging' section for detailed instructions.
6. **Pre-Ride Check:** Before your first ride, ensure all connections are secure, tires are in good condition, and brakes are functioning correctly.



Image: The scooter shown in its folded state, demonstrating how it can be easily stored in a car trunk or small spaces.

OPERATION

Operating the VOCIC D35 scooter is straightforward. Follow these steps for a safe ride:

1. **Power On:** Turn the main power switch to the 'ON' position. The battery indicator will light up.
2. **Speed Selection:** Use the speed adjustment dial on the handlebar to select your desired speed, from 1 to 6 km/h. Start with a lower speed until you are comfortable.
3. **Direction Control:** Use the lever on the handlebar for movement. Push the lever forward for forward motion, and pull it backward for reverse.
4. **Stopping:** Release the control lever to engage the electromagnetic brake and bring the scooter to an immediate stop.
5. **Horn:** Press the horn button to alert others.
6. **Lights:** Turn on the headlights for visibility in low-light conditions.
7. **Adjusting Seat/Handlebar:** While stationary, adjust the seat height and handlebar tilt for optimal comfort. The seat can also swivel 360° and armrests can flip up for easy mounting/dismounting.

Funzionamento facile, pronto all'uso

Parti subito,
senza apprendimento



Regola postura

Cambio modalità

Uso facile

Protezione sicura

Image: The scooter's control panel with clear labels indicating the functions of speed regulation, battery indicator, power switch, horn, headlights, and forward/reverse levers.

BATTERY CHARGING AND MAINTENANCE

Proper battery care ensures optimal performance and longevity.

Charging the Batteries:

- The VOCIC D35 features two individually removable 20Ah batteries.
- To charge, remove the batteries from the scooter.
- Connect the charger to the battery pack, then plug the charger into a standard wall outlet.
- The charging indicator on the charger will show the charging status (typically red for charging, green for fully charged).
- Allow sufficient time for a full charge, usually 6-8 hours.
- Do not overcharge the batteries. Disconnect the charger once charging is complete.

Battery Maintenance:

- Store batteries in a cool, dry place when not in use.
- Avoid completely draining the batteries. Recharge them regularly, even if the scooter has not been used for a while.
- If the scooter will not be used for an extended period, charge the batteries fully and then disconnect them. Recharge every 1-2 months to maintain battery health.



Image: The scooter emphasizing its 35km range, powered by a 24V 20Ah battery, and a 250W motor.

MAINTENANCE AND CARE

Regular maintenance will extend the life of your VOCIC D35 scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth. Avoid using harsh chemicals or direct water spray on electrical components.
- **Tires:** The scooter is equipped with solid, puncture-proof tires. Regularly inspect them for any signs of wear or damage.
- **Brakes:** The electromagnetic braking system is designed for reliability. If you notice any issues with stopping, contact customer support.
- **Connections:** Periodically check all bolts, nuts, and electrical connections to ensure they are tight and secure.
- **Storage:** When not in use, store the scooter in a dry, sheltered area. If storing for a long period, ensure batteries are charged and disconnected.

40L extra per uso quotidiano

Mani libere con doppi cestini



2 cestini rimovibili



Cestino posteriore pieghevole

Image: A close-up of the scooter's 20cm all-terrain tire, illustrating its durability and suitability for various surfaces like grass, pavement, speed bumps, and wet ground.

TROUBLESHOOTING

If you encounter any issues with your VOCIC D35 scooter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scooter does not power on.	Battery is low or not connected; power switch is off.	Charge batteries fully; ensure batteries are properly installed; turn power switch to 'ON'.

Problem	Possible Cause	Solution
Scooter moves slowly or loses power quickly.	Low battery charge; overloaded scooter.	Recharge batteries; ensure load does not exceed 150 kg.
Braking is inconsistent.	Issue with electromagnetic brake system.	Contact customer support for assistance. Do not attempt to repair yourself.
Unusual beeping sound when reversing.	This is a safety feature to alert others.	This sound cannot be disabled as it is an integral safety warning.
Seat or handlebar feels loose.	Locking mechanism not fully engaged.	Ensure all adjustment levers and locks are fully secured after making adjustments.

If the problem persists after attempting these solutions, please contact VOCIC customer support.

Funzionamento facile, pronto all'uso

Parti subito, senza apprendimento



Image: Overview of the scooter's multiple safety features, including secure anti-tip wheels, instant electromagnetic brake, and a long rear reflective strip for visibility.

SPECIFICATIONS

Detailed technical specifications for the VOCIC D35 Folding Electric Scooter:

Feature	Specification
Model	D35
Motor Power	250W

Feature	Specification
Battery Type	2 x 20Ah (Removable)
Max Range	Up to 35 km
Max Speed	6 km/h
Load Capacity	Up to 150 kg (330 lbs)
Tire Size	20 cm (Solid, Puncture-Proof)
Braking System	Electromagnetic
Storage Capacity	Approx. 40L (Front & Rear Baskets)
Adjustments	Handlebar tilt (0-90°), 2-level seat height, 360° swivel seat, flip-up armrests
Product Dimensions (Unfolded)	113.5 x 54 x 88-90 cm (approx.)
Product Weight	33 kg (72.75 lbs)
Frame Material	High-strength Carbon Steel

Regolabile su 4 livelli

Si adatta alle esigenze personali



1 0–90° Manubrio regolabile

2 90° Braccioli ribaltabili

3 2 livelli Altezza sedile

4 360° Sedile girevole

Image: Technical data and dimensions of the VOCIC D35 scooter, including seat weight, battery weight, frame weight, total weight, seat height, and storage capacity.

WARRANTY AND SUPPORT

The VOCIC D35 Folding Electric Scooter comes with a **5-year product warranty**, ensuring peace of mind regarding its quality and durability.

For any questions, technical assistance, or warranty claims, please contact VOCIC customer support through your purchase platform or the official VOCIC website. Please have your model number (D35) and proof of purchase ready when contacting support.

Online Resources: For additional information, FAQs, or video tutorials, please visit the official VOCIC website or the product page where you made your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GJ4XVLNS>

More documents and user manuals: <https://manuals.plus/>