

KXAITO 8128

KXAITO Digital Sports Watch Model 8128 User Manual

Your guide to setup, operation, and maintenance.

INTRODUCTION

Thank you for choosing the KXAITO Digital Sports Watch Model 8128. This timepiece combines robust design with multiple functionalities, including a digital display with LED night light, alarm, chronograph, stopwatch, countdown timer, and dual time display. Designed for active lifestyles, it features 5ATM water resistance and a comfortable silica gel band. Please read this manual carefully to understand how to operate your watch and ensure its longevity.

PRODUCT OVERVIEW

PRODUCT SIZE PARAMETER



Figure 1: Front view of the KXAUTO Digital Sports Watch, highlighting the four control buttons: LIGHT (top left), MODE (bottom left), START (top right), and RESET (bottom right).

Button Functions

- **LIGHT (Top Left):** Activates the LED night light for visibility in low-light conditions.
- **MODE (Bottom Left):** Cycles through different operational modes: Time, Alarm, Stopwatch, Countdown Timer, and Dual Time.
- **START (Top Right):** Used to start/stop functions in Stopwatch and Countdown modes, and to adjust values during setting.
- **RESET (Bottom Right):** Used to reset values in Stopwatch and Countdown modes, and to select items during setting.

Display Indicators

- **SNZ:** Snooze function for the alarm.
- **CHI:** Chime (hourly time signal).
- **ALM:** Alarm activated.
- **PM:** Indicates afternoon hours in 12-hour format.
- **WR 5BAR:** Water Resistance rating of 5 ATM (50 meters).
- **12H/24H:** Indicates 12-hour or 24-hour time format.

SETUP

Setting Time and Date

1. From the Time Mode, press the **MODE** button three times to enter Time Setting Mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. While an item is flashing, use the **START** button to adjust the value.
4. Once all settings are correct, press the **MODE** button to exit Time Setting Mode and return to Time Mode.

Setting 12/24 Hour Format

In Time Mode, press the **START** button to toggle between 12-hour (with 'PM' indicator for afternoon) and 24-hour formats.

OPERATING MODES

Time Mode

This is the default display mode, showing the current time (hours, minutes, seconds), day of the week, and date.

Night Light Function



Figure 2: The watch display illuminated by the LED night light, providing clear visibility in dark environments.

Press the **LIGHT** button (top left) to activate the LED backlight. The light will remain on for a few seconds, providing clear visibility of the display in dark conditions.

Alarm Mode

1. From Time Mode, press the **MODE** button once to enter Alarm Mode.
2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START** button to adjust the desired alarm time.
4. Press the **MODE** button to confirm and exit Alarm Setting Mode.
5. To turn the alarm ON/OFF, press the **START** button while in Alarm Mode. An 'ALM' indicator will appear on the display when the alarm is active.
6. To activate/deactivate the hourly chime, press the **RESET** button while in Alarm Mode. A 'CHI' indicator will appear when the chime is active.

Chronograph (Stopwatch) Mode

1. From Time Mode, press the **MODE** button twice to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to '00:00:00' while paused.

5. To record split times, press **RESET** while the stopwatch is running. The display will show the split time. Press **RESET** again to return to the running stopwatch.

Countdown Timer Mode

1. From Time Mode, press the **MODE** button three times to enter Countdown Timer Mode.
2. Press the **RESET** button to select the hour or minute digits for setting.
3. Use the **START** button to adjust the desired countdown time.
4. Press the **MODE** button to confirm the setting.
5. Press the **START** button to begin the countdown.
6. Press the **START** button again to pause the countdown.
7. Press the **RESET** button to reset the countdown timer to its initial set time.

Dual Time Mode

This feature allows you to set and view a second time zone. This is useful for travelers or those who need to track time in different regions.

1. From Time Mode, press the **MODE** button four times to enter Dual Time Mode.
2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START** button to adjust the desired second time zone.
4. Press the **MODE** button to confirm and exit Dual Time Setting Mode.

WATER RESISTANCE



Figure 3: The KXAUTO Digital Sports Watch demonstrating its water resistance, suitable for splashes and brief immersion.

The KXAUTO Digital Sports Watch Model 8128 is rated for **5ATM (50 meters) water resistance**. This means it is suitable for daily use, such as hand washing, rain, and accidental splashes. It is also suitable for swimming in shallow water.

Important Precautions:

- Do not press any buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the water seals.
- Do not use the watch for diving, snorkeling, or high-speed water sports.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and silica gel band with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and thorough drying. Avoid harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by one nonstandard battery (included). When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time needs to be set.	Refer to the 'Setting Time and Date' section.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons firmly. If issue persists, a battery reset (removal and re-insertion) might be necessary, or seek professional service.
Water appears inside the watch.	Water resistance compromised.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid pressing buttons.

SPECIFICATIONS

5ATM METER WATERPROOF

WASH HANDS, FACE, AND RAIN CAN BE WORN WITH
CONFIDENCE, WATERPROOF AND FEARLESS



Figure 4: Detailed dimensions of the KXAITO Digital Sports Watch, including case diameter, strap width, and case thickness.

Feature	Detail
Model Number	8128
Display Type	Digital
Case Material	Plastic
Case Diameter	44mm (1.73 inches)
Case Thickness	15mm (0.59 inches)
Band Material	Silica Gel
Band Width	21mm (0.82 inches)
Band Length	Adjustable, fits wrists 5.5-9 inches

Feature	Detail
Crystal Material	Plexiglass
Water Resistance	5 ATM (50 meters / 164 feet)
Weight	47g (1.66 ounces)
Battery Type	1 Nonstandard Battery (included)
Functions	Time, Date, Day, LED Night Light, Alarm, Chronograph, Stopwatch, Countdown Timer, Dual Time, 12/24 Hour Format

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your KXAUTO Digital Sports Watch Model 8128, please contact the seller or manufacturer directly. Please retain your proof of purchase for any warranty claims.