

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers Warner SR1200 Analog-Digital Watch User Manual

Skechers SR1200

Skechers Warner SR1200 Analog-Digital Watch User Manual

INTRODUCTION

This manual provides detailed instructions for the Skechers Warner SR1200 Analog-Digital Watch. Please read this manual thoroughly to understand the functions and proper use of your watch. Keep this manual for future reference.

PRODUCT FEATURES

- **Durable Construction:** Features a lightweight polycarbonate case and a durable black nylon strap.
- **Dual Display:** Combines traditional analog hands with a clear digital display.
- **Comfortable Fit:** Equipped with an easy-to-adjust velcro closure for a secure and comfortable fit.
- **Scratch-Resistant:** Protected by an acrylic crystal designed to resist scratches.
- **Water Resistance:** Water resistant up to 50 meters (5 ATM), suitable for short periods of recreational swimming and showering. Not suitable for diving or snorkeling.
- **Case Dimensions:** 46 mm case diameter with a 26 mm band width.

SETUP AND INITIAL USE

Wearing the Watch

The Skechers Warner SR1200 watch features a nylon strap with a velcro closure for easy adjustment. To wear the watch:

1. Wrap the strap around your wrist.
2. Secure the velcro closure to achieve a comfortable and snug fit.



Image: The Skechers Warner SR1200 watch displayed on a wrist, illustrating how the watch appears when worn and the fit of the black nylon strap.

Setting the Time (Analog Display)

The analog display shows the current time using traditional hour and minute hands.

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown out to the first position.
3. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
4. Once the time is set, push the crown back in to its original position to start the analog movement.

Setting the Time and Date (Digital Display)

The digital display provides additional functions including precise time, date, and other modes. The watch typically has four buttons: **LIGHT**, **MODE**, **START**, and **RESET**.





Image: A side view of the Skechers Warner SR1200 watch, highlighting the four control buttons on the case, typically used for digital display functions.

1. Press the **MODE** button repeatedly until the digital display shows the time setting mode (often indicated by flashing digits).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., hours, minutes, year, month, day).
3. Use the **START** button to increase the selected value. Hold **START** to advance rapidly.
4. Continue this process until all time and date parameters are correctly set.
5. Press the **MODE** button to exit the setting mode and return to the normal time display.

OPERATING THE DIGITAL FUNCTIONS



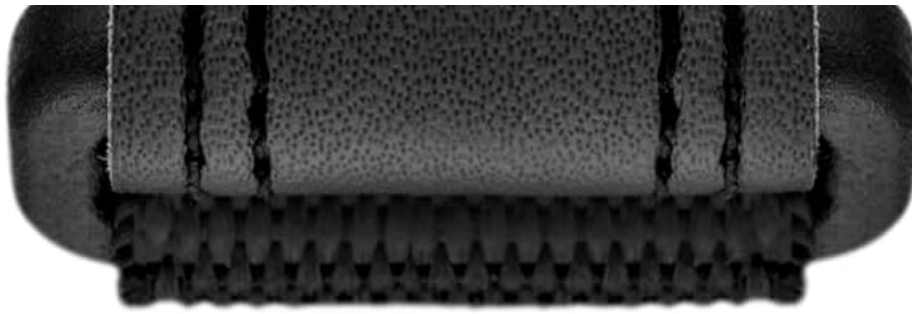


Image: A detailed view of the Skechers Warner SR1200 watch face, illustrating the combined analog and digital time displays.

Digital Display Modes

Press the **MODE** button to cycle through the available digital functions:

- **Time/Date Display:** Shows the current digital time (hour, minute, second) and date (month, day, day of week).
- **Stopwatch Function:**
 - a. Press **START** to begin timing.
 - b. Press **START** again to pause.
 - c. Press **RESET** to clear the stopwatch to zero.
- **Alarm Function:**
 - a. In Alarm mode, use **RESET** and **START** buttons to set the desired alarm time.
 - b. A combination of buttons (refer to specific watch model instructions if available) is typically used to activate or deactivate the alarm.

Backlight

Press the **LIGHT** button to illuminate the digital display for better visibility in low-light conditions.

Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it can withstand splashes, rain, and short periods of recreational swimming or showering. It is **not** suitable for diving, snorkeling, or high-pressure water activities. Avoid operating buttons while the watch is wet to prevent water ingress.

MAINTENANCE

Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and strap with a soft, dry cloth.
- For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or materials.

Battery Replacement

The Skechers Warner SR1200 watch uses a Quartz movement, which is powered by a battery. When the watch stops or the digital display becomes dim, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is pushed in completely. If the watch still does not run, the battery may need replacement.
- **Incorrect Time/Date:** Follow the instructions in the "Setup" section to reset the analog and digital time and date.
- **Digital Display Dim/Blank:** This usually indicates a low battery. Replace the battery.
- **Water Inside Watch:** If you notice condensation or water inside the watch, stop using it immediately and contact customer support. Do not attempt to open the watch yourself.

SPECIFICATIONS

Model Number	SR1200
Brand	Skechers
Display Format	Analog-Digital
Movement Type	Quartz
Power Source	Battery
Water Resistance Depth	50 Meters (5 ATM)
Clasp Type	Velcro
Strap Material	Nylon
Case Material	Plastic
Crystal Type	Acrylic
Case Diameter	46 Millimeters
Strap Width	26 Millimeters
Case Thickness	15 Millimeters
Band Length	210 Millimeters
Weight	170 Grams
UPC	807320029748

WARRANTY AND SUPPORT

Warranty Information

This Skechers watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, or visit the official Skechers website for detailed warranty information.

Customer Support

For any questions, technical assistance, or service requests, please contact Skechers customer support. Contact information can typically be found on the official Skechers website or on your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GJ6XVS98>

More documents and user manuals: <https://manuals.plus/>