

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kismile](#) /

› [Kismile 25QT Air Fryer Toaster Oven Combo Instruction Manual](#)

Kismile 93204KAF2

Kismile 25QT Air Fryer Toaster Oven Combo Instruction Manual

Model: 93204KAF2 | Brand: Kismile

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Extreme caution should be exercised when removing tray or disposing of hot grease.

- This appliance is for household use only.

PRODUCT OVERVIEW

The Kismile 25QT Air Fryer Toaster Oven Combo is a versatile 12-in-1 countertop appliance designed for various cooking methods. It features a digital control screen with preset modes and precise temperature/timer adjustments.

Key Features:

- **12-in-1 Digital Control Screen:** Offers 12 preset cooking functions including Air Fry, Bake, Roast, Toast, Broil, Reheat, and more.
- **Non-Toxic, Coating-Free Interior:** Cold-rolled steel interior with no BPA or PFAS for cleaner cooking. Durable stainless steel exterior.
- **High-Power Heating:** 1750W system with adjustable temperature (70–450°F) and 60-minute timer.
- **25QT Large Capacity:** Fits a whole chicken, 12" pizza, or meals for 3–5 people.
- **Complete Accessory Set:** Includes a rack, air fryer basket, baking pan, and crumb tray.

Components and Controls:



Figure 1: Kismile 25QT Air Fryer Toaster Oven Combo (Front View)

This image displays the overall design of the Kismile 25QT Air Fryer Toaster Oven Combo, highlighting its sleek stainless steel finish and digital control panel.



Figure 2: Digital Control Panel

A close-up of the digital control panel, showing the various preset functions (Air Fry, Convection, Pizza, Fries, Toast, Grill, Keep Warm, Wings, Bake, Dehydrate, Defrost, Veggies), temperature and time adjustment buttons, and Start/Cancel controls.



Figure 3: Included Accessories

This image displays the full set of accessories that come with the oven: a wire rack, air fryer basket, baking pan, crumb tray, and a tray handle for safe removal of hot accessories.

Product Video:

Your browser does not support the video tag.

This video provides an overview of the Kismile Air Fryer Toaster Oven, demonstrating its features and various cooking capabilities. It highlights the appliance's versatility and ease of use for different meal preparations.

SETUP

- Unpacking:** Carefully remove the appliance and all accessories from the packaging. Remove any protective films or stickers.
- Initial Cleaning:** Before first use, wipe the exterior of the oven with a damp cloth. Wash all accessories (air fryer basket, baking pan, wire rack, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.
- Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 4 inches (10 cm) of clear space on all sides of the appliance for proper ventilation. Do not place it near flammable materials.
- First Use Burn-Off:** It is recommended to run the oven empty for about 15 minutes at 400°F (200°C) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the area is well-ventilated.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Kismile Air Fryer Toaster Oven features an intuitive digital control panel for easy operation.

Digital Control Panel Functions:

- **Preset Modes:** Select from 12 preset cooking functions (Air Fry, Convection, Pizza, Fries, Toast, Grill, Keep Warm, Wings, Bake, Dehydrate, Defrost, Veggies) by rotating the FUNCTION knob or pressing the corresponding button.
- **Temperature Adjustment:** Use the +/- buttons next to the temperature display to increase or decrease the cooking temperature (70°F - 450°F).
- **Time Adjustment:** Use the +/- buttons next to the time display to set the cooking duration (up to 60 minutes for most functions).
- **Start/Cancel:** Press the START button to begin the cooking cycle. Press the CANCEL button to stop the cooking process or clear settings.
- **Light Button:** Press the light bulb icon button to turn the interior oven light on or off.

General Operation Steps:

1. **Prepare Food:** Place your food on the appropriate accessory (e.g., air fryer basket for air frying, baking pan for baking).
2. **Load Oven:** Carefully slide the accessory with food into the desired rack position inside the oven. Close the oven door.
3. **Select Function:** Turn the FUNCTION knob or press the desired preset button (e.g., AIR FRY). The default temperature and time for that function will display.
4. **Adjust Settings (Optional):** If needed, adjust the temperature and time using the +/- buttons.
5. **Start Cooking:** Press the START button to begin the cooking cycle. The oven will preheat if necessary, then start cooking.
6. **Monitor Progress:** Use the interior light to check on your food without opening the door.
7. **Finish Cooking:** The oven will beep when the cooking cycle is complete. Carefully open the door and use the tray handle to remove hot accessories and food.

Accessory Usage Guide:



Figure 4: Dual-Layer Cooking Example

This image illustrates the capability of dual-layer cooking, showing an air fryer basket with fries on the top rack and chicken wings on a baking pan on the lower rack, utilizing the oven light for visibility.

- **Air Fryer Basket:** Ideal for crispy foods like fries, wings, shrimp, and vegetables. Place on the top rack for best air frying results.
- **Baking Pan:** Best for baking and saucy foods such as cakes, brownies, lasagna, and roasted vegetables.

Place on the bottom rack or middle rack depending on recipe.

- **Wire Rack:** Suitable for even baking and toasting, including pizza, toast, cookies, and reheating. Can be used on various rack positions.
- **Crumb Tray:** Always place at the very bottom of the oven to catch crumbs and drips, making cleanup easier.
- **Tray Handle:** Use this tool to safely insert and remove hot accessories from the oven.

COOKING GUIDE

The following table provides general guidelines for common foods. Cooking times and temperatures may vary based on food quantity, initial temperature, and desired crispness. Always use a food thermometer to ensure food is cooked to a safe internal temperature.

Food Item	Function	Temperature	Time	Accessory/Rack Position
French Fries (frozen)	Air Fry	400°F (200°C)	15-20 min	Air Fryer Basket (top)
Chicken Wings	Air Fry / Wings	400°F (200°C)	20-25 min	Air Fryer Basket (top)
Pizza (12 inch)	Pizza / Bake	375°F (190°C)	12-18 min	Wire Rack (middle)
Toast	Toast	N/A (preset)	3-5 min	Wire Rack (middle)
Whole Chicken (3-4 lbs)	Roast / Convection	375°F (190°C)	60-90 min	Baking Pan (bottom)
Baked Potatoes	Bake	400°F (200°C)	45-60 min	Wire Rack (middle)

Note: For optimal air frying results, shake or flip food halfway through the cooking time.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Kismile Air Fryer Toaster Oven.

Before Cleaning:

- Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.

Cleaning the Interior:

- Remove the crumb tray, air fryer basket, baking pan, and wire rack. Wash them in warm, soapy water. For stubborn food residue, soak them before scrubbing.
- Wipe the interior walls with a damp cloth and a mild, non-abrasive cleaning solution. Do not use steel wool, scouring pads, or abrasive cleaners, as they can damage the non-stick coating (if applicable) or stainless steel finish.
- Clean the heating elements gently with a soft brush if necessary, ensuring they are completely cool and dry.
- Ensure the interior is completely dry before closing the door or plugging in the appliance.

Cleaning the Exterior:

- Wipe the exterior surface with a damp cloth and a mild detergent. Dry thoroughly with a soft cloth.
- Do not immerse the appliance in water or any other liquid.

TROUBLESHOOTING

If you encounter any issues with your Kismile Air Fryer Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food is not cooking evenly.	Overcrowding the basket; incorrect temperature/time; food not flipped/shaken.	Do not overcrowd the basket. Adjust temperature/time as needed. Flip or shake food halfway through cooking.
White smoke coming from the oven.	Grease/oil residue on heating elements or accessories; fatty foods.	Clean the oven interior and accessories thoroughly. For fatty foods, use the baking pan below the air fryer basket to catch drips.
Appliance emits a strange odor during first use.	Manufacturing residues burning off.	This is normal for first use. Run the oven empty for 15 minutes at 400°F (200°C) in a well-ventilated area.
Digital display not responding.	Temporary electronic glitch.	Unplug the appliance for a few minutes, then plug it back in to reset.

If the problem persists after trying these solutions, please contact Kismile customer support.

SPECIFICATIONS

Feature	Detail
Brand	Kismile
Model Number	93204KAF2
Capacity	25 Quarts
Product Dimensions	13.7"D x 15.8"W x 14.3"H
Item Weight	26.4 pounds
Material	Stainless Steel

Feature	Detail
Power Source	Electric (1750W)
Temperature Range	70°F - 450°F
Control Type	Knob Control with Digital Display
Included Components	Air fryer oven, Chrome-plated grill rack, aluminum baking tray, chrome-plated air fry basket, galvanized crumb tray

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Kismile website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require assistance with troubleshooting, parts replacement, or general inquiries, please contact Kismile customer service through their official channels.

Online Support: [Visit the Kismile Store on Amazon](#)