

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cloer](#) /

› [Cloer 6958 Blender User Manual: 1.5L Glass Jar, 6-Wing Blade, Smoothie, Ice Crush, Auto Clean, Pulse Functions](#)

Cloer 6958

Cloer 6958 Blender User Manual

Model: 6958 | Brand: Cloer

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Cloer 6958 Blender. Please read these instructions carefully before first use and keep them for future reference.



1,5 Liter Mixer mit Smoothie-, Ice-Crush-, Auto-Clean-Programmen & Puls-Funktion



Hohe Leistung dank 6-flügligem Messer



Für Frozen Drinks, Säfte, Suppen & mehr



Image: The Cloer 6958 Blender, showcasing its stainless steel base, glass jar, and control panel, with a glass of red smoothie beside it, highlighting its primary function.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.

- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate the blender with the lid in place.
- Do not blend hot liquids as this may cause pressure buildup and scalding.
- Ensure the appliance is placed on a stable, flat, and dry surface.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Cloer 6958 Blender:

- **Motor Base:** Contains the powerful 1200W motor and control panel.
- **1.5 Liter Glass Jar:** Durable glass container for blending.
- **6-Wing Blade Assembly:** Detachable blade unit for efficient blending and easy cleaning.
- **Lid with Safety Lock:** Secures the jar during operation and features a refill opening.
- **Measuring Cup (integrated in lid):** For adding ingredients during blending.
- **Tamper:** Used to push ingredients towards the blades, especially for thicker mixtures.
- **Control Dial:** For adjusting speed and selecting programs.
- **Non-slip Suction Feet:** Ensures stability during operation.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the glass jar, lid, measuring cup, and tamper in warm soapy water. Rinse thoroughly and dry. The blade assembly can also be detached and cleaned by hand.
3. **Assemble:**
 - Place the blade assembly securely onto the bottom of the glass jar.
 - Ensure the sealing ring is correctly positioned to prevent leaks.
 - Place the glass jar onto the motor base, ensuring it is seated correctly and locked into position.
 - Place the lid onto the glass jar and twist to secure the safety lock. Insert the measuring cup into the lid opening.
4. **Position:** Place the assembled blender on a stable, flat, and dry surface. Ensure the power cord is not dangling or touching hot surfaces.

OPERATING INSTRUCTIONS

The Cloer 6958 Blender offers both automatic programs and manual speed control.

General Operation

1. Add ingredients to the glass jar. Do not exceed the maximum fill line.
2. Secure the lid and measuring cup.
3. Plug the blender into a suitable power outlet.
4. Select your desired program or speed setting using the control dial.
5. To add ingredients during blending, remove the measuring cup from the lid opening and carefully add items. Use the tamper if needed to push ingredients down.
6. Once blending is complete, turn the dial to the "OFF" position and unplug the appliance.

Leichte Bedienung durch Drehregler & Knöpfe, Messbecher, Nachfüllöffnung & Sicherheitsverschluss

*inkl. Stößel zum Nachschieben der Zutaten



Image: A hand adjusting the control dial of the Cloer 6958 Blender, with the glass jar filled with various fruits, demonstrating ease of use and ingredient addition.

Automatic Programs

The blender features four pre-set programs for convenience:

- **Smoothie Program:** Automatically alternates between slow and fast speeds to achieve a smooth, consistent texture for smoothies and shakes.
- **Ice Crush Program:** Designed specifically for crushing ice into fine "Snow Ice." Use appropriate amounts of ice for best results.
- **Auto Clean Program:** For quick and easy cleaning of the glass jar. Add warm water and a drop of detergent, then select this program.
- **Pulse Function:** Provides short bursts of maximum power for controlled blending, ideal for chopping or achieving specific textures. Turn the dial to the "Pulse" setting and hold, then release.

Adjustable Speed

For manual control, turn the rotary dial to continuously adjust the blending speed up to 23,000 RPM. The blue illumination on the dial indicates the selected speed setting, allowing precise control over your blending results.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your blender.

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Disassemble:** Remove the glass jar from the motor base. Detach the lid, measuring cup, and blade assembly from the jar.
3. **Cleaning Components:**
 - The glass jar, lid, and tamper are dishwasher safe.
 - The 6-wing blade assembly should be washed by hand with warm soapy water. Handle the blades with extreme care as they are very sharp.
 - For quick cleaning of the jar, use the **Auto Clean Program** (see Operating Instructions).
4. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
5. **Dry:** Ensure all parts are completely dry before reassembling or storing.

Einfache Reinigung durch spülmaschinengeeigneten Glasbehälter, Deckel & Stößel



*Messerblock nur per Hand waschbar



Image: The Cloer 6958 Blender disassembled, showing the motor base, glass jar, lid, tamper, and detached blade unit, illustrating the parts ready for cleaning.

Storage

Store the blender in a dry place. The compact design allows for space-saving storage.



L: 21 cm x B: 19 cm x H: 42 cm

Platzsparende Aufbewahrung dank
des kompakten Designs

Image: The Cloer 6958 Blender neatly stored inside a kitchen cabinet, demonstrating its compact dimensions (21 cm D x 19 cm W x 42 cm H) for efficient space utilization.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; Jar not correctly assembled or locked; Overload protection activated.	Ensure plug is firmly in outlet; Check if the glass jar is properly seated and locked onto the motor base; Unplug, wait 15 minutes for motor to cool, then try again. Reduce load if necessary.

Problem	Possible Cause	Solution
Ingredients are not blending smoothly.	Too little liquid; Jar is overfilled; Ingredients are too large or dense.	Add more liquid; Do not exceed the maximum fill line; Cut ingredients into smaller pieces; Use the tamper to push ingredients towards the blades.
Leakage from the bottom of the jar.	Blade assembly not tightened; Sealing ring is missing or improperly placed.	Ensure the blade assembly is securely tightened to the jar; Check that the sealing ring is correctly positioned.
Unusual noise or odor.	Overload; Foreign object in jar; Motor issue.	Turn off immediately and unplug. Remove jar and check for obstructions. If problem persists, contact customer support.

SPECIFICATIONS

- **Model Number:** 6958
- **Brand:** Cloer
- **Power:** 1200 Watts
- **Voltage:** 240 Volts
- **Capacity:** 1.5 Liters (Glass Jar)
- **Material:** Stainless Steel (housing), Glass (jar)
- **Dimensions (L x W x H):** 21 cm x 19 cm x 42 cm
- **Weight:** 3.73 Kilograms
- **Special Features:** Dishwasher-safe lid, tamper, and glass jar; Removable 6-wing blade unit; Non-slip suction feet; Cord winder.

WARRANTY AND SUPPORT

Cloer products are manufactured to high-quality standards. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Cloer website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, please contact Cloer customer service directly.