

## Monster S380

# Monster S380 Bluetooth Speaker Instruction Manual

Model: S380

Introduction	What's in the Box	Product Overview	Setup	Operating	Maintenance
Troubleshooting	Specifications	Safety Information	Warranty & Support		

## 1. INTRODUCTION

Thank you for purchasing the Monster S380 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

The Monster S380 delivers powerful 40W stereo sound with deep bass and clear highs, featuring Bluetooth 6.0 for stable connectivity, TWS pairing for an immersive stereo experience, and IPX6 waterproofing for outdoor use. Enjoy up to 20 hours of playtime and versatile input options including AUX and TF card.

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Monster S380 Bluetooth Speaker ×1
- Charging Cable ×1
- Portable Rope ×1
- Quick Start Guide ×1

# PORTABLE LANYARD DESIGN

Take your music on the move



Image: Contents of the Monster S380 package, including the speaker, charging cable, portable rope, and quick start guide.

## 3. PRODUCT OVERVIEW

---

### 3.1 Speaker Components

**MONSTER®**

# PURE MONSTER SOUND

Experience room-filling, powerful audio with stunning clarity and deep, punchy bass with 40W Pure Monster Sound

# 40W



Image: Front view of the Monster S380 Bluetooth Speaker, highlighting its design and speaker grilles.

## 3.2 Control Buttons

The Monster S380 features intuitive control buttons located on the top surface for easy operation:



Image: Diagram illustrating the function of each control button on the Monster S380 speaker.

1. **Mode Switching (M):** Press to cycle through input modes (Bluetooth, AUX, TF Card).
2. **Play/Pause:** Press to play or pause audio.
3. **Power On/Off:** Press and hold to power the speaker on or off.
4. **Volume Down / Previous Song (-):** Press to decrease volume. Press and hold for previous track.
5. **Volume Up / Next Song (+):** Press to increase volume. Press and hold for next track.

### 3.3 Input Ports

The speaker includes multiple input ports for versatile connectivity:



Image: Close-up view of the Monster S380's input ports, including USB, TF card slot, AUX, and charging port.

- **USB Port:** For charging or connecting USB devices.
- **TF Card Slot:** Insert a TF (MicroSD) card for direct audio playback.
- **AUX Input:** Connect external audio devices via a 3.5mm audio cable.
- **DC 5V Charging Port:** Connect the provided charging cable to power the speaker.

## 4. SETUP

## 4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

A full charge provides up to 20 hours of playtime, depending on volume level and audio content.



Image: The Monster S380 speaker shown with a graphic indicating 20 hours of playtime.

## 4.2 Powering On/Off

To power on the speaker, press and hold the **Power** button until you hear an audible prompt or see the indicator light illuminate. To power off, press and hold the **Power** button again.

## 5. OPERATING INSTRUCTIONS

### 5.1 Bluetooth Pairing

The Monster S380 features advanced Bluetooth 6.0 for a stable and efficient wireless connection.

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing blue LED). If not, press the **Mode (M)** button to switch to Bluetooth mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Monster S380" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the LED indicator will turn solid blue.

# UPGRADED BLUETOOTH 6.0

Enjoy ultra-stable, faster pairing and a seamless connection up to 100+ feet away



Lower Latency

Lower Power Consumption

More Stable Connection

Longer Transmission Range

Image: The Monster S380 speaker displaying a graphic for Bluetooth 6.0 connectivity.

## 5.2 True Wireless Stereo (TWS) Pairing

For an enhanced stereo experience, you can pair two Monster S380 speakers together.

1. Ensure both Monster S380 speakers are powered on and in Bluetooth pairing mode (flashing blue LED).
2. On one of the speakers, press and hold the **Mode (M)** button for 2-3 seconds. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound, and the LED on one speaker will be solid blue (master), while the other will continue to flash (slave).
4. Now, connect your device to the master speaker via Bluetooth as described in Section 5.1.

# 20H LONG PLAYTIME

Enjoy music without any interruption from day to night



Image: Two Monster S380 speakers shown wirelessly connected, illustrating the TWS pairing feature.

## 5.3 AUX Input

To play audio from devices without Bluetooth, use the AUX input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode, or you may need to press the **Mode (M)** button to select AUX.

## 5.4 TF Card Playback

To play music directly from a TF (MicroSD) card:

1. Insert a TF card with audio files into the TF card slot on the speaker.
2. The speaker will automatically switch to TF card mode and begin playback, or you may need to press the **Mode (M)** button to select TF card mode.

## 5.5 Hands-Free Calling

The built-in microphone allows for hands-free calls when connected via Bluetooth.

- **Answer Call:** Press the **Play/Pause** button once to answer an incoming call.
- **End Call:** Press the **Play/Pause** button once to end an ongoing call.
- **Reject Call:** Press and hold the **Play/Pause** button for 2 seconds to reject an incoming call.

## What's in the Box?

Monster S380 Speaker × 1  
USB-C Charging Cable × 1  
AUX-in Cable × 1  
Quick Start Guide × 1  
Portable Rope × 1



Image: A person using the Monster S380 speaker for a hands-free call while working on a laptop.

## 6. MAINTENANCE

---

### 6.1 Waterproofing (IPX6)

The Monster S380 is IPX6 waterproof, meaning it can withstand powerful water jets. It is suitable for use outdoors and near water, but it should not be submerged in water.

- Ensure the rubber flap covering the ports is securely closed before exposing the speaker to water.
- Do not intentionally submerge the speaker.
- After exposure to water, wipe the speaker dry with a soft cloth.



## IPX6 WATERPROOF

The music plays on through any adventure even spills, rain, or splashes

Image: The Monster S380 speaker placed near a swimming pool, demonstrating its IPX6 waterproof capability.

### 6.2 Cleaning

To clean your speaker, use a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface of the speaker.

### 6.3 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Charge the speaker periodically to maintain battery health.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in Bluetooth pairing mode. Turn on Bluetooth on your device. Move device closer to speaker (within 33 feet).
No sound.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Press 'M' to select correct input mode. Ensure audio is playing on your device.
TWS pairing fails.	Speakers too far apart; one speaker already paired to a device.	Ensure speakers are close to each other. Disconnect any Bluetooth devices from both speakers before TWS pairing.
Poor sound quality.	Low battery; interference; source audio quality.	Charge the speaker. Move away from other wireless devices. Try a different audio source.

## 8. SPECIFICATIONS

- **Model Name:** S380
- **Speaker Type:** Outdoor
- **Connectivity Technology:** Bluetooth 6.0, AUX, USB, TF Card
- **Speaker Maximum Output Power:** 40 Watts
- **Playtime:** Up to 20 Hours
- **Charging Time:** Approximately 3-4 Hours (based on typical charging rates)
- **Water Resistance Level:** IPX6
- **Bluetooth Range:** Up to 33 Feet (10 meters)
- **Product Dimensions:** 2.9"D x 8.6"W x 3.5"H
- **Item Weight:** 1.94 pounds
- **Material:** Plastic
- **Control Method:** Push Button
- **Included Components:** Monster S380 Bluetooth Speaker, Charging Cable, Portable Rope, Quick Start Guide

## 9. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures (hot or cold) or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from medical devices, as it may cause interference.
- Dispose of the speaker and its battery responsibly according to local regulations.
- Do not use the speaker at excessively high volumes for prolonged periods, as this may cause hearing damage.

## 10. WARRANTY AND SUPPORT

The Monster S380 Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package or visit the official Monster website for detailed warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Monster customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty services.

**Online Support:** Visit the official Monster website for FAQs and support resources.

**Email Support:** Refer to your Quick Start Guide for specific contact information.