

Manuals.plus /
› Part Synergy /
› Part Synergy MyTouchSmart Plug-In Timer J6S33862 Instruction Manual

Part Synergy J6S33862

Part Synergy MyTouchSmart Plug-In Timer J6S33862 Instruction Manual

Model: J6S33862 | Brand: Part Synergy

INTRODUCTION

Thank you for choosing the Part Synergy MyTouchSmart Plug-In Timer, model J6S33862. This versatile timer is designed to provide convenient and efficient control over your indoor and outdoor lighting or other electrical devices. Featuring an easy-to-read LCD display, dual grounded outlets, and programmable settings including sunset/sunrise options, this timer helps automate your home or garden. Please read this manual thoroughly before installation and operation to ensure proper use and safety.

SAFETY INFORMATION

- **Risk of Electric Shock:** Do not immerse the timer in water or expose it to rain. Ensure the timer is securely plugged into a grounded outlet.
- **Indoor/Outdoor Use:** This timer is rated for both indoor and outdoor use. When used outdoors, ensure all connections are protected from moisture and use with a GFCI (Ground Fault Circuit Interrupter) protected outlet.
- **Overload Protection:** Do not exceed the electrical ratings of the timer. Refer to the specifications section for maximum load.
- **Children and Pets:** Keep the timer out of reach of children and pets.
- **Maintenance:** Do not attempt to open or repair the timer. Refer all servicing to qualified personnel.

PRODUCT OVERVIEW

The MyTouchSmart Plug-In Timer features a user-friendly interface for easy programming.



Image 1: Front view of the timer. This image displays the timer's main body, including the LCD screen at the top, and an array of control buttons below it. The power cord with a three-prong plug is visible extending from the top left.

Components:

- **LCD Display:** Shows current time, program status, and settings.
- **Control Buttons:**
 - **CLOCK / SET:** For setting the current time and entering programming mode.
 - **Up/Down Arrows (▲ / ▼):** Navigate menus and adjust values.
 - **MY ON TIME:** Sets a custom ON time.
 - **MY OFF TIME:** Sets a custom OFF time.
 - **SUNSET ON:** Activates lighting at sunset.
 - **SUNRISE OFF:** Deactivates lighting at sunrise.
 - **EVENING -12AM:** Pre-programmed evening setting.
 - **MY EXTRA PROGRAMS:** For additional custom schedules.
- **Dual Grounded Outlets:** Two outlets located at the bottom for connecting devices.
- **Power Cord:** Connects the timer to a wall outlet.
- **Mounting Bracket:** Integrated for secure placement.



Image 2: Bottom view of the timer. This image highlights the two grounded electrical outlets located at the base of the timer, designed for connecting two separate devices.

SETUP

Follow these steps to set up your MyTouchSmart Plug-In Timer for the first time.



Image 3: Product packaging illustrating simple setup steps. The packaging shows the timer and highlights three key setup instructions: setting current date/time, selecting region for SunSmart™ technology, and choosing/setting custom times.

1. **Initial Power-Up:** Plug the timer into a grounded electrical outlet. The LCD display should illuminate.
2. **Set Current Date & Time:**
 - Press the **CLOCK** button.
 - Use the **▲** and **▼** buttons to adjust the hour, then press **SET**.
 - Repeat for minutes, AM/PM, day of the week, month, and year.
 - Press **CLOCK** again to exit time setting mode.
3. **Select Your Region (SunSmart™ Technology):**
 - This feature allows the timer to automatically adjust for sunrise and sunset times in your area.
 - Consult the timer's on-screen prompts or a dedicated "Region" setting (if available) to select your geographical region. Use the **▲** and **▼** buttons to scroll through options.
 - Confirm your selection to enable accurate sunrise/sunset programming.
4. **Connect Devices:** Plug the devices you wish to control into the dual grounded outlets at the bottom of the timer. Ensure the devices' power switches are in the ON position.

OPERATING INSTRUCTIONS

The MyTouchSmart timer offers various programming options to suit your needs.

Programming Custom ON/OFF Times:

1. Press the **MY ON TIME** button. The display will show a program number and a flashing time.
2. Use the **▲** and **▼** buttons to set the desired ON time. Press **SET** to confirm.
3. Next, press the **MY OFF TIME** button. Set the desired OFF time using the **▲** and **▼** buttons and press **SET**.
4. You can set multiple ON/OFF programs by repeating these steps. The timer will cycle through available program slots.

Using Sunset/Sunrise Features:

- **SUNSET ON:** Press this button to activate your connected devices at sunset. The timer will automatically adjust based on your selected region.
- **SUNRISE OFF:** Press this button to deactivate your connected devices at sunrise. The timer will automatically adjust based on your selected region.

Pre-programmed Settings:

- **EVENING -12AM:** This button activates a pre-set program for evening operation, typically turning on at dusk and off at midnight. Refer to the timer's display for exact timings once activated.

Additional Programs:

- **MY EXTRA PROGRAMS:** Use this button to access and set additional custom programs beyond the primary ON/OFF settings. Follow the on-screen prompts and use the ▲ and ▼ buttons to configure.

MAINTENANCE

- **Cleaning:** Disconnect the timer from the power outlet before cleaning. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Backup:** The timer includes a backup battery to retain settings during power outages. If the display becomes dim or settings are frequently lost, the internal battery may need replacement. This typically requires professional servicing.
- **Storage:** If storing the timer for an extended period, disconnect it from power and store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer display is blank.	No power to the timer.	Ensure the timer is securely plugged into a live, grounded outlet. Check the circuit breaker.
Devices not turning ON/OFF at programmed times.	<ul style="list-style-type: none">• Device power switch is OFF.• Incorrect program settings.• Current time/date is incorrect.• Timer is in manual override mode.	<ul style="list-style-type: none">• Ensure the connected device's power switch is ON.• Review and re-enter program settings.• Verify and correct the current time and date.• Check the timer's mode and ensure it is set to automatic.
Sunrise/Sunset feature is inaccurate.	Incorrect region setting.	Re-enter your geographical region in the timer's settings.
Display is dim or settings are lost after power outage.	Internal backup battery is low or depleted.	The internal battery may need replacement. Contact customer support for assistance.

SPECIFICATIONS

Model Number	J6S33862
--------------	----------

Brand	Part Synergy
Manufacturer	J6S - Jasco
Product Dimensions (L x W x H)	9 x 6 x 3 inches
Item Weight	8 pounds
Recommended Use	Control Landscape/ Patio/ Seasonal Lighting
Operation Type	Plug-In
Display Type	LCD
Number of Outlets	Dual Grounded Outlets
Color	Black
Mounting	Integrated Mounting Bracket
Compatibility	CFL/ LED/ Incandescent/ Halogen Bulbs

Note: Electrical ratings (e.g., Volts, Amps, Watts) are not provided in the source data. Always ensure connected devices do not exceed the timer's maximum load capacity.

WARRANTY AND SUPPORT

Part Synergy is committed to providing high-quality products. While specific warranty details are not included in this manual, most Part Synergy products come with a limited warranty against defects in materials and workmanship. For warranty claims, technical support, or any questions regarding your MyTouchSmart Plug-In Timer, please contact Part Synergy customer service.

- **Customer Service:** Refer to the product packaging or the official Part Synergy website for the most current contact information.
- **Online Resources:** Visit the Part Synergy website for FAQs, additional product information, and support resources.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data. For visual guides or demonstrations, please check the manufacturer's official website or authorized channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0GJFJCTX4>

More documents and user manuals: <https://manuals.plus/>