

EAYBLLY KG820-B

EAYBLLY KG820-B Wireless Keyboard and Mouse Combo User Manual

Model: KG820-B | Brand: EAYBLLY

INTRODUCTION

Thank you for choosing the EAYBLLY KG820-B Wireless Keyboard and Mouse Combo. This manual provides essential information for setting up, operating, and maintaining your new wireless peripheral set. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver (stored inside the mouse battery compartment)
- 1 x User Manual



SETUP GUIDE

 
1. Battery Installation

The keyboard requires one (1) AAA battery, and the mouse requires one (1) AA battery (batteries are not included).

1. **For the Keyboard:** Open the battery compartment cover on the underside of the keyboard. Insert one AAA battery, ensuring correct polarity (+/-). Close the cover.
2. **For the Mouse:** Open the battery compartment cover on the underside of the mouse. Insert one AA battery, ensuring correct polarity (+/-). The USB receiver is typically stored in this compartment. Remove it before closing the cover.

WIRELESS OPTICAL MOUSE

3 Levels adjustable DPI
(800-1200-1600)

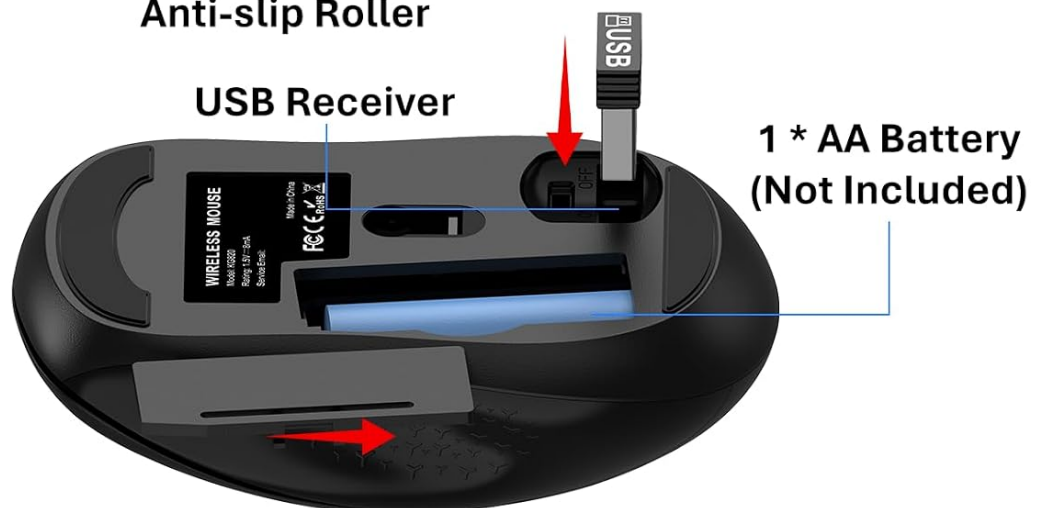

Note: The mouse and keyboard share the same one **USB Receiver**

Image: Detailed view of the wireless mouse's underside, illustrating the battery compartment for an AA battery and the storage slot for the USB receiver.

INTELLIGENT POWER SAVING DESIGN

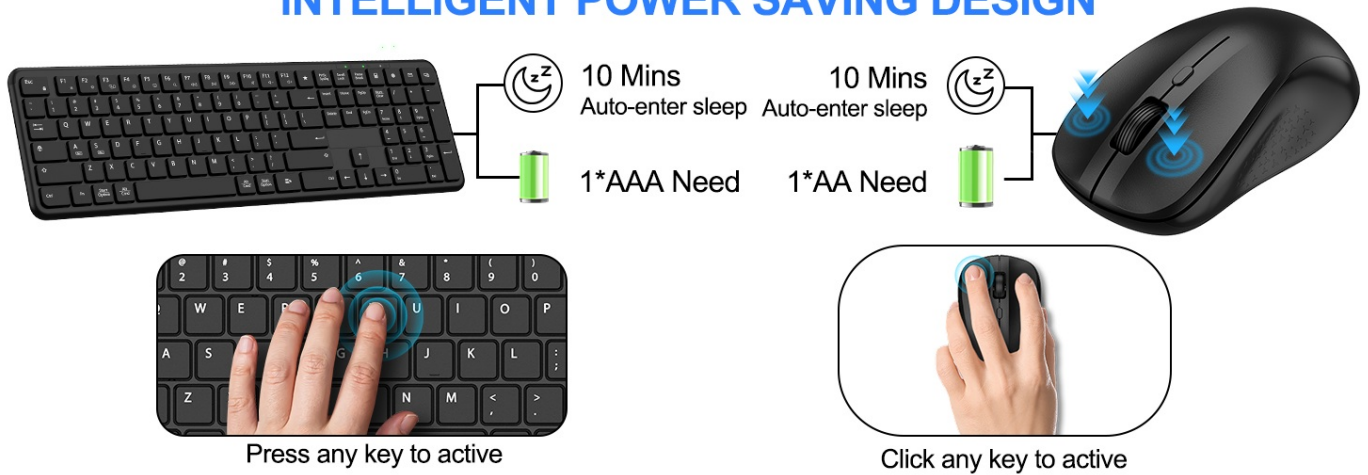 


Image: Visual guide for installing AAA battery in the keyboard and AA battery in the mouse.

2. Connect the USB Receiver

The keyboard and mouse share a single 2.4G USB receiver.

1. Locate the USB receiver, which is typically stored in the battery compartment of the mouse.
2. Plug the USB receiver into an available USB port on your computer, laptop, or compatible device.

NO DELAYS & NO DROPOUTS

One USB Receiver connects both the keyboard and mouse



2.4G Wireless Connection

33ft Wireless transmission

2 in 1 USB Receiver, Plug & Play

Image: The wireless keyboard and mouse in use, demonstrating the 2.4G wireless connection via a single USB receiver plugged into a laptop.

3. Power On

1. **For the Keyboard:** Locate the ON/OFF switch on the top right side of the keyboard. Slide it to the 'ON' position.
2. **For the Mouse:** Locate the ON/OFF switch on the underside of the mouse. Slide it to the 'ON' position.

Your computer should automatically detect and install the necessary drivers. No additional software is required.

OPERATING INSTRUCTIONS

2.4G Wireless Connection

The combo utilizes a stable 2.4G wireless connection, offering a range of up to 10 meters (33 feet). Ensure the USB receiver is within this range for optimal performance.

Adjustable DPI for Mouse

The wireless mouse features 3 adjustable DPI levels (800/1200/1600 DPI) to suit various tasks and preferences.

- To change the DPI, press the DPI button located on top of the mouse, behind the scroll wheel.
- Each press will cycle through the DPI settings (800, 1200, 1600).



Image: The wireless mouse highlighting the DPI adjustment button and illustrating the three available DPI settings (800, 1200, 1600).

Multimedia Keys

The keyboard includes 12 multimedia function keys (F1-F12) for quick access to common functions. These keys are activated by pressing the **Fn** key simultaneously with the desired F-key.

Key Combination	Function
Fn + F1	Screen Brightness (-)
Fn + F2	Screen Brightness (+)
Fn + F3	Conversion Window
Fn + F4	Home Page
Fn + F5	My Computer
Fn + F6	Search
Fn + F7	Previous Track
Fn + F8	Play/Pause
Fn + F9	Next Track
Fn + F10	Mute
Fn + F11	Volume (-)
Fn + F12	Volume (+)

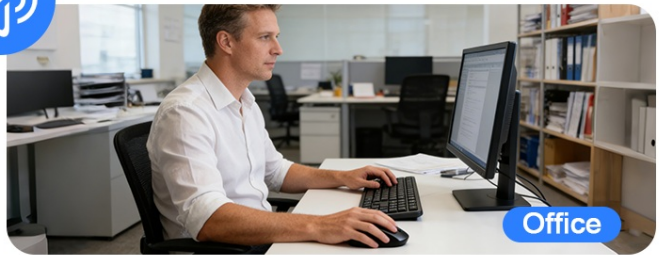 
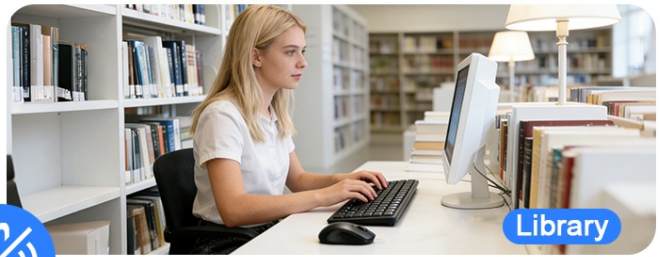 


Image: The keyboard layout, visually indicating the multimedia function keys (F1-F12) and the dedicated number pad.

Sleep Mode for Power Saving

To conserve battery life, both the keyboard and mouse feature an automatic sleep mode:

- If idle for 10 minutes, the keyboard and mouse will enter sleep mode.
- To wake the devices, simply press any key on the keyboard or move/click the mouse.

SMART POWER, LONG BATTERY LIFE

No need to change batteries frequently



10 Mins
Auto-Sleep



15 Months
1 * AAA Battery

10 Mins
Auto-Sleep
24 Months
1 * AA Battery



Press any key to active



Move or Click any button to active

Image: Illustration of the automatic sleep mode feature, showing how the keyboard and mouse enter sleep after 10 minutes of inactivity and how to reactivate them.

Ergonomic Adjustable Stand

The keyboard is designed with an adjustable stand to provide an ergonomic typing angle, reducing wrist strain and enhancing comfort during extended use.

- Flip out the integrated feet on the underside of the keyboard to raise the typing angle.
- Fold the feet back in for a flatter typing position.



ERGONOMIC ADJUSTABLE STAND



Image: The wireless keyboard demonstrating its adjustable stand, showing both the flat and elevated typing positions for ergonomic comfort.

MAINTENANCE

Cleaning

To clean your keyboard and mouse:

- Ensure both devices are turned off.
- Use a soft, damp cloth to wipe the surfaces. Avoid harsh chemicals or abrasive materials.
- For dust between keys, use compressed air.

Battery Replacement

When the devices become unresponsive or performance degrades, it may be time to replace the batteries. Follow the battery installation steps in the Setup Guide.

Splash-Proof Design

The keyboard features a splash-proof design, allowing for easy cleaning of accidental water splashes. However, it is not waterproof; avoid submerging the device in liquid.



Image: The keyboard with water droplets on its surface, demonstrating its splash-proof capability for easy cleaning.

TROUBLESHOOTING

Problem	Solution
Keyboard/Mouse not responding	◦ Ensure batteries are correctly installed and not depleted. Replace if necessary. ◦ Check if the ON/OFF switch on both devices is in the 'ON' position. ◦ Ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. ◦ Move the devices closer to the USB receiver to rule out range issues. ◦ Restart your computer.
Lag or intermittent connection	◦ Reduce distance between devices and receiver. ◦ Remove any large metal objects or electronic devices that might cause interference. ◦ Ensure the USB receiver is not plugged into a USB hub or extension cable, try direct connection.
Mouse cursor moves erratically	◦ Clean the optical sensor on the underside of the mouse. ◦ Use the mouse on a clean, non-reflective surface or a mouse pad. ◦ Adjust the DPI setting to a lower value if the cursor is too sensitive.

SPECIFICATIONS

Feature	Detail
Brand	EAYBLLY
Model Number	KG820-B

Feature	Detail
Color	Black
Connectivity Technology	2.4GHz USB Wireless
Special Features	Ergonomic, Spillproof, Full Size, Silent Typing, Adjustable DPI
Compatible Devices	Laptop, Television, Personal Computer
Compatible Operating Systems	Windows, Linux, Chrome OS, Mac OS
Keyboard Layout	QWERTY, Multimedia Keys
Keyboard Battery	1 x AAA (not included)
Mouse Battery	1 x AA (not included)
Mouse DPI Levels	800/1200/1600 DPI
Wireless Range	Up to 10m (33ft)

FULL SIZE WIRELESS KEYBOARD MOUSE COMBO



Image: Technical drawing showing the dimensions of the wireless keyboard and mouse in centimeters and inches.

WARRANTY AND SUPPORT

Warranty Information

This EAYBLLY product comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

Customer Support

For technical assistance, warranty claims, or any questions regarding your EAYBLLY KG820-B Wireless Keyboard and Mouse Combo, please contact our customer support team. Refer to the contact information provided on the product packaging or our official website.

SAFETY INFORMATION

- Keep the device away from water, fire, high temperatures, and corrosive substances.
- Do not attempt to disassemble or repair the device yourself.
- Dispose of batteries according to local regulations. Do not dispose of batteries in fire.
- Keep out of reach of children.

© 2026 EAYBLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

