

[Manuals.plus](#) /

› [NEWBULIG](#) /

› NEWBULIG 4QT Air Fryer Instruction Manual AH-KZG27BS-4WT-RC-DJ

NEWBULIG AH-KZG27BS-4WT-RC-DJ

NEWBULIG 4QT Air Fryer Instruction Manual

Model: AH-KZG27BS-4WT-RC-DJ

Brand: NEWBULIG

INTRODUCTION

Welcome to your new NEWBULIG 4QT Air Fryer. This appliance is designed for efficient and healthy cooking, utilizing rapid air circulation technology. It features a digital touchscreen with 8 preset cooking options, an easy-view window with an interior light, and a convenient shake reminder function. The nonstick basket and baking tray are dishwasher safe for easy cleaning.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

Components

Your NEWBULIG 4QT Air Fryer consists of the main unit, a removable cooking basket, and a crisper plate.



Figure 1: NEWBULIG 4QT Air Fryer Main Unit

The main unit houses the heating element and control panel. The removable basket and crisper plate are designed for optimal air circulation and easy cleaning.



Easy-View Window

Lets You Check Doneness without Opening the Basket



Figure 2: Air Fryer with Easy-View Window

The easy-view window allows you to monitor your food without opening the basket, preserving heat and ensuring consistent results.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from your air fryer.
2. **Cleaning:** Wash the removable basket and crisper plate thoroughly with warm, soapy water. Rinse and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit. Do not place it directly against a wall or under cabinets.
4. **Power:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

Digital Touchscreen and Presets

The digital touchscreen provides intuitive control over your cooking. It features 8 one-touch presets for common dishes, as well as manual time and temperature adjustments.



Figure 3: Digital Touchscreen with 8 Presets

To select a preset, simply touch the corresponding icon on the control panel. The air fryer will automatically set the recommended time and temperature.

Manual Mode (DIY)

For custom cooking, select the "DIY" option. Use the "Timer/Temp" button to toggle between time and temperature settings, then use the "+" and "-" buttons to adjust values.

Your browser does not support the video tag.

Video 1: Demonstrating the digital touchscreen controls of the NEWBULIG Air Fryer, showing how to select presets and adjust time and temperature.

Your browser does not support the video tag.

Video 2: Showing a user setting the time and temperature on the NEWBULIG Air Fryer for cooking pork chops, including the preheat and turn remind features.

Preheating

The air fryer includes a preheat function to ensure optimal cooking temperature before food is added. This helps achieve crispy results.

Shake Reminder

For items that require even cooking, the air fryer will sound an audible "Shake Reminder" halfway through the cooking cycle. This prompts you to shake or flip the food for consistent browning.


SHAKE REMINDER





Precision Heating
Cooked to Perfection

OTHERS

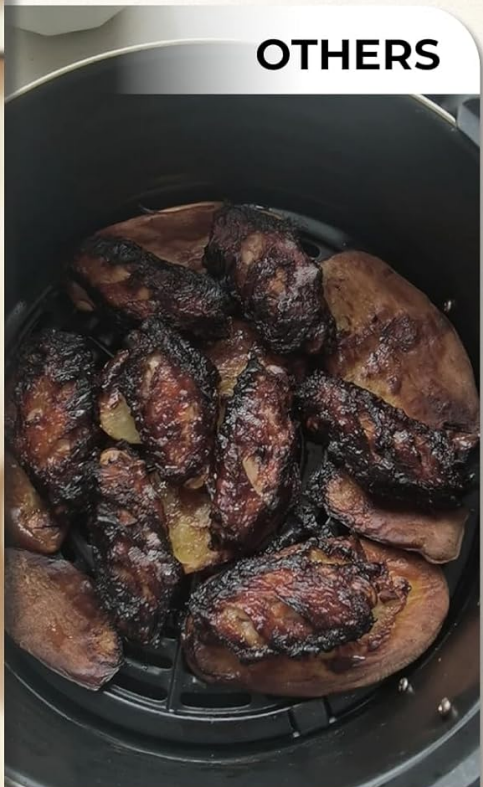



Uneven Heating



Food Gets Burnt

Figure 4: Shake Reminder for Even Cooking

Easy View Window and Interior Light

Monitor your cooking progress without interrupting the process. The transparent viewing window and interior light allow you to check food doneness in real-time, preventing heat loss and ensuring perfect results.

COOKING CAPACITY

The 4-quart capacity of this air fryer is ideal for 1-2 people, accommodating an 8-inch pizza, a whole large steak, or approximately 0.7 lbs of french fries.



Figure 5: 4-Quart Capacity Examples

MAINTENANCE AND CLEANING

The nonstick basket and baking tray are designed for easy cleanup and are dishwasher safe.

1. **Unplug:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Plate:** Remove the cooking basket and crisper plate. They can be washed by hand with warm, soapy water or placed in the dishwasher. Avoid abrasive cleaning tools.

3. **Interior:** Wipe the interior of the air fryer with a damp cloth. Ensure no food particles are left behind.
4. **Exterior:** Clean the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

Easy to Clean



Dishwasher-Safe Accessories



Non-Stick Coating

Figure 6: Easy to Clean Components

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on	Not plugged in	Ensure the power cord is securely plugged into a grounded outlet.
Food not cooked evenly	Overcrowding, not shaking/flipping	Do not overcrowd the basket. Shake or flip food halfway through cooking when prompted by the "Shake Reminder".

Problem	Possible Cause	Solution
White smoke from appliance	Greasy food, food residue	Clean the basket and crisper plate thoroughly after each use. Remove excess grease from food before air frying.
Food not crispy	Incorrect temperature/time, too much moisture	Adjust cooking time and temperature. Pat food dry before cooking.

SPECIFICATIONS

Feature	Detail
Brand	NEWBULIG
Model Number	AH-KZG27BS-4WT-RC-DJ
Capacity	4 Quarts
Product Dimensions	13.3"D x 10.2"W x 13"H
Item Weight	6.8 Pounds
Color	White
Material	Acrylonitrile Butadiene Styrene (ABS), Plastic, Polypropylene (PP), Stainless Steel
Output Wattage	1500 Watts
Voltage	120 Volts
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Air Frying Technology	Rapid Air Circulation
Special Features	Automatic Shut-Off, Programmable, Stain Resistant, Temperature Control, Timer, Easy View Window, Interior Light, Shake Reminder
Nonstick Coating	Yes
Dishwasher Safe	Yes (Basket & Tray)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your product packaging or visit the official NEWBULIG website. Keep your purchase receipt as proof of purchase.