

T4TREAM RCC70LOTC

T4TREAM 70" Modern Fluted TV Stand Instruction Manual

Model: RCC70LOTC

1. INTRODUCTION

Thank you for purchasing the T4TREAM 70" Modern Fluted TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

- **Weight Limit:** Do not load more than 78 pounds (35.3 kg) onto the TV stand. Exceeding this limit may cause instability and damage.
- **Sharp Edges:** Exercise caution around all edges during assembly and use to prevent injury.
- **Stability:** Ensure the TV stand is placed on a flat, level surface to prevent tipping. Consider using wall anchor kits (not included) for added stability, especially in homes with children or pets.
- **Ventilation:** Do not block ventilation openings on electronic devices placed within the stand.

3. SETUP AND ASSEMBLY

The T4TREAM 70" Modern Fluted TV Stand is designed for straightforward assembly. Clear, user-friendly instructions are provided with the product. Each component is meticulously labeled with serial numbers to assist in identification. A pack of spare hardware is included in case of loss during assembly.

Assembly Steps Overview:

1. Unpack all components and verify against the parts list provided in the assembly guide.
2. Identify all hardware and tools required.
3. Follow the step-by-step instructions, paying close attention to diagrams.
4. Ensure all connections are secure before placing items on the stand.

Your browser does not support the video tag.

Video: This video demonstrates the key features and design elements of the T4TREAM 70" Modern Fluted TV Stand, including its spacious tabletop, ample storage with adjustable shelves, luxury golden handles, soft-closing doors, rounded corners, thickened frame, and unique fluted panel design.

Product Dimensions

Natural Oak Dark Walnut Alder White Alder Grey



Image: Product Dimensions. This diagram illustrates the overall dimensions of the TV stand: 70 inches in length, 15.75 inches in width, and 20 inches in height. It also highlights the internal shelf dimensions.

4. OPERATING INSTRUCTIONS

Storage and Organization:

- **Spacious Tabletop:** The 70-inch wide top surface is designed to accommodate TVs up to 80 inches, providing ample space for your television and decorative items.
- **Adjustable Shelves:** The central open storage area and the two door-closed cabinets feature adjustable shelves. To adjust, remove the shelf pins, reposition the shelf to your desired height, and reinsert the pins securely. This allows for customized storage of media players, game consoles, books, and decor.
- **Soft-Closing Doors:** The two side cabinets are equipped with soft-closing hinges, ensuring quiet and gentle closure.

Ample Storage



Image: Ample Storage. This image displays the TV stand's storage capabilities, featuring two door-closed cabinets and an open middle section, ideal for organizing media devices and decorative items.

Adjustable shelves

The height can be adjusted according to your needs



Unique Design

Elegant curved edge for style and safety.

Image: Adjustable Shelves and Unique Design. This image focuses on the adjustable shelves within the cabinet, demonstrating how they can be customized. It also showcases the elegant rounded corners and fluted panel design.

5. MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood finish.
- **Spills:** Clean up spills immediately to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware:** Periodically check and tighten all assembly hardware to ensure stability.

6. TROUBLESHOOTING

- **Wobbly Stand:** Ensure all screws and fasteners are securely tightened. Verify the stand is on a level surface. Adjust leg levelers if present.
- **Doors Not Closing Properly:** Check the alignment of the hinges. Adjust the hinge screws as needed to ensure proper door closure and alignment.
- **Missing Parts:** If any parts or hardware are missing upon unpacking, refer to the contact information in the

Support section for assistance.

- **Surface Damage:** For minor scratches or blemishes, touch-up pens or furniture repair kits designed for engineered wood may be used.

7. SPECIFICATIONS

Brand	T4TREAM
Model Number	RCC70LOTC
Color	Alder Grey
Material	Engineered Wood
Product Dimensions (L x W x H)	70 x 15.75 x 20 inches (177.8 x 40 x 50.8 cm)
Item Weight	78 pounds (35.3 kg)
Maximum Weight Capacity	78 pounds (35.3 kg)
Special Features	70" Long TV Stand, Fluted Panel Design, Rounded Corners, Adjustable Shelves, Soft-Closing Doors

8. WARRANTY AND SUPPORT

Warranty Information:

Specific warranty details for this product are typically provided at the point of purchase or within the product packaging. Please refer to your purchase receipt or the documentation included with your TV stand for comprehensive warranty terms and conditions.

Customer Support:

For any questions, concerns, or assistance with assembly or product issues, please contact T4TREAM customer service through the retailer where the product was purchased. Have your model number (RCC70LOTC) and purchase date ready for faster service.