

[Manuals.plus](#) /

› [PeakPursuit](#) /

› PeakPursuit TV Stand with Mount and 6 Drawers Instruction Manual

PeakPursuit TV Stand with Mount and 6 Drawers

PeakPursuit TV Stand with Mount and 6 Drawers Instruction Manual

PRODUCT OVERVIEW

This manual provides detailed instructions for the assembly, operation, and maintenance of your PeakPursuit TV Stand with Mount and 6 Drawers. This versatile entertainment center is designed to accommodate TVs from 35 to 85 inches, supporting a maximum weight of 165 lbs (75 kg). It features a sturdy 6-drawer dresser for ample storage and an adjustable TV mount for optimal viewing.

- **Universal TV Mount:** Compatible with 35 to 85 inch TVs, up to 165 lbs (75 kg).
- **6-Drawer Storage:** Provides extensive space for media devices, accessories, and personal items.
- **Height Adjustable:** Offers 3-level height adjustment for the TV, from 45.3 to 47.3 inches off the ground.
- **Cable Management:** Integrated holes on the back help organize wires for a tidy setup.
- **Durable Construction:** Made with MDF and reinforced steel crossbars for stability and safety.

SETUP INSTRUCTIONS

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included assembly instructions for a detailed step-by-step guide. All necessary accessories and labeled individual parts are provided for a straightforward setup.

1. Unpacking and Part Identification

Carefully unpack all components from the packaging. Lay out all parts and hardware on a clean, soft surface to prevent scratches. Compare the contents with the parts list in your assembly manual to ensure everything is accounted for.

2. Assembling the Dresser Base

Follow the numerical sequence in your assembly manual to construct the 6-drawer dresser base. This typically involves attaching side panels, back panels, and drawer slides before assembling the drawers themselves. Ensure all screws and fasteners are tightened securely.

3. Attaching the TV Mount Post

Once the dresser base is complete, attach the central TV mount post to the designated area on the top surface of the dresser. Ensure it is firmly secured according to the instructions to provide a stable foundation for your television.

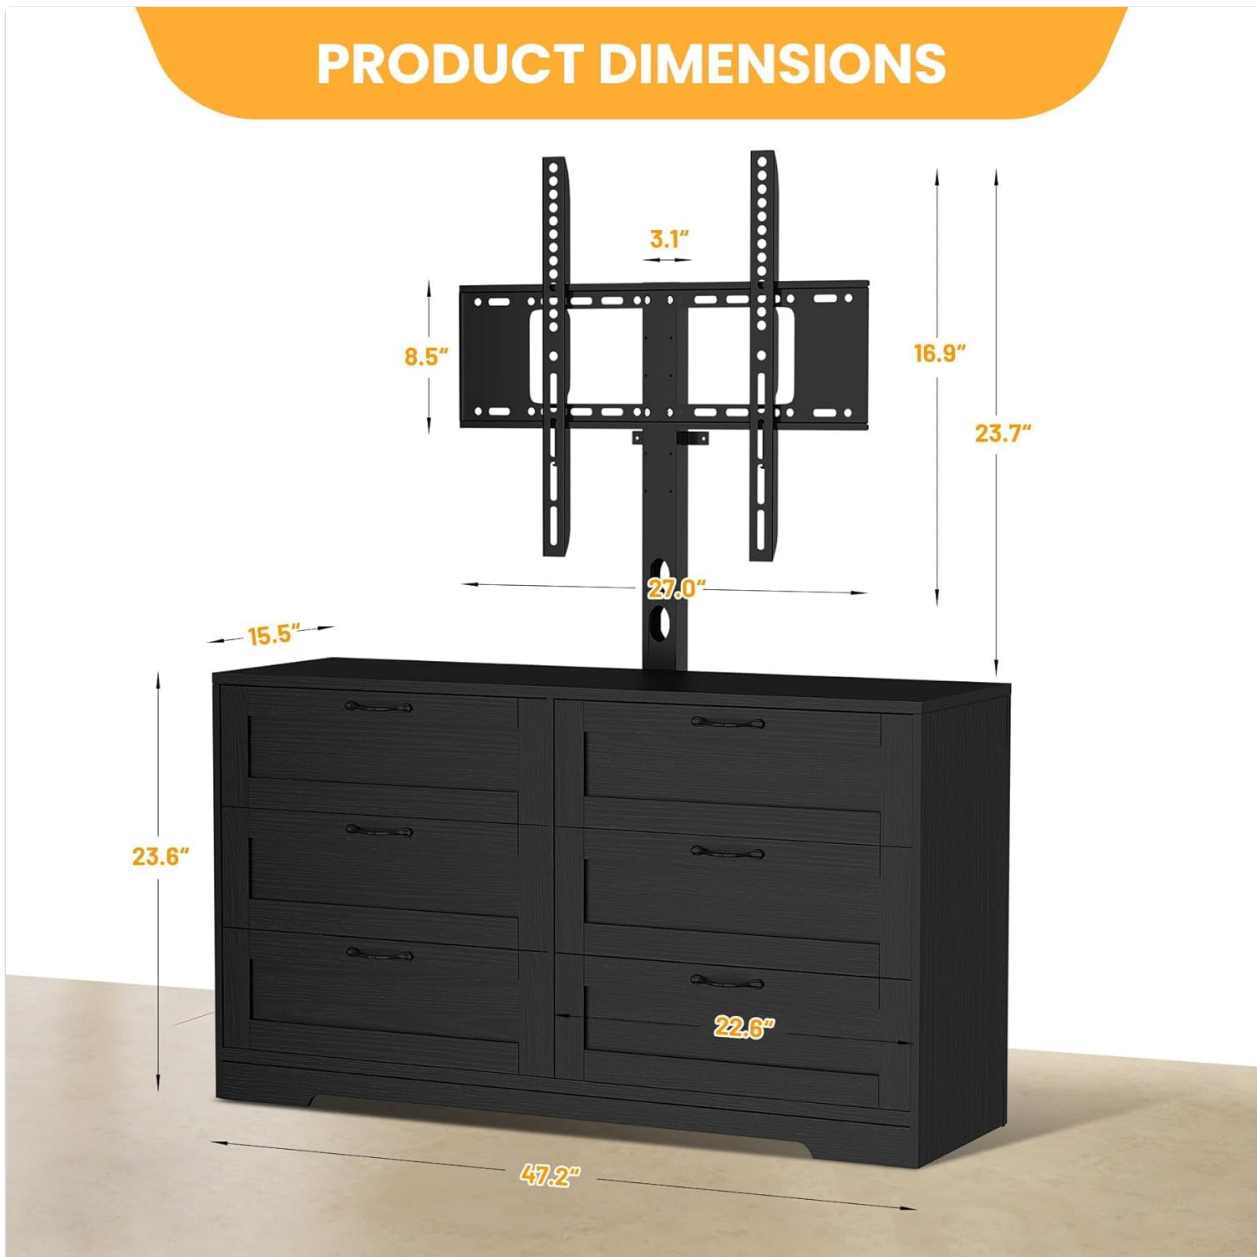


Figure 1: Overall dimensions of the TV stand with mount.

4. Assembling and Securing the TV Mount Bracket

Assemble the TV mount bracket and attach it to the central post. This bracket is designed to securely hold your television. Ensure all connections are tight and stable. The reinforced thickened steel crossbars are crucial for securing the TV.

STRENGTHEN EVERY DETAIL



Figure 2: Detail of the TV mount bracket and reinforced crossbars.

5. Mounting the Television

Carefully attach your television to the assembled mount bracket. Ensure the TV is centered and securely fastened. It is recommended to have assistance when mounting larger televisions.

6. Cable Management

Utilize the cable management holes located on the back of the stand to route and organize your TV and media device wires. This helps maintain a neat and visually appealing setup.

OPERATING INSTRUCTIONS

Adjusting TV Height

The TV mount features a 3-level height adjustment mechanism. To adjust the viewing height, carefully loosen the securing bolts on the mount post, slide the TV to your desired height between 45.3 and 47.3 inches off the ground, and then securely tighten the bolts. Always ensure the TV is stable after adjustment.



Figure 3: Demonstrating the 3-level height adjustment for optimal viewing.

Utilizing Storage Drawers

The six wooden drawers provide ample storage. Open and close drawers using the handles. Avoid overloading drawers to ensure smooth operation and prevent damage to the drawer slides. The smooth drawer slides are designed for easy access to your stored items.

6 DRAWERS STORAGE




6 Drawers Storage

Sufficient for Classifying and Storing Different Items

Sturdy and Reliable TV Stand

The TV stand is integrated with the wooden cabinet, providing more stable support and protection

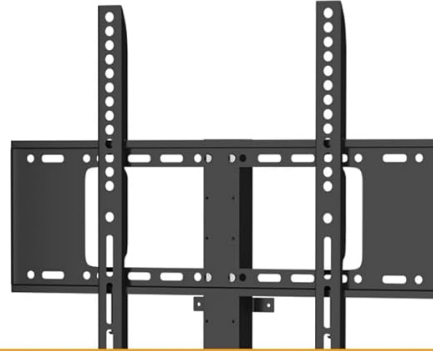

Smooth drawer slides



Waterproof wooden tabletop

Figure 4: Features of the TV stand, including storage drawers and waterproof tabletop.

MAINTENANCE

Cleaning

- For general cleaning, wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish of the wood and metal components.
- The wooden tabletop is waterproof; however, promptly wipe up any spills to prevent water damage.

Structural Integrity Check

- Periodically check all screws and fasteners on both the dresser and the TV mount to ensure they remain tight. Retighten if necessary.
- Ensure the TV mount remains stable and the TV is securely attached.

Drawer Maintenance

- If drawers become stiff, clean the drawer slides to remove any dust or debris.
- A small amount of silicone-based lubricant can be applied to the slides if needed, but avoid oil-based

lubricants which can attract dust.

TROUBLESHOOTING

- **TV feels unstable on the mount:**
 - a. Ensure all mounting screws and bolts are securely tightened.
 - b. Verify that your TV's weight and size are within the specified limits (up to 165 lbs, 35-85 inches).
 - c. Recheck the assembly steps for the TV mount post and bracket.
- **Drawers are difficult to open or close:**
 - a. Check if the drawers are overloaded. Remove some items if necessary.
 - b. Inspect the drawer slides for any obstructions or debris. Clean thoroughly.
 - c. Ensure the drawer slides are properly aligned and not bent.
- **Missing parts during assembly:**
 - a. Double-check all packaging materials. Small parts can sometimes be overlooked.
 - b. Contact customer support with your purchase details and the specific missing parts.

SPECIFICATIONS

Feature	Detail
Brand	PeakPursuit
Model Number	TV Stand with Mount and 6 Drawers
Number of Drawers	6
Compatible TV Sizes	35 to 85 inches
Maximum TV Load Capacity	165 lbs (75 kg)
Product Dimensions (L x W x H)	47.2 x 15.5 x 47.3 inches
Item Weight	88.4 pounds
Color	Black
Material	MDF (Medium-Density Fiberboard), Steel
Style	Modern
UPC / GTIN	822200702696

WARRANTY INFORMATION

Please refer to your purchase documentation or the seller's website for specific warranty details regarding this product. Typically, products come with a limited manufacturer's warranty covering defects in materials and workmanship for a specified period from the date of purchase. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your PeakPursuit

TV Stand, please do not hesitate to contact our customer support team. Refer to your purchase platform or the manufacturer's website for contact information.

When contacting support, please have your product model number (TV Stand with Mount and 6 Drawers) and purchase details readily available to facilitate a quicker resolution.