

Veehoo CWZP2520CPUS01

Veehoo Pop Up Dog Tent House Instruction Manual

Model: CWZP2520CPUS01

1. PRODUCT OVERVIEW

The Veehoo Pop Up Dog Tent House is a versatile and portable shelter designed for both indoor and outdoor use. It features a quick pop-up design for easy setup and collapse, providing a comfortable and secure space for your pet.

Key Features:

- **Multi-Use Design:** Suitable for indoor playpens or outdoor activities like camping and hiking.
- **Quick Set-up:** Innovative pop-up mechanism allows for instant deployment without tools.
- **Weatherproof Construction:** Made with 420D PU-coated waterproof and UV-resistant Oxford fabric, and 600D Oxford Fabric for durability.
- **Breathable & Stable:** High-density mesh panels ensure airflow, with roll-down curtains for privacy. Features a sturdy frame for stability.
- **Spacious Interior:** Provides ample room for large and extra-large dogs to stand, turn, and rest comfortably.



Image 1.1: Veehoo Pop Up Dog Tent House used indoors.

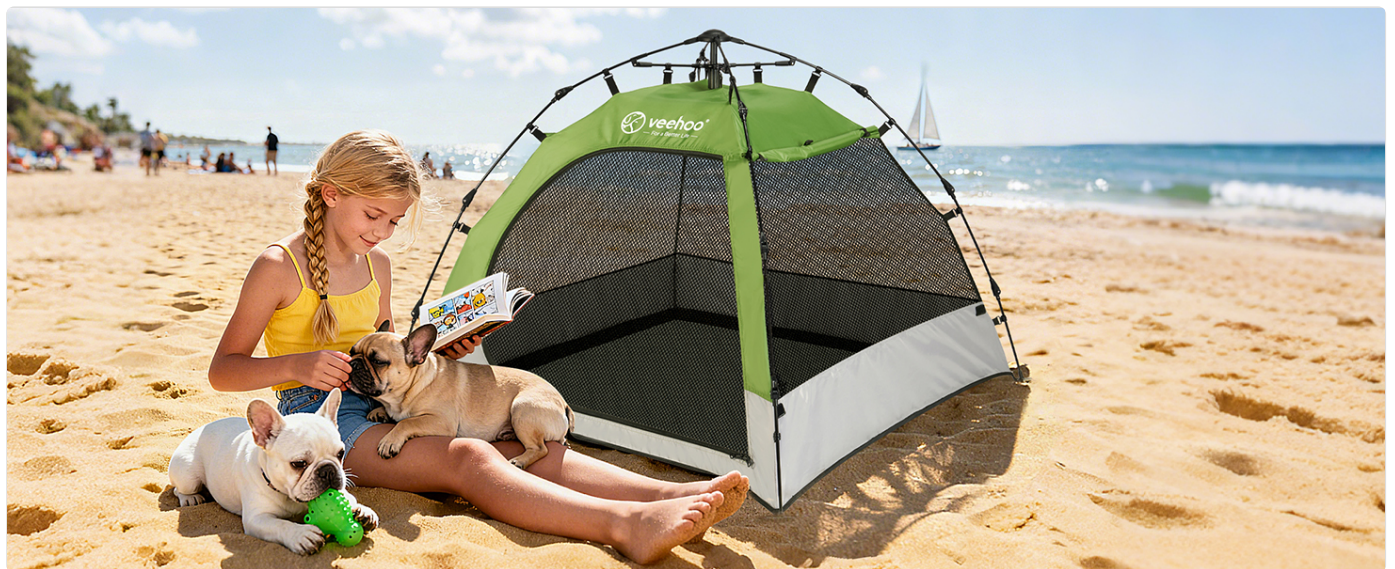


Image 1.2: Veehoo Pop Up Dog Tent House in an outdoor environment.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Pop Up Dog Tent House
- 1 x Soft Camping Mat
- 4 x Metal Stakes
- 1 x Travel Bag

What's in the Package?



4 X Metal Stakes



1 X Camping Mat



1 X Tent



1 X Carrying Bag

Image 2.1: Package contents of the Veehoo Pop Up Dog Tent House.

3. SETUP INSTRUCTIONS

3.1 Unfolding the Tent

1. Remove the tent from its travel bag.

2. Hold the tent by the central hub at the top.
3. Gently pull the tent outwards from the center. The tent's frame will automatically expand and lock into place.
4. Ensure all support bars are fully extended and locked to form the tent's structure.
5. Place the soft camping mat inside the tent.



**Large-sized Dogs
Up to 80 lbs**

Image 3.1: Pop-up mechanism for quick setup.



Image 3.2: Easy setup process.

3.2 Securing the Tent (Outdoor Use)

For outdoor use, secure the tent using the provided metal stakes:

1. Locate the loops at the base corners of the tent.
2. Insert a metal stake through each loop and firmly push it into the ground.
3. Ensure the tent is stable and resistant to wind.

4. OPERATING INSTRUCTIONS

4.1 Ventilation and Privacy

The tent features multi-sided, high-density mesh panels for optimal airflow. For increased privacy or protection from elements, the curtains can be rolled down and secured.

Pop Up Dog Tent



Image 4.1: Adjustable roll-up windows for ventilation or privacy.

4.2 Indoor and Outdoor Use

This tent is designed for flexible use:

- **Indoor:** Provides a cozy and familiar space for your pet within your home.
- **Outdoor:** Offers shelter during camping, hiking, or backyard activities. The waterproof and UV-resistant fabric protects against rain and sun.

5. MAINTENANCE AND CARE

5.1 Cleaning the Tent Fabric

The tent is constructed from durable, weatherproof Oxford fabric. To clean:

- Wipe down the fabric with a damp cloth and mild soap.
- Rinse thoroughly with clean water.
- Allow the tent to air dry completely before folding and storing to prevent mildew.



Outdoor Pet House



Dog Tent Outside



Dog Camping Tent

Image 5.1: Waterproof fabric detail.


5.2 Cleaning the Camping Mat

The soft camping mat is designed for easy cleaning:

- Shake off any loose debris or pet hair.
- Wipe the mat with a damp cloth and mild detergent.
- For deeper cleaning, the mat can be hand-washed.
- Allow to air dry completely before placing back in the tent or storing.



Waterproof

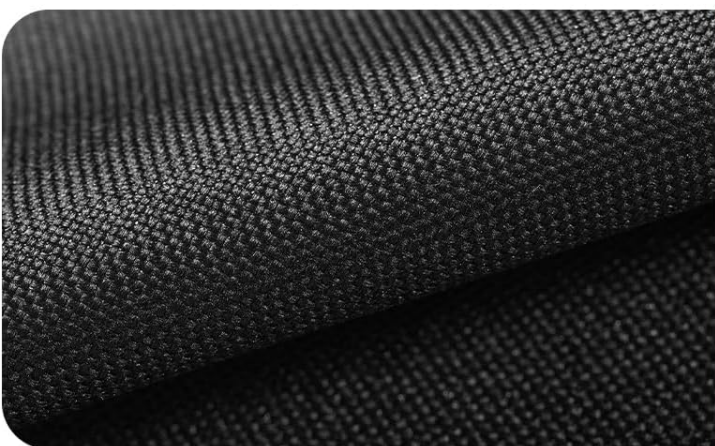

**Scratch
Resistant**



Portable



Image 5.2: Soft camping mat, easy to clean.

6. FOLDING AND STORAGE

To collapse and store the tent:

1. **Remove Accessories:** Take out the floor pad and any other items from inside the tent.
2. **Close Openings:** Ensure all door and window covers are closed.
3. **Collapse Frame:** Press both top nodes (the central hub) simultaneously to initiate the collapse.
4. **Fold Legs:** Bend in the bottom joint attached to each foot, then push in the upper joint. Fold each bottom leg towards the center, positioning the foot to the side of the poles.
5. **Gather Poles:** Lay the central fabric over one of the folded poles, then bring the other poles towards the center. This step may require some practice. You might find it easier to hold the partially folded tent against you while tucking up the poles, ensuring the feet do not obstruct the folding process.
6. **Secure Tent:** Roll the tent to tuck in any extra fabric. Use a strap or rope (not included, but often comes with similar

products) to keep it tightly folded.

7. **Prepare Mat:** Fold the floor pad in half. Place the folded tent on the pad and roll them together.

8. **Store:** Slide the rolled tent and mat into the provided travel bag.



**Large-sized Dogs
Up to 80 lbs**

Image 6.1: Collapsing the tent by pressing the central hub.

7. TROUBLESHOOTING

7.1 Difficulty Folding the Tent

If you encounter difficulty collapsing the tent, consider the following:

- **Ensure Proper Release:** Make sure both top nodes (the central hub) are pressed simultaneously and fully released to disengage the locking mechanism.
- **Systematic Folding:** Follow the folding steps in Section 6 precisely. The process requires a specific sequence of

bending and gathering the poles.

- **Practice:** The folding mechanism may require a few attempts to master. Practice opening and closing the tent a few times to become familiar with the process.
- **Avoid Force:** Do not apply excessive force, as this can damage the frame. If resistance is met, re-evaluate the folding steps.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	CWZP2520CPUS01
Product Dimensions (L x W x H)	47.2" x 47.2" x 37.4"
Weight	7.3 pounds
Material	420D PU-coated Waterproof & UV-resistant Oxford Fabric, 600D Oxford Fabric
Color	Grass Green
Closure Type	Pop-up
Included Components	Tent, Soft Mat, 4 Metal Stakes, Travel Bag

Dog House Indoor



Sturdy Frame



**Durable
Oxford Fabric**



**Mesh Vent
Window**



**Smooth-Gliding
Zipper**

Image 8.1: Product dimensions.

9. WARRANTY INFORMATION

Veehoo products are manufactured to high-quality standards. For specific warranty details, please refer to the product packaging or contact the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For further assistance, questions, or concerns regarding your Veehoo Pop Up Dog Tent House, please contact the retailer or visit the official Veehoo website for support information. Please have your model number (CWZP2520CPUS01) available when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question