

CROSSHIP Folding Wagon Cart with Drop-Down Tailgate

CROSSHIP Folding Wagon Cart with Drop-Down Tailgate - User Manual

Model: Folding Wagon Cart with Drop-Down Tailgate

1. INTRODUCTION

Thank you for choosing the CROSSHIP Folding Wagon Cart. This versatile utility wagon is designed for easy transport of various items, featuring a robust construction, all-terrain wheels, and an innovative drop-down tailgate for extended capacity. Please read this manual carefully before use to ensure proper assembly, operation, and maintenance.

2. SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 330 lbs (150 kg).
- Ensure all wheels are securely attached and locked (if applicable) before loading or moving the wagon.
- Always maintain a firm grip on the handle when operating the wagon, especially on uneven terrain.
- Keep hands and feet clear of moving parts and folding mechanisms to prevent injury.
- Do not allow children to play in or around the wagon unsupervised.
- Avoid sharp turns at high speeds to prevent tipping.
- Distribute weight evenly within the wagon to maintain stability.
- Store the wagon in a dry, safe place when not in use.

3. PACKAGE CONTENTS

Upon opening the package, verify that all components are present and undamaged:

- Folding Wagon Frame with Fabric Liner
- Base Plate / Removable Bottom Pad
- All-Terrain Wheels (4x)
- Adjustable Handle
- Storage Cover (if included)
- User Manual

120L STANDARD CAPACITY

Ideal For Daily Essentials & Family Trips

Secure Storage

150L EXTENDED CAPACITY

Perfect For Tent Poles Awnings & Fishing Rods

41.3" Max Length

Tailgate 90° (Ramp Mode)

120L STANDARD LOAD

150L MAX CAPACITY

MULTIPURPOSE LOADING SOLUTIONS

Image: The CROSSHIP Folding Wagon Cart demonstrating its standard 120L capacity and extended 150L capacity with the tailgate lowered, suitable for longer items like tent poles and fishing rods.

4. SETUP AND ASSEMBLY

Follow these steps to set up your CROSSHIP Folding Wagon Cart:

1. **Unpack the Wagon:** Carefully remove the folded wagon and all components from its packaging.

2. **Attach the Wheels:**

Locate the four wheels. For the front wheels, press the red button on the wheel assembly and insert the wheel into the designated slot on the wagon frame until it clicks securely into place. Repeat for all four wheels. Ensure they are firmly attached.

Your browser does not support the video tag.

Video: Detailed steps for installing the wheels and setting up the cart. This video demonstrates the process of attaching the wheels and unfolding the wagon for use.

3. **Unfold the Wagon:**

Gently pull the sides of the wagon apart until the frame is fully extended. Push down on the center of the wagon's base to flatten it completely.

4. **Insert the Base Plate:**

Place the removable base plate firmly into the bottom of the wagon to provide a stable and flat surface for your items.

5. **Attach the Fabric Liner:**

Secure the fabric liner to the frame using the integrated fasteners (e.g., Velcro straps or clips) to ensure it is taut and ready for use.

6. **Adjust the Handle:**

Extend the adjustable handle to your desired height. Press the release button on the handle to adjust its length and angle for comfortable pulling.



Image: Illustration of the innovative 3-stage tailgate settings, demonstrating how to fasten, release, and gently push the buckles to lower the tailgate for ramp mode or extended length.

5. OPERATING INSTRUCTIONS

5.1 Loading the Wagon

- Place items evenly in the wagon to prevent imbalance.
- For heavy items, load them first and center them over the wheels.
- Utilize the side pockets for smaller items like water bottles or tools.

5.2 Using the Drop-Down Tailgate

The wagon features a versatile drop-down tailgate for increased capacity or easier loading:

1. **Standard Use:** Keep the tailgate fastened with the short buckles on both sides.

2. **Extended Capacity (Flat):** Release the short buckles and undo the Velcro strap. The tailgate will lower automatically, extending the wagon's length for long items.
3. **Ramp Mode:** Gently push the long buckles with both hands to lower the tailgate to the ground, creating a ramp for pets or easier loading of heavy objects.

5.3 Engaging/Disengaging Wheel Locks

The wagon's wheels are equipped with locks for stability when stationary:

- **To Lock:** Press down on the red brake pedal located on the rear wheels until it clicks.
- **To Unlock:** Lift the red brake pedal upwards until it releases.

Your browser does not support the video tag.

Video: Demonstration of a folding cart with swivel wheels and a side door. This video illustrates various operational aspects, including wheel movement and potential side access.



Image: Close-up view of the all-terrain, no-sink wide wheels of the CROSSHIP Folding Wagon Cart, highlighting their extra grip and stability for various surfaces.

6. MAINTENANCE

- **Cleaning:** The 1680D Oxford fabric liner is removable and easy to clean. Wipe down the metal frame with a damp cloth. For stubborn dirt, use mild soap and water. Ensure all parts are dry before folding and storing.
- **Storage:** To fold the wagon for storage, remove the base plate, pull the central loop upwards to collapse the frame, and secure it with the integrated strap. Store in a cool, dry place away from direct sunlight.
- **Wheel Care:** Periodically check the wheels for debris or damage. Clean as needed to ensure smooth operation.



Image: The CROSSHIP Folding Wagon Cart demonstrating its compact folded size for easy trunk organization and storage, shown alongside its full size.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold or fold smoothly.	Mechanism is stiff or obstructed.	Ensure no fabric or debris is caught in the folding mechanism. Apply light lubricant to hinges if necessary.
Wheels are difficult to attach or detach.	Release button not fully pressed or alignment issue.	Ensure the red release button is fully depressed. Align the wheel shaft correctly with the slot. Some models may have protective caps over the wheel slots that need to be removed first.
Wagon feels unstable or tips easily.	Uneven weight distribution or overloaded.	Distribute load evenly. Do not exceed the maximum weight capacity. Avoid sharp turns.
Handle does not adjust.	Release button stuck or mechanism jammed.	Check for obstructions around the handle's adjustment mechanism. Press the release button firmly.

8. SPECIFICATIONS

Feature	Detail
Brand	CROSSHIP
Product Dimensions (D x W x H)	71.1 x 43.2 x 35.6 cm (28 x 17 x 14 inches)
Material	Alloy Steel, 1680D Oxford Fabric
Color	Black
Maximum Weight Capacity	330 lbs (approx. 150 kg)
Volume Capacity	130 L (standard), 150 L (extended with tailgate down)
Wheel Type	All-terrain, Swivel (front wheels)
Handle Adjustment Range	68 cm - 90 cm

Feature	Detail
Special Features	Adjustable Handle, Integrated Cup Holder, Foldable, Compact, Durable, Easy Assembly, Ergonomic Handle, Removable Side, Rounded Corner, Telescopic Handle, Drop-Down Tailgate

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt for warranty claims.