

[Manuals.plus](#) /

› [Litheli](#) /

› Litheli U04VP01-0J020 Cordless Stick Vacuum Cleaner User Manual

## Litheli U04VP01-0J020

# Litheli U04VP01-0J020 Cordless Stick Vacuum Cleaner User Manual

Model: U04VP01-0J020

## 1. INTRODUCTION

---

Thank you for purchasing the Litheli U04VP01-0J020 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before use and retain it for future reference.



軽量890g

2WAY

4種ノズル付属

モバイルバッテリー  
BH-U4 が電源になる  
コードレス  
スティッククリーナー

Figure 1.1: Litheli U04VP01-0J020 in use, highlighting its cordless design and battery compatibility.

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using this appliance:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Exercise extra care when cleaning on stairs.
- Disconnect the battery pack before making any adjustments, changing accessories, or storing the appliance.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

### 3. PACKAGE CONTENTS

---

Carefully unpack your Litheli U04VP01-0J020 and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Main Vacuum Unit
- Extension Pipe
- Floor Head
- Mini Floor Brush
- Crevice Tool (Flat Suction Brush)
- Dust Mite Removal Head
- Mop Cloth
- Wall Mount Bracket
- User Manual
- *Note: The BH-U4 Mobile Battery is sold separately.*

## 付属アクセサリ



フロアヘッド

本体と延長管、フロアヘッドを組み合わせて、床面を掃除し、吸引とモップ掛けを同時に行います。



ダニ除去ヘッド

シーツ、カバー、ソファの毛髪、フケ、ダニなどを掃除します。



ミニフロアブラシ

隅や角の埃を掃除するために使用します。



扁平吸引ブラシ

本体と組み合わせて、部分的な清掃に使用します。延長管と組み合わせて、高所や手の届きにくい隙間を掃除します。



モップ布

床の拭き掃除に使用可能。



延長管

ハンディスタイルとスティックスタイルに換装が可能。

Figure 3.1: Included accessories: Floor Head, Dust Mite Removal Head, Mini Floor Brush, Flat Suction Brush, Mop Cloth, and Extension Pipe.

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Litheli U04VP01-0J020 Cordless Stick Vacuum Cleaner.

# モバイルバッテリーで 広がるキレイ空間

軽やかに、  
すみずみまで

## Stick Cleaner

スティッククリーナー  
U04VP01-0J020



専用電源

モバイルバッテリー BH-U4

モバイルバッテリー BH-U4は別売りです



Figure 4.1: Main components of the Litheli U04VP01-0J020 stick vacuum cleaner.

## Key Components:

- **Main Unit:** Contains the motor, dust cup, and control buttons.
- **Dust Cup:** 0.3L capacity for collecting dust and debris.
- **HEPA Filter:** High-efficiency particulate air filter for trapping fine dust.
- **Extension Pipe:** Connects the main unit to the floor head or other attachments for extended reach.
- **Floor Head:** For general floor cleaning. Features 180° horizontal and 90° vertical rotation for maneuverability.
- **BH-U4 Mobile Battery (Sold Separately):** Provides power to the vacuum cleaner.

## 5. SETUP

---

### 5.1. Battery Installation and Charging

1. Ensure the BH-U4 Mobile Battery (sold separately) is fully charged before first use.
2. Align the charged BH-U4 battery with the battery slot on the main vacuum unit.
3. Gently push the battery into the slot until it clicks securely into place.
4. To remove the battery, press the release button and slide the battery out.
5. The BH-U4 battery can be charged using its dedicated charger or compatible portable power sources.

# U4 SMART LINK 対応家電製品の電源は モバイルバッテリー BH-U4

※BH-U4は別売りです



電源となる  
モバイルバッテリー  
BH-U4は  
ワンタッチで着脱

充電済みの予備バッテリーがあれば  
交換することで継続して使用できます

取り外したモバイルバッテリー BH-U4  
は家庭用電源で充電が可能

※ポータブル電源BN-RL410 / BN-RL230でも充電可能です



Figure 5.1: Battery insertion, removal, and charging methods.

## 5.2. Assembling the Vacuum Cleaner

1. Attach the desired cleaning head (e.g., Floor Head, Dust Mite Removal Head) to one end of the Extension Pipe. Ensure it clicks firmly into place.
2. Attach the other end of the Extension Pipe to the main vacuum unit. Ensure it clicks firmly into place.
3. For handheld use, attach accessories directly to the main vacuum unit without the extension pipe.

## 6. OPERATING INSTRUCTIONS

---

### 6.1. Power On/Off and Mode Selection

1. Ensure the battery is installed and charged.
2. Press the power button on the main unit to turn the vacuum cleaner ON. It will start in the default cleaning mode.
3. Press the mode selection button to switch between the two available suction modes (Low Speed / High Speed).
4. Press the power button again to turn the vacuum cleaner OFF.

### 6.2. Using Attachments

- **Floor Head:** Ideal for cleaning hard floors and carpets. Its flexible design allows easy maneuverability around furniture and into tight spaces.
- **Mini Floor Brush:** Suitable for smaller floor areas or delicate surfaces.
- **Crevice Tool (Flat Suction Brush):** Use for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or car seats.
- **Dust Mite Removal Head:** Designed for cleaning fabrics, upholstery, and mattresses to remove dust mites and allergens.
- **Mop Cloth:** Attach to the floor head for light mopping after vacuuming.



重量はわずか890g、  
片手でらくらくお掃除

軽量  
**890**  
g

コンパクト  
軽量設計

さまざまな角度で持ちやすいハンドル設計



## ノズルの角度自由自在

ヘッド部分は 横180°& 縦90° 角度調節可能。  
ソファやベッドの下など狭い場所もOK。



小回りがきくからソファの下など  
手の届きにくい場所もラクラク


Figure 6.1: Demonstrating the lightweight design and flexible cleaning head for reaching under furniture.

## 4種類のアクセサリーが付属 すき間掃除からフロア掃除までこれ1台で。

床掃除  
に



すき間掃除  
に

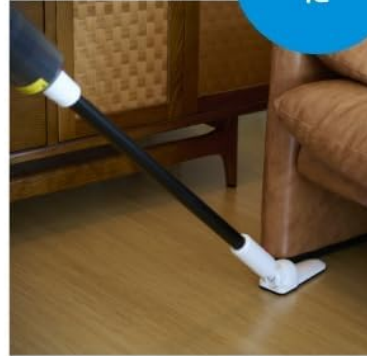

フロアヘッド ミニフロアノズル


布製品  
に



エアコン  
掃除に



ダニ除去ヘッド 扁平吸引ブラシ

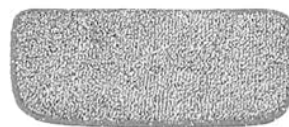

ヘッドにモップパッドを貼って、  
モップとしても使えます。  
掃除機&モップ両用可能です



フロア用もハンディも  
伸縮可能な  
2WAY仕様

Figure 6.2: Examples of accessory usage for different cleaning tasks.

### 6.3. Wall Mount Storage

The included wall mount bracket allows for convenient storage of your vacuum cleaner. Install the bracket in a suitable location, ensuring it is securely fastened to the wall. Hang the vacuum cleaner on the bracket when not in use.

## **7. MAINTENANCE**

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### **7.1. Emptying the Dust Cup**

1. Ensure the vacuum cleaner is turned OFF and the battery is removed.
2. Locate the dust cup release button and press it to detach the dust cup from the main unit.
3. Empty the contents of the dust cup into a waste bin.
4. Reattach the dust cup to the main unit, ensuring it clicks securely.

### **7.2. Cleaning the HEPA Filter**

1. Remove the dust cup as described above.
2. Carefully remove the HEPA filter from the dust cup.
3. Tap the filter gently to dislodge dust. For thorough cleaning, rinse the filter under running water.
4. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use the vacuum cleaner with a wet filter.
5. Replace the HEPA filter every 3-6 months, or as needed, depending on usage.

### **7.3. Cleaning Attachments**

Wipe down all attachments with a damp cloth. Ensure they are dry before reattaching them to the vacuum cleaner.

### **7.4. Battery Care**

The BH-U4 mobile battery features 12 protection functions for safety. Always charge the battery using the recommended charger. Store the battery in a cool, dry place when not in use. Avoid exposing the battery to extreme temperatures.

# モバイルバッテリーとして スマートフォンなどの充電にも使えます



## PSEマーク認証済

電気用品安全法の認証を受けた  
PSE 技術基準適合品です。



## 色で充電の状況がわかります



ランプ赤点滅  
バッテリー容量<100%



緑のランプ  
バッテリー容量100%

# 12の保護機能で安心と安全を実現 BMS(バッテリーマネジメントシステム)



温度  
保護



過充電  
保護



充電過電流  
保護



出力短絡  
保護



静電気  
保護



過放電  
保護



充電不足電圧  
保護



電池短絡  
保護



充電過電圧  
保護



出力過電流  
保護



出力過電圧  
保護



PSE  
認証  
済み

PSE認証(日本の電気製品安全認証)をクリア。  
BMS保護機能でバッテリーの熱暴走や発火リスクを大幅に軽減。

Figure 7.1: BH-U4 battery features, including its use as a power bank and safety protections.

## 8. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, refer to the following table for common problems and

solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not installed correctly Battery is discharged	Ensure battery is securely clicked into place Charge the BH-U4 battery
Low suction power	Dust cup is full Filter is clogged Attachment/pipe is blocked	Empty the dust cup Clean or replace the HEPA filter Check and clear any blockages in the attachments or extension pipe
Vacuum turns off unexpectedly	Battery is low Overheating protection activated	Recharge the BH-U4 battery Turn off the vacuum, remove the battery, and allow it to cool down for 30 minutes before resuming use
Attachments not staying on	Not properly attached	Ensure attachments are clicked firmly into place

If the problem persists after trying these solutions, please contact Litheli customer support.

## 9. SPECIFICATIONS

Feature	Specification
Model	U04VP01-0J020
Brand	Litheli
Type	Cordless Stick Vacuum Cleaner
Suction Power	10000 Pa (Max)
Motor Type	Brushless Motor
Cleaning Modes	2 (Low Speed / High Speed)
Filter Type	HEPA Filter
Dust Cup Capacity	0.3 L
Weight	0.89 kg (Main Unit)
Battery Compatibility	Litheli BH-U4 Mobile Battery (Sold Separately)
Storage	Wall Mountable

## 10. WARRANTY AND SUPPORT

Litheli products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Litheli website. If you have any questions, require technical assistance, or need to report a problem, please contact Litheli customer support through their official channels.

Please have your model number (U04VP01-0J020) and purchase details ready when contacting support.