

MZK ET2603

MZK ET2603 Pressure Washer User Manual

Model: ET2603 | Brand: MZK

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your MZK ET2603 Pressure Washer. Please read this manual thoroughly before operating the unit and retain it for future reference. Proper understanding and adherence to these instructions will ensure optimal performance and extend the lifespan of your pressure washer.

Important Safety Information: Always wear appropriate personal protective equipment, including eye protection, when operating the pressure washer. Ensure all connections are secure before starting the unit. Do not direct the spray at people, animals, or electrical equipment.

2. PRODUCT OVERVIEW AND COMPONENTS

The MZK ET2603 is a compact and lightweight electric pressure washer designed for various cleaning tasks around the home. It features a powerful 2100 PSI motor, a built-in carry handle for portability, and a detachable foam cannon for enhanced cleaning.

Key Features:

- **High Pressure Output:** Delivers up to 2100 PSI for effective cleaning.
- **Portability:** Super compact and lightweight at 18 pounds with a built-in carry handle and 4 swivel wheels for easy transportation.
- **Extended Reach:** Equipped with a 21 FT hose and a 17 FT power cord.
- **Versatile Water Source:** Can draw water from both a faucet and a bucket.
- **Detachable Foam Cannon:** For applying detergent and enhancing cleaning power.
- **Pro-Style Steel Wand:** Durable and efficient for various cleaning applications.
- **Integrated Storage:** Features a power cord hook and nozzle holder.
- **Safety Switch:** Prevents accidental activation, ensuring safe operation.



Figure 1: MZK ET2603 Pressure Washer with its main components including the unit, high-pressure hose, spray wand, and foam cannon.

3. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts listed in the product manual (not included here) are present and undamaged.
2. **Attach High-Pressure Hose:** Connect one end of the high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Ensure connections are hand-tight and secure.
3. **Attach Spray Wand:** Insert the pro-style steel wand into the spray gun and twist until it locks into place.
4. **Connect Water Supply:**
 - **From Faucet:** Connect a standard garden hose (not included) to the water inlet on the pressure washer. Ensure the garden hose is free of kinks and has a steady water supply.
 - **From Bucket:** If using a bucket, ensure the bucket is placed above the pressure washer for gravity feed. Submerge the garden hose end into the bucket, ensuring it remains submerged during operation. The pressure washer is designed to draw water from a bucket, but a consistent supply is crucial.

- 5. **Connect Power:** Plug the 17 FT power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements specified for the unit.
- 6. **Prime the Pump:** Before turning on the power, turn on the water supply fully and squeeze the trigger on the spray gun to allow air to escape and water to flow through the system until a steady stream emerges. This primes the pump and prevents damage.

4. OPERATING INSTRUCTIONS

- 1. **Starting the Unit:** After priming the pump, ensure the safety switch is in the 'OFF' position. Turn the main power switch to 'ON'. The motor will start.
- 2. **Engaging the Spray:** Point the spray gun at the cleaning surface. Squeeze the trigger to begin spraying. The safety switch must be disengaged for the unit to operate.
- 3. **Using the Detachable Foam Cannon:**
 - Fill the foam cannon reservoir with an appropriate pressure washer detergent.
 - Attach the foam cannon to the spray gun.
 - Adjust the foam cannon nozzle for desired foam thickness.
 - Spray the detergent onto the surface. Allow it to dwell for a few minutes (refer to detergent instructions) before rinsing.
- 4. **Cleaning Applications:**
 - **Cars/RVs/Boats:** Use a wide spray pattern or the foam cannon for detergent application, then rinse thoroughly from top to bottom. Maintain a safe distance to avoid paint damage.
 - **Fences/Patios/Decks:** Start with a wider spray pattern and gradually move closer to remove dirt and grime. Test on an inconspicuous area first.
 - **Driveways/Concrete/Sidewalks:** Use a more concentrated spray for tough stains. Work in small sections, overlapping slightly.
- 5. **Stopping the Unit:** Release the trigger. Turn the main power switch to 'OFF'. Disconnect the power cord from the outlet. Turn off the water supply. Squeeze the trigger to release any remaining pressure in the system.

5. MAINTENANCE

After Each Use:

- **Drain Water:** Ensure all water is drained from the pump, hose, and spray gun to prevent freezing and damage. Run the unit for a few seconds with the water supply off and trigger squeezed until no more water comes out.
- **Clean Nozzles:** Remove any debris from the nozzle tips.
- **Clean Foam Cannon:** Rinse the foam cannon reservoir thoroughly with clean water.
- **Wipe Down:** Clean the exterior of the pressure washer with a damp cloth.

Storage:

Store the pressure washer in a dry, frost-free environment. Utilize the power cord hook and nozzle holder for organized storage. Avoid storing in direct sunlight or extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	No power to the unit; Safety switch engaged; Power switch off.	Check power outlet and circuit breaker; Ensure safety switch is disengaged; Turn power switch to 'ON'.

Problem	Possible Cause	Solution
Low or no pressure	Insufficient water supply; Air in the pump; Clogged nozzle; Kinked garden hose.	Ensure water supply is fully open; Prime the pump (see Setup); Clean nozzle; Straighten garden hose.
Water leaks	Loose connections; Damaged O-rings.	Tighten all hose connections; Inspect and replace damaged O-rings if necessary.
Motor runs intermittently	Air in the system; Water supply issues.	Prime the pump; Check water supply for consistency.

7. SPECIFICATIONS

Specification	Value
Brand	MZK
Model Number	ET2603
Maximum Pressure	2100 PSI (Pound per Square Inch)
Power Source	AC Electric
Item Weight	18 Pounds
Hose Length	21 Feet
Power Cord Length	17 Feet
Product Dimensions (L x W x H)	11.02" x 7.68" x 11.02"
Color	Khaki

8. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or contact MZK customer support directly. If you encounter any issues not covered in the troubleshooting section or require further assistance, please reach out to MZK customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question