

[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 3 Seat Porch Swing with Stand Instruction Manual Model 84A-396V00TN

## Outsunny 84A-396V00TN

# Outsunny 3 Seat Porch Swing with Stand Instruction Manual

Model: 84A-396V00TN

## INTRODUCTION

---

Thank you for choosing the Outsunny 3 Seat Porch Swing with Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read all instructions carefully before assembly and retain this manual for future reference.



Image: The Outsunny 3 Seat Porch Swing with Stand, featuring a family enjoying the swing in a garden setting.

## SAFETY INFORMATION

---

**WARNING:** Failure to follow these safety instructions may result in serious injury or property damage.

- Ensure all parts are present and undamaged before assembly. Do not attempt to assemble if any parts are missing or damaged.
- Assemble the swing on a flat, level surface.
- Do not exceed the maximum weight capacity of 726 lbs (330 kg).
- Keep children and pets away from the assembly area.
- Regularly inspect all bolts, nuts, and connections for tightness. Tighten as necessary.
- Do not stand on the swing or use it for purposes other than intended seating.
- Avoid using the swing in extreme weather conditions (strong winds, heavy rain, snow).
- Always ensure the swing is stable before use.

## PACKAGE CONTENTS

---

Before beginning assembly, verify that all components listed below are present and in good condition. Refer to the assembly diagram for part identification.

- Wooden Frame Components (A-frame legs, top beam, support bars)
- Swing Seat Components (backrest, seat base, armrests)
- Cushion (1x)
- Side Trays (2x)
- Metal Chains (6x, various lengths)
- Safety Carabiners
- Hardware Pack (bolts, nuts, washers, screws, tools)
- Instruction Manual (this document)

## SETUP AND ASSEMBLY

---

Assembly typically requires two adults. Follow the steps below carefully. It is recommended to lay out all parts on a soft, clean surface to prevent scratches.

1. **Assemble the A-Frame Stands:** Connect the A-frame legs using the provided bolts and nuts. Ensure all connections are secure but do not fully tighten until the entire frame is assembled.
2. **Attach the Top Beam:** Securely attach the top beam to the assembled A-frame stands. This forms the main support structure for the swing.
3. **Assemble the Swing Seat:** Connect the backrest, seat base, and armrests to form the swing seat. Ensure all slats are properly aligned.
4. **Attach Side Trays:** Mount the two side trays to the A-frame stands at the desired height using the designated hardware.
5. **Hang the Swing Seat:** Attach the metal chains to the swing seat and then to the top beam of the stand using the safety carabiners. The chains come in three lengths to allow for height adjustment. Refer to the "Adjustable Height" image for guidance.
6. **Final Tightening:** Once all components are assembled, carefully check and fully tighten all bolts and nuts.
7. **Place Cushion:** Position the thick padded cushion onto the swing seat.

# ADJUSTABLE HEIGHT

You can adjust the angle and height by changing the position of the chains



Seat Height: 16.1" -23.2"

Image: Illustration demonstrating how to adjust the swing seat height by changing the chain positions.

Your browser does not support the video tag.

Video: An official product video demonstrating the assembly and features of the Outsunny Swing Bench.

## OPERATING INSTRUCTIONS

The Outsunny Porch Swing is designed for comfortable outdoor relaxation. Follow these guidelines for optimal use:

- **Seating:** The swing is designed to comfortably seat up to 3 people. Ensure weight is distributed evenly.
- **Swing Motion:** Gently push off the ground with your feet to initiate a smooth swinging motion. Avoid excessive force or aggressive swinging.
- **Side Trays:** Utilize the integrated side trays for holding beverages, books, or small personal items. Do not place heavy objects on the trays.
- **Adjusting Height:** The swing height can be adjusted by repositioning the metal chains on the top beam. Ensure the swing is empty and stable before making any adjustments. Always use the safety carabiners to secure the chains.

# COMFORTABLE BENCH

Armrests

Tilted Backrest

Sloped Seat

Extra Soft Cushion

Image: Detailed view of the swing bench, showing ergonomic features like armrests, tilted backrest, sloped seat, and the extra soft cushion for comfort.



Image: A user demonstrating the convenience of the side trays for holding drinks and snacks while relaxing on the swing.

## MAINTENANCE

---

Regular maintenance will extend the life and ensure the safety of your Outsunny Porch Swing.

- **Cleaning:**

- *Wood Frame:* Wipe the fir wood frame with a damp cloth and mild soap. Rinse thoroughly and dry immediately to prevent water damage. Avoid harsh chemicals.
- *Cushion:* The cushion can be spot cleaned with a mild detergent and water. Allow to air dry completely. Store indoors during inclement weather or prolonged periods of non-use.
- *Metal Chains:* Wipe down metal chains with a damp cloth. Ensure they are dry to prevent rust.

- **Wood Care:** The carbonized fir wood is sealed with an environmentally safe clear varnish. To maintain its appearance and resistance to moisture, cracking, and outdoor wear, reapply a suitable outdoor wood sealant annually or as needed, especially if the swing is exposed to harsh elements.

- **Hardware Inspection:** Periodically check all bolts, nuts, and connections for tightness. Tighten any loose hardware to ensure stability and safety.
- **Chain Inspection:** Inspect the metal chains and carabiners for any signs of wear, rust, or damage. Replace any compromised components immediately.
- **Winter Storage:** During winter months or extended periods of non-use, it is recommended to store the swing indoors or cover it with a protective outdoor furniture cover to prolong its lifespan.

## TROUBLESHOOTING

| Problem                            | Possible Cause                                    | Solution                                                                                   |
|------------------------------------|---------------------------------------------------|--------------------------------------------------------------------------------------------|
| Swing feels unstable or wobbly.    | Loose hardware; uneven ground.                    | Check and tighten all bolts and nuts. Ensure the swing is placed on a flat, level surface. |
| Squeaking noise during swinging.   | Friction in chain connections or frame joints.    | Apply a small amount of silicone lubricant to the chain connections and frame joints.      |
| Wood appears faded or dry.         | Exposure to sun and weather; sealant wearing off. | Clean the wood and reapply an outdoor wood sealant or varnish.                             |
| Difficulty adjusting swing height. | Chains are stuck or carabiners are stiff.         | Ensure the swing is empty. Check for any obstructions. Lubricate carabiners if necessary.  |

## SPECIFICATIONS

|                                |                                                  |
|--------------------------------|--------------------------------------------------|
| Model Number                   | 84A-396V00TN                                     |
| Overall Dimensions (W x D x H) | 95.7" x 52.8" x 66.9" (243 cm x 134 cm x 170 cm) |
| Seat Dimensions (W x D x H)    | 60.2" x 24.8" x 20.9" (153 cm x 63 cm x 53 cm)   |
| Adjustable Seat Height Range   | 16.1" - 23.2" (41 cm - 59 cm)                    |
| Weight Capacity                | 726 lbs (330 kg)                                 |
| Material                       | Fir Wood, Polyester (cushion)                    |
| Color                          | Carbonized Brown                                 |
| Assembly Required              | Yes                                              |



Image: Technical drawing illustrating the full dimensions of the Outsunny 3 Seat Porch Swing with Stand.

## WARRANTY AND SUPPORT

**Warranty:** This Outsunny product comes with a 1-year warranty against manufacturer defects. Please retain your proof of purchase for warranty claims.

**Customer Support:** For any questions regarding assembly, missing parts, or product operation, please contact Outsunny customer service. Refer to the contact information provided with your purchase or visit the official Outsunny website for support.

Manufacturer: Aosom LLC



