

Indesit IN2FE13DT9W

INDESIT IN2FE13DT9W Dishwasher User Manual

Model: IN2FE13DT9W | Brand: Indesit

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Indesit IN2FE13DT9W freestanding dishwasher. Please read these instructions carefully before installation and operation to ensure optimal performance and to prevent damage to the appliance or injury to yourself.

The Indesit IN2FE13DT9W is designed for household use, offering a capacity of 13 place settings. It features a white finish and button controls for ease of use.

2. SAFETY INFORMATION

- Always disconnect the appliance from the power supply before performing any maintenance or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate the dishwasher if the power cord or plug is damaged. Contact qualified service personnel for repair.
- Sharp items should be loaded with their points and sharp edges down in the cutlery basket to avoid injury.
- Only use detergents and rinse aid specifically designed for automatic dishwashers.

3. INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Check the appliance for any transport damage. If damaged, do not install or operate the dishwasher; contact your retailer.

3.2 Positioning

The Indesit IN2FE13DT9W is a freestanding dishwasher. Place the appliance on a firm, level floor. Ensure there is

adequate space around the dishwasher for proper ventilation and door opening. Do not place the dishwasher near heat sources.

Dimensions: Depth 60 cm x Width 59 cm x Height 85 cm.

3.3 Water Connection

- Connect the water inlet hose to a cold water supply tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- The drain hose should be connected to a suitable drain pipe or placed over the edge of a sink, ensuring it is securely fastened to prevent displacement during operation. The drain hose should not be kinked or obstructed.

3.4 Electrical Connection

- Ensure the voltage and frequency of your power supply match the ratings on the appliance's rating plate (220 Volt).
- Plug the dishwasher into a properly grounded electrical outlet. Do not use extension cords or multiple adapters.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

For optimal cleaning results, load dishes correctly. Scrape off large food particles before loading. Avoid overcrowding the racks to allow water to reach all surfaces.



Image: Indesit IN2FE13DT9W Dishwasher with door open, showing upper and lower racks loaded with dishes. The upper rack is for smaller items like cups and glasses, while the lower rack holds larger plates and pots, along with a cutlery basket.



Image: Close-up of the lower dishwasher rack, loaded with plates and cutlery basket. Plates are arranged vertically in the tines, and cutlery is placed in the designated basket.

4.2 Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid securely.
- Check the rinse aid dispenser level. If low, refill with rinse aid. The dishwasher features an integrated rinse aid dispenser.

4.3 Selecting a Program

Use the control panel buttons to select the desired wash program. Available cycle options include:

- **Automatic Program:** Automatically adjusts wash cycle based on soil level.
- **Rinse:** A short rinse cycle for pre-washing or refreshing dishes.

4.4 Starting a Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected program. The program indicator light will illuminate.

4.5 Ending a Cycle

At the end of the cycle, an audible signal may sound, and the program indicator light will turn off. Wait a few minutes before opening the door to allow dishes to cool and dry.

5. MAINTENANCE AND CARE

5.1 Cleaning the Filters

Regularly clean the filter system located at the bottom of the dishwasher tub. Remove the coarse filter, fine filter, and microfilter. Rinse them under running water to remove food particles. Reassemble and replace them correctly.

5.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any debris from the holes using a thin object like a toothpick.

5.3 Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Dishwasher does not start:** Ensure the door is fully closed, the power cord is plugged in, and the circuit breaker has not tripped.
- **Poor cleaning results:** Check if dishes are loaded correctly, spray arms are not blocked, filters are clean, and sufficient detergent is used.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filters.
- **Excessive noise:** Ensure dishes are not rattling against each other or hitting the spray arms. Check for foreign objects in the tub.

7. SPECIFICATIONS

Feature	Specification
Model Number	IN2FE13DT9W
Installation Type	Freestanding
Capacity	13 Place Settings
Dimensions (D x W x H)	60 cm x 59 cm x 85 cm
Color	White
Controls Type	Button
Noise Level	32 Decibel
Voltage	220 Volt
Cycle Options	Automatic Program, Rinse
Special Feature	Rinse Aid Dispenser
Item Weight	38 Kilograms

8. WARRANTY INFORMATION

This Indesit IN2FE13DT9W dishwasher comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal household use. It does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs.

For detailed terms and conditions, please refer to the warranty card provided with your appliance or contact Indesit customer service.

9. CUSTOMER SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require technical assistance, please contact Indesit customer support. Have your appliance model number (IN2FE13DT9W) and serial number ready when you call.

For service requests or spare parts, always use authorized service centers and genuine spare parts to ensure the

safety and performance of your appliance.